

PRI Codes

The following messages only appear if System/PRN and ISDN/Events Layer1 are enabled :-

PRN: Falc slip
PRN: Slot A slip (412)
PRN: Slot B slip (412)
PRN: Clock: excursion
PRN: Falc unlocked
PRN: Falc: excursion
PRN: Falc locked
PRN: Isac: excursion

The following messages are output when ISDN/Events/Layer1 only is set :-

ISDNL1Evt: v=[line_no.] peb=[hardware device no.], [new L1 state] [old L1 state]

Where BRI L1 state value is as follows :-

Value	Message
F1	Inactive
F2	Sensing
F3	Deactivated
F4	awaiting signal
F5	identifying input
F6	synchronized
F7	activated
F8	lost framing

ISDNL1Evt: v=[line_no.] peb=[hardware device no.], [message]

Where BRI L1 sates value is as follows :-

Message	Description
PHAI	Physical Activate Indication (i.e. Line is UP)
PHDI	Physical Deactivate Indication (Line is DOWN)
T3TO	T3 timeout has occurred
TxEr	A Transmit error has occurred
UnLocked	The IP Office is not able to lock its clock to this line.
Locked	The IP Office and the clock extracted from this line are locked together.