

Avaya IP Office Essential Force Message Waiting LED On/Off Telquest Tech Support

To change the state of the Message Waiting LED on another phone:

Turn On

Short Code = *93*N# (or what ever you use as a shortcode)

Feature = Display Msg

Telephone Number = N"; Msgs=1"

Turn off

Short Code = *94*N# (or what ever you use as a shortcode)

Feature = Display Msg

Telephone Number = N"; Msgs=0"

To change the state of the Message Waiting LED on your own phone:

Turn On

Short Code = *95 (or what ever you use as a shortcode)

Feature = Display Msg

Telephone Number = U"; Msgs=1"

Turn Off

Short Code = *96 (or what ever you use as a shortcode)

Feature = Display Msg

Telephone Number = U"; Msgs=0"

NOTE : there is a space between the ; and Msgs