

IP Office Essential

Sending SMDR to the Serial Port

Create a user named DTEDefault , no extension number or anything and put the following as a Source Number AT%CCID=5

Reboot IP Office and connect your PC to the DTE port of the IP Office, .

Start Hyperterminal with the settings "38400,8,N,1" and the IPO will output all events to the serial port like this :

```
CALL: 5.1.1 State=0 Cut=1 Music=0.0 Aend="Line 5" (2.1) Bend="" [] (0.0) CalledNum=123456789  
()CallingNum=0987654321 () Internal=0 Time=0 AState=0
```

The Aend is the user dialing a number or a incoming trunk and the Bend is the outgoing trunk or receiving user.

