

IP Office Release 8.0

Embedded Voicemail Installation Guide

© 2011 AVAYA All Rights Reserved.

Notice

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, Avaya Inc. can assume no liability for any errors. Changes and corrections to the information in this document may be incorporated in future releases.

Documentation Disclaimer

Avaya Inc. is not responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya.

Link Disclaimer

Avaya Inc. is not responsible for the contents or reliability of any linked Web sites referenced elsewhere within this Documentation, and Avaya does not necessarily endorse the products, services, or information described or offered within them. We cannot guarantee that these links will work all of the time and we have no control over the availability of the linked pages.

License

USE OR INSTALLATION OF THE PRODUCT INDICATES THE END USER'S ACCEPTANCE OF THE TERMS SET FORTH HEREIN AND THE GENERAL LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE AT

http://support.avaya.com/LicenseInfo/ ("GENERAL LICENSE TERMS"). IF YOU DO NOT WISH TO BE BOUND BY THESE TERMS, YOU MUST RETURN THE PRODUCT(S) TO THE POINT OF PURCHASE WITHIN TEN (10) DAYS OF DELIVERY FOR A REFUND OR CREDIT.

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone Products or pre-installed on Hardware. "Hardware" means the standard hardware Products, originally sold by Avaya and ultimately utilized by End User.

License Type(s): Designated System(s) License (DS).

End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

Third-Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information identifying Third Party Components and the Third Party Terms that apply to them is available on Avaya's web site at: http://support.avaya.com/ThirdPartyLicense/

Avaya Fraud Intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. Suspected security vulnerabilities with Avaya Products should be reported to Avaya by sending mail to: securityalerts@avaya.com. For additional support telephone numbers, see the Avaya Support web site (http://www.avaya.com/support).

Trademarks

Avaya and the Avaya logo are registered trademarks of Avaya Inc. in the United States of America and other jurisdictions. Unless otherwise provided in this document, marks identified by "®," "TM" and "SM" are registered marks, trademarks and service marks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

Documentation information

For the most current versions of documentation, go to the Avaya Support web site (http://www.avaya.com/support) or the IP Office Knowledge Base (http://marketingtools.avaya.com/knowledgebase/).

Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your contact center. The support telephone number is 1 800 628 2888 in the United States. For additional support telephone numbers, see the Avaya Web site: http://www.avaya.com/support.

Contents

1.	IP Office Embedded Voicemail	
1.1	Mailbox Features	. 7
	What's New	
1.3	Languages Supported	10
2.	Installing Embedded Voicemail	
2.1	IP500 Installation	15
2.2	IP500v2 Installation	15
2.3	Upgrading Prompts	16
2.4	Enabling Embedded Voicemail	17
2.5	Removing Memory Cards	18
3.	User Mailbox Configuration	
3.1	Voicemail Email Integration	23
3.2	User Announcements	24
4.	Hunt Group Mailbox Configuration	
	Message Waiting Indication	29
	Hunt Group Mailbox Access	
	Announcements	
5.	Auto Attendant Configuration	
5.1	Create an Auto Attendant	35
5.2	Recording Prompts	37
5.3	Routing Incoming Calls to an Auto Attendant	38
5.4	Transferring Calls to an Attendant	39
5.5	Using Auto Attendant to Access Voicemail	41
5.6	Using Named Announcement Files	42
5.7	Dial by Name	43
6.	Miscellaneous	
6.1	Remote Mailbox Access	46
6.2	Monitoring Embedded Voicemail	47
6.3	Button Programming	48
6.4	Visual Voice	49
6.5	Short Codes	50
Inde	ЭХ	.51

Chapter 1. IP Office Embedded Voicemail

1. IP Office Embedded Voicemail

For IP Office Release 8.0, embedded voicemail is supported by IP Office 500 and IP500v2 control units. Embedded voicemail provides basic voicemail mailbox operation and auto-attendant operation without requiring a separate voicemail server PC.

Embedded Voicemail uses the following components:

- · Memory Card
 - The type of memory card used depends on the type of IP Office control unit. However, in all cases, the cards are specially formatted by Avaya. Alternate third-party memory cards are not supported for Embedded Voicemail.
 - IP Office 500 Control Units
 - These controls units require an optional Avaya Compact Flash memory card to be installed in order to use embedded voicemail.
 - IP500v2 Control Units
 - This type of control unit uses the mandatory System SD card installed in all IP500v2 systems for embedded voicemail if required.
- IP Office Manager Application
 - Embedded Voicemail is configured using options in the IP Office configuration using the IP Office Manager application.

Notes

- Other Voicemail Servers
 - Embedded Voicemail cannot be used in conjunction with another voicemail server, for example IP Office Voicemail Pro server. The presence of another voicemail server on the same network can cause Embedded Voicemail to fail to operate correctly and vice versa.
- IP Office Essential Edition PARTNER Version and IP Office Essential Edition NORSTAR Version This guide is for embedded voicemail on IP Office in IP Office mode. It does not cover IP Office Essential Edition PARTNER Version, IP Office Essential Edition NORSTAR Version or IP Office Essential Edition Quick Version.

1.1 Mailbox Features

The IP Office system automatically creates an embedded voicemail mailbox for every user and hunt group in the IP Office configuration.

For users, the mailbox is automatically used to answer calls to the user that ring unanswered for the user's configured No Answer Time. The mailbox is also used in other situations where the IP Office would have otherwise returned busy tone, for example when the user is set to Do Not Disturb.

For hunt groups, the mailbox is used when a call has rung for the group's Voicemail Answer Time.

- For security, a voicemail access code can be assigned to any mailbox. This can be changed by the mailbox user or the system administrator.
- For user mailboxes, message waiting indication is provided to the user's IP Office phone extension and to their IP Office user application (Phone Manager or one-X Portal).
- For hunt group mailboxes, message waiting indication can be assigned to specified users.
- Various dialling short codes 50 can be used to control voicemail features and for actions such as collecting messages, leaving messages, turning voicemail on/off.

Embedded Voicemail System Comparison

Feature	IP500 Control Units	IP500v2 Control Unit
Memory Type	512MB Compact Flash.	4GB SDHC Card
Compression Method	Uses G711. VCM not required.	Uses G711. VCM not required.
Storage	15 Hours.	25 Hours. 15 Hours by default. An additional 5 hours is added for each 2 additional channels licensed below.
Maximum Simultaneous Connections	4 Channels. Not adjustable.	6 Channels maximum. 2 Channels by default. Additional channels require licenses.
Maximum Individual Message Length	Default 120 seconds. Adjustable between 3 and 180 seconds.	Default 120 seconds. Adjustable between 3 and 180 seconds.
Auto Attendant	Yes	Yes

Embedded Voicemail Installation Guide
IP Office Release 8.0

1.2 What's New

What's New in IP Office Release 8.0

For Avaya IP Office Release 8, system administrators can select the operating mode for voicemail. The operating mode determines the features available, and also determines the commands used to access each feature.

The options for the operating mode are:

- IP Office mode
 - This mode provides the same functionality that was supported in previous releases.
- Intuity mode

This mode, which is available on IP500v2 systems, provides additional voicemail features.

For information about the supported features and how to access them, see the *Embedded Voicemail User Guide* for each operating mode.

1.3 Languages Supported

Embedded Voicemail supports a range of language prompt sets. The following languages are supported for Embedded Voicemail.

Language	IP Office mode	Intuity mode
Arabic (ara)	y	J
Arabic-Bahrain (arh)		V
Arabic-Egypt (are)		J
Arabic-Kuwait (ark)		<i>J</i>
Arabic-Oman (aro)		J
Arabic-Qatar (arq)		J
Chinese-Cantonese (zhh)	v	J
Chinese-Mandarin (chs)	y	1
Danish (dan)	v	J
Dutch (nld)	√	,
Dutch–Belgium (nlb)		•
English UK (eng)	v	<i>y</i>
English US (enu)	√	V
Finnish (fin)	√	<i>,</i>
French (fra)	√	,
French—Belgium (frb)		,
French–Canadian (frc)	√	,
French-Morocco (arm)		J
French-Switzerland (frs)		•
German (deu)	y	J
German-Switzerland (des)		y
Italian (ita)	✓	1
Italian-Switzerland (its)		J
Korean (kor)	✓	J
Norwegian (nor)	v	y
Portuguese (ptg)	y	
Portuguese-Brazilian (ptb)	<u></u>	J

Russian (rus)	>	
Spanish (esp)	>	
Spanish-Argentina (ess)	>	
Spanish-Chile (esl)		>
Spanish-Mexico (esm)	>	
Swedish (sve)	>	

The IP Office system Locale setting is used to determine the default language prompts used. A Locale setting is set for the whole IP Office system. For individual users and incoming call routes the system local can be overridden.

For calls to voicemail, the locale used is determined as follows:

- The user locale, if set, is used if the caller is internal.
- The incoming call route locale, if set, is used if caller is external.
- If no user or incoming call route locale is applicable, the system locale is used.
- A short code locale, if set, is used and overrides the options above if the call is routed to voicemail using the short code.

Fallback languages

If a selected Locale is not supported, EVM uses a fallback language. The fallback language is used depends on the configuration mode used by the IP Office server (Standard, Partner, Quick, or Norstar).

If your voicemail configuration requires a locale that has not been downloaded to the IP Office server, a warning message displays to indicate which locale is missing. If you do not add the locales, Manager will use the fallback languages listed in the table below.

Locale selected in Manager	Fallback Languages in Standard / Norstar configuration mode	Fallback Languages in Quick and Partner configuration modes
Arabic (ara)	eng > enu	enu > eng
Argentina (ess)	esp > eng > enu	esp > enu > eng
Bahrain (arh)	ara > eng > enu	ara > enu > eng
Belgium–French (frb)	fra > frc > eng	fra > frc > enu
Belgium–Dutch (nlb)	nld > eng > enu	nld > enu > eng
Brazilian Portuguese (ptb)	pt > eng > enu	pt > enu > eng
Chile (esl)	esm > esp > enu	esm > esp > enu
Chinese-Cantonese (zzh)	eng > enu	enu > eng
Chinese–Madarin (chs)	eng > enu	enu > eng
Colombia (eso)	esm > esp > enu	esm > esp > enu
Danish (dan)	eng > enu	enu > eng

Dutch (nld)	eng > enu	enu > eng
Egypt (are)	ara > eng > enu	ara > enu > eng
English UK (eng)	enu	enu
English US (enu)	eng	eng
Finnish (fin)	eng > enu	enu > eng
French (fra)	frc > eng > enu	frc > enu > eng
French Canadian (frc)	fra > enu > eng	fra > enu > eng
German (deu)	eng > enu	enu > eng
Italian (ita)	eng > enu	enu > eng
Korean (kor)	eng > enu	enu > eng
Kuwait (ark)	ara > eng > enu	ara > enu > eng
Latin Spanish (esm)	esp > enu > eng	esp > enu > eng
Morocco-French (arm)	fra > frc > eng	fra > frc > enu
Norwegian (nor)	eng > enu	enu > eng
Oman (aro)	ara > eng > enu	ara > enu > eng
Peru (esr)	esm > esp > enu	esm > esp > enu
Polish (pl)	eng > enu >	enu > eng
Portuguese (ptg)	ptb > eng > enu	ptb > enu > eng
Qatar (arq)	ara > eng > enu	ara > enu > eng
Russian (rus)	eng > enu >	enu > eng
Spanish (esp)	esm > eng > enu	esm > enu > eng
Swedish (sve)	eng > enu	enu > eng
Switzerland-French (frs)	eng	enu
Switzerland-German (des)	deu > eng > enu	deu > enu > eng
Switzerland-Italian (its)	ita > eng > enu	ita > enu > eng
Venezuela (esv)	esm > esp > enu	esm > esp > enu

Chapter 2. Installing Embedded Voicemail

2. Installing Embedded Voicemail

The installation process can be divided into the following steps:

1. Embedded Voicemail Installation

The physical installation of the memory card. This process varies according to the IP Office control unit type.

- IP500 Control Unit 15
- IP500v2 Control Unit

No hardware installation is needed for IP500v2 control units as they use the already installed mandatory System SD card for embedded voicemail.

2. <u>Upgrade Prompts</u> 16

A set of prompts are provided on Embedded Voicemail memory cards supplied by Avaya. If you need prompts that are not provided on your existing card, you can add any additional prompts that are required for new features.

3. Enable Embedded Voicemail 17

Set the IP Office to use Embedded Voicemail and set the maximum record time for messages, greetings and prompts.

4. <u>User Mailbox Configuration</u> 20

Configure the personal settings for individual users.

5. Hunt Group Mailbox Configuration 28

Configure the settings for any hunt groups where voicemail is required. This includes configuring message waiting indication and mailbox access which are not enabled by default.

6. Auto Attendant Configuration 34

Setup any required auto-attendant services and associate them with incoming call routes.

2.1 IP500 Installation

The following instructions detail the process for installing Embedded Voicemail for an IP500 system.

- 1. Check that the following requirements have been met.
 - Hardware:
 - IP Office control unit.
 - Avaya supplied Embedded Voicemail Memory Card (512MB Compact Flash).
 - IP Office Administrator Applications CD matching the software release of the IP Office system.
 - · Configuration:
 - PC, connected to the IP Office network with the IP Office Manager application installed.
- 2. Install the Memory Expansion Card

The memory card is a Type II Compact Flash memory card. Only a card supplied by Avaya can be used for embedded voicemail. Compact Flash cards from other sources cannot be used for embedded voicemail.

- Insert the memory card into the C/F TII card slot. Insert the card with the memory card label upwards.
- 3. Upgrade the Prompts 16h

The prompts on the Embedded Voicemail memory card can now be upgraded to match the software level of the IP Office.

4. Enable Embedded Voicemail 17

For new and defaulted systems embedded voicemail is enabled by default.

2.2 IP500v2 Installation

The following instructions detail the process for installing Embedded Voicemail for an IP500 system.

1. Upgrade the Prompts 16

The prompts on the Embedded Voicemail memory card can now be upgraded to match the software level of the IP Office.

2. Enable Embedded Voicemail 17

For new and defaulted systems embedded voicemail is enabled by default.

3. Add Embedded Voicemail Licenses

If more that 2 channels are required, the licenses for the additional channels up to a total of 6 channels should be added.

2.3 Upgrading Prompts

Embedded voicemail memory cards are normally supplied with the prompt files pre-installed.

When you install a new System SD card in IP Office 500v2 systems, or upgrade an existing card, a default set of languages is loaded on the card. You can use the Add/Display VM Locales button on the System > Voicemail tab to select additional language prompt sets to upload. For example, when you upgrade to a new release of IP Office, it is possible that new features require additional prompts. Click the button to launch a list of available languages. Languages that are already on the card are greyed-out.

The Add/Display VM Locales button displays on active systems only, and is not available for offline configuration. This button displays only when you select Embedded Voicemail as the Voicemail Type.

You can also reload languages that are already installed on the System SD card. For example, you can reload languages if new prompts have been added in a maintenance release. To reload the existing languages, upgrade the system (File | Advanced | Upgrade) with Upload System Files option checked. You can also choose Upload System Files from the Embedded File Management utility (File | Advanced | Embedded File Management).

All the prompts for Embedded Voicemail are found in the *LVMSound* folder in the installation package for IP Office Administrator Applications.

Checking the Prompt Sets

The additional embedded voicemail features added in new IP Office releases require new prompts. Missing prompts can be reported in IP Office System Monitor by enabling the trace options Filters | System | Error. Error messages are output at regular intervals.

```
158267586mS ERR: EVM 4p0 upgrade file clips missing
158267587mS ERR: EVM 4p2 upgrade file clips missing
158267592mS ERR: EVM 5p0 upgrade file clips missing
```

Transferring the Prompt Files Using IP Office Manager

- 1. Start IP Office Manager.
- 2. Select File | Advanced | Embedded File Management.
- 3. Use the Select IP Office menu to select the required IP Office system.
- 4. The next step will depend on the type of IP Office control unit:
 - IP500 Control Units
 Select File | Upload Voicemail Prompts. This will transfer the prompt files installed with IP Office Manager to the memory card.
 - IP500v2 Control Units
 Select File | Upload System Files. This will transfer the the prompts files installed with IP Office Manager and
 the IP Office firmware files. Do not do this if the level of IP Office Manager software is not appropriate for the IP
 Office system.

2.4 Enabling Embedded Voicemail

The system configuration for embedded voicemail is common to all the IP Office systems that support it. This option is enabled by default and needs to be disabled if not using embedded voicemail.

In IP500v2 systems, you can choose whether embedded voicemail operates in IP Office mode, or in Intuity mode. In new installations of embedded voicemail in Partner, Norstar, or Quick modes, the default operating mode for voicemail is Intuity mode. For new installations of embedded voicemail in Standard configuration mode, the default operating mode for voicemail is IP Office mode. You can switch between modes without losing user data, such as passwords, greetings, or messages.

To configure an IP Office for Embedded Voicemail:

- 1. This process requires the IP Office system to be rebooted to complete the process. That will end all current calls and operation for a period of up to 5 minutes.
- 2. Open IP Office Manager and receive the IP Office configuration.
- 3. Select System.
- 4. Click the Voicemail tab.
- 5. From the Voicemail Type list, select Embedded Voicemail.
- 6. From the Voicemail Mode list, select either IP Office Mode or Intuity Mode.
- 7. Set the Maximum Record Time for messages and prompts to the value required by the customer. The allowable range is 30 to 180 seconds with 110 seconds as default.
- 8. View the System tab.
 - The Locale setting should match the language for spoken prompts required from the Embedded Voicemail. When you configure embedded voicemail, the prompts and tones used by the voicemail system are determined by the locale setting. When the IP Office system routes a call to voicemail, it indicates the locale so that prompts are available based on the languages associated with that locale. The system indicates the locale to the voicemail server based on the following settings:
 - short codes related to voicemail, auto attendant, and record message features (User | ShortCodes) and (UserRights | ShortCodes)
 - the incoming call route when the destination is set to voicemail or auto-attendant (Incoming Call Route | Standard |Locale)
 - user settings for internal calls (User | User | Locale)
 - the system locale is used by voicemail if no user or incoming call route is set (System | System | Locale)

A set of default locales are available on the IP Office server. The locales that are available by default depend on the configuration mode that you are using. If your voicemail configuration requires a locale that has not been downloaded to the IP Office server, a warning message displays to indicate which locale is missing. Click the warning to open a window and follow the prompts to add the locales. You can also download the locales from the System menu (System | Voicemail) or from the File menu (File | Advanced). If you do not add the locales, EVM will use the fall back locale; for more information, see Languages Supported 10.

- 9. Click OK to save the voicemail system changes.
- 10. Click In to send the configuration change back to the control unit.
- 11. Once the IP Office system has restarted, from an extension on the system dial *17. The embedded voicemail should answer and start to give you prompts.

2.5 Removing Memory Cards

The memory card should never be removed from the system during normal IP Office operation. Doing so can cause the corruption of files in use. Either the memory card or the whole IP Office system must be shutdown before removing a memory card.

Whilst the card is shutdown, voicemail is not available to the IP Office system. Any other services that use the memory card will also be disabled. For IP500v2 systems, features licensed by the card will continue for up to 2 hours while the card is not present.

Once a memory card has been removed, reinserting the memory card will restart it.

Memory Card Shutdown Using IP Office Manager

- 1. In IP Office Manager, select Start | Advanced | Memory Card Command | Shutdown. For IP500v2 systems select the System SD card.
- 2. Check that the LED for the memory card slot has been extinguished. The card can now be removed.
- 3. To restart the card without removing and reinserting it, select Start | Advanced | Memory Card Command | Startup.

Memory Card Shutdown Using the IP Office System Status Application

- 1. In System Status, select System | Memory Cards. For IP500v2 systems select the System SD card.
- 2. Select Shutdown.
- 3. Check that the LED for the memory card skit has been extinguished. The card can now be removed.
- 4. To restart the card without removing and reinserting it, select Startup.

Chapter 3. User Mailbox Configuration

3. User Mailbox Configuration

Embedded Voicemail creates a mailbox for each user on the IP Office system. Calls are routed to the mailbox whenever the user's extension is busy or does not answer within the users allocated no answer time. This includes calls that are forwarded to another internal destination.

An individual user's mailbox can be configured either through the mailbox and system short codes (refer to the Embedded Voicemail User Guide) or by configuring the user settings in the IP Office Manager.

• Message Waiting Indication

If supported by the user's current phone, the user will receive message waiting indication whenever their mailbox contains new messages. The type of message waiting indication will depend on the telephone.

Mailbox Access

The standard default short code (*17) can be used to access an extensions associated user mailbox. Other methods of mailbox access can be configured.

• For IP Office 4.2+, the MESSAGES button on phones, which normally emulates *17, can be configured to access Visual Voice mode on phones that can support Visual Voice 49. This is done using the Messages Button Goes To Visual Voice (System / Voicemail) option.

Ringback

Embedded Voicemail can be set to ring the user whenever they have new messages in their mailbox. This ringback is triggered the completion of a call at the user's extension. Ringback from a hunt group mailbox containing new messages can also occur if the user is configured to receive hunt group message waiting indication.

Voicemail On/Off

The sending of calls to the user's mailbox can be switched off. Note however that this does not stop other methods of leaving messages directly in the user's mailbox.

· Access Code

An access code can be assigned to the mailbox. Anyone accessing the mailbox must first enter this code, before they can collect messages. The access code can be reset by the user once they are in their mailbox.

• Voicemail Reception & Breakout Numbers

Setting a Voicemail Reception number for a user, allows callers leaving a message in their mailbox to dial *0 to be transferred to that number. If used this feature should be announced in the mailbox greeting prompt. Two transfer numbers can also be entered. The user can record a message stating that the caller can press *2 or *3 to transfer to the specified telephone numbers.

Announcements

IP Office 4.0+ allows Embedded Voicemail to provide announcements to calls waiting to be answered by users. This is similar to the announcements provided for https://pubm.nih.groups.gr/] with announcements being played to callers waiting to be answered. Due to the overlap of various timeouts, the use of user announcements is not recommended in conjunction with forwarding and voicemail.

• Voicemail Email

IP Office 4.2+. A user can have notification of new messages sent to your their address. The notification can be a simple alert to tell them that they have a new message or the voicemail message can be sent if required. See Voicemail Email Integration 29.


WARNING: Changing User Names

Mailboxes are created based on each user's unique user name within the IP Office configuration. Changing a user name will associate that user with a new mailbox. If you need to change a user name, ensure that the user has played and deleted all messages first. If a user name is changed without clearing the original mailbox, you must create a short code based on the old user name in order to access the old mailbox.

To change voicemail configuration for an individual:

A symbol indicates that the setting can also be set and locked through user rights. For details refer to the IP Office Manager documentation.

- 1. Open IP Office Manager and receive the IP Office configuration.
- 2. In the Navigation pane click User and select the individual user.
- 3. View the Voicemail tab.

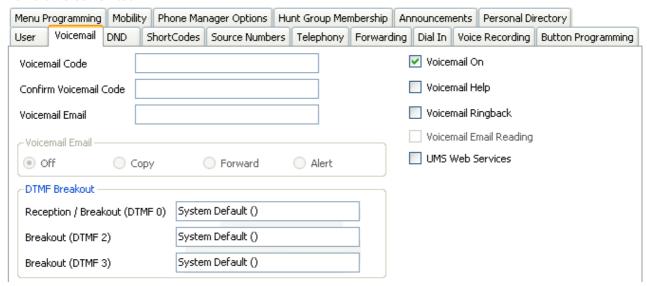

- Voicemail Code: Default = Blank, Range = 0 (no code) to 15 digits.
 A code (1-15 digits) used to validate access to the mailbox. If remote access is attempted to a mailbox that has no voicemail code set, the prompt "Remote access is not configured on this mailbox" is played.
 - The mailbox user can change the code by dialing *04 after having entered the mailbox.
- Voicemail On Default = On

When on, the mailbox is used by the IP Office to answer the user's unanswered calls or calls when the user's extension would have otherwise returned busy. Note that selecting off does not disable use of the user's mailbox. Messages can still be forward to their mailbox. The mailbox can also still be accessed to collect messages.

- Voicemail Help Default = Off
 This setting is not used for embedded voicemail. Help can be accessed by dialing *4 after accessing the mailbox.
 - Voicemail Ringback: Default = Off When enabled and a new message has been received, the voicemail server calls the user's extension to attempt to deliver the message each time the telephone is put down. Voicemail will not ring the extension more than once every 30 seconds.
 - Voicemail Email Reading: *Default = Off*This setting is not used for embedded voicemail.
 - UMS Web Services: *Default = Off, Software level = 4.2+.* This setting is not used for embedded voicemail.
- Voicemail Email: *Default = Blank (No voicemail email features)*This field is used to set the user or group email address used for <u>voicemail email operation</u> ²³. When an address is entered, the additional Voicemail Email controls below are selectable.
- Voicemail Email Default = Off

If an email address is entered for the user or group, the following options become selectable. These control the mode of automatic voicemail email operation provided by the voicemail server whenever the voicemail mailbox receives a new voicemail message.

- Off
 - If off, none of the options below are used for automatic voicemail email. Users can also select this mode by dialing *O3 from their extension.
- Copy

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a copy of the message is attached to an email and sent to the email address. There is no mailbox synchronization between the email and voicemail mailboxes. For example reading and deletion of the email message does not affect the message in the voicemail mailbox or the message waiting indication provided for that new message.

Forward

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, that message is attached to an email and sent to the email address. No copy of the voicemail message is retained in the voicemail mailbox and their is no message waiting indication. As with Copy, their is no mailbox synchronization between the email and voicemail mailboxes. Users can also select this mode by dialing *01 from their extension.

Alert

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a simple email message is sent to the email address. This is an email message announcing details of the voicemail message but with no copy of the voicemail message attached. Users can also select this mode by dialing *02 from their extension.

DTMF Breakout

When a caller is directed to voicemail to leave a message, they can be given the option to be transferred to a different extension. The mailbox greeting message needs to be recorded telling the caller the options available. The extension numbers that they can be transferred to are entered in the fields below.

- For IP Office 5.0+, system default values can be set for these numbers and are used unless a different number is set within these user settings. Also for IP Office 5.0+, these values can be set using User Rights.
- Reception / Breakout (DTMF 0)

The number to which a caller is transferred if they press $^*\mathcal{O}$ while listening to the mailbox greeting rather than leaving a message.

- Breakout (DTMF 2)
 - The number to which a caller is transferred if they press *2 while listening to the mailbox greeting rather than leaving a message.
- Breakout (DTMF 3)

The number to which a caller is transferred if they press *3 while listening to the mailbox greeting rather than leaving a message.

- 4. Click OK to save the voicemail changes for the user.
- 5. Amend any other user details, then save and merge the configuration changes.

3.1 Voicemail Email Integration

Voicemail Email features with Embedded Voicemail is supported. This uses the IP Office system's SMTP settings to send messages to the customer's email server. That server then forwards those messages into the user email mailboxes.

Once enabled, users can select to have a email alert about each new voicemail message or to have the voicemail message forwarded to their email mailbox. In addition when listening to a message in their voicemail mailbox they can forward it to their email mailbox.

Warning

The sending of .wav files across a network creates a high loading on the network and networks servers. A one-minute message requires a 1MB .wav file.

- 1. Note that changing the IP Office's SMTP settings requires the system to be restarted.
- 2. Obtain details of the customer's SMTP email server. You can configure a user account on that server in order for it to accept and relay emails from the IP Office.
- 3. Using IP Office Manager, receive the IP Office system configuration.
- 4. Select System and then the SMTP tab.
- 5. Enter the details to match the customer SMTP server.
 - IP Address

The IP address of the customer's SMTP server. If not on the same subnet as the IP Office LAN, an IP route must also be added.

Port

The SMTP listening port of the server. The default is 25.

- · Email From Address
 - This is the address that will be used by the IP Office. Some servers will only relay messages from recognized full addresses or addresses in the same domain.
- Server Requires Authentication
 If the server requires a user account to receive and send emails, enter the details of an account configured on that server for use by the IP Office.
- 6. For each user, select User | Voicemail.
- 7. In the Voicemail Email field enter the user's email address.
- 8. Using the radio button, select the type of Voicemail Email function alerts for the user.
 - Off

Don't send email alerts for new messages. Users can select this themselves by dialing $*\mathcal{O}3$.

- Copy
 - Send a copy of each new message received to the user's email address. User's cannot select this mode themselves.
- Forward

Forward each new message received to the user's email address, deleting the message from their mailbox. Users can select this themselves by dialing *01.

Alert

Send an email alert for each new message received. Users can select this themselves by dialing *02.

9. Send the configuration back to the IP Office.


3.2 User Announcements

Announcements are played to callers waiting to be answered. This includes callers being presented to hunt group members, ie. ringing, and callers queued for presentation.

- IP Office 4.0+ supports announcements using Embedded Voicemail.
- If no voicemail channel is available for an announcement, the announcement is not played.
- · Calls can be answered during the announcement.
- If a call is rerouted to a hunt group's Night Service Group or Out of Service Fallback Group, the announcements of the new group are applied.
- If a call overflows, the announcements of the original group are still applied, not those of the overflow group.
- For announcements to be used effectively, the hunt group's Voicemail Answer Time must be extended or Voicemail
 On must be unselected.

Announcement Configuration

- 1. Open IP Office Manager.
- 2. Select the user or hunt group for which announcements are required.
- 3. View the Announcements tab.

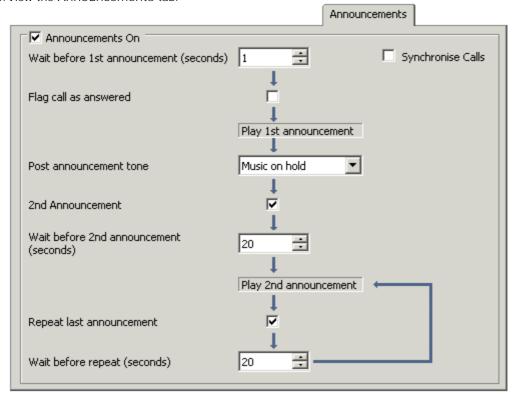

- Announcements On: Default = Off.
 This setting enables or disables announcements.
- Wait before 1st announcement: *Default = 10 seconds. Range = 0 to 9999 seconds.*This setting sets the time delay from the calls presentation, after which the first announcement should be played to the caller. If Synchronize Calls is selected, the actual wait may differ, see below.
- Flag call as answered: Default = Off.
 This setting is used by the IP Office CCC and CBC applications. By default they do not regarded a call as answered until it has been answered by a person. This setting allows calls to be marked as answered once the caller has heard the first announcement. This setting is not used by the IP Office Customer Call Reporter application.
- Post announcement tone: Default = Music on hold.
 Following the first announcement, you can select whether the caller should hear Music on Hold, Ringing or Silence until answered or played another announcement.
- 2nd Announcement: *Default = On.*If selected, a second announcement can be played to the caller if they have still not been answered.

- Wait before 2nd announcement: *Default = 20 seconds. Range = 0 to 9999 seconds.*This setting sets the wait between the 1st and the 2nd announcement. If Synchronize Calls is selected, the actual wait may differ, see below.
- Repeat last announcement: *Default = On*.

 If selected, the last announcement played to the caller is repeated until they are answered or hang-up.
- Wait before repeat: *Default = 20 seconds. Range = 0 to 9999 seconds.*If Repeat last announcement is selected, this setting sets is applied between each repeat of the last announcement. If Synchronize Calls is selected, this value is grayed out and set to match the Wait before 2nd announcement setting.
- Synchronize calls: *Default = Off*This option can be used to restrict how many voicemail channels are required to provide the announcements.
 - Off When Synchronize calls is off, announcement are played individually for each call. This requires a separate voicemail channel each time an announcement is played to each caller. While this ensures accurate following of the wait settings selected, it does not make efficient use of voicemail channels.
 - When Synchronize calls is on, if a required announcement is already being played to another caller, further callers wait until the announcement been completed and can be restarted. In addition, when a caller has waited for the set wait period and the announcement is started, any other callers waiting for the same announcement hear it even if they have not waited for the wait period. Using this setting, the maximum number of voicemail channels ever needed is 1 or 2 depending on the number of selected announcements.
- 4. Click OK to save the changes.
- 5. Click do nerge the configuration back to the IP Office.

Recording the Announcements

There are no default queue announcements for user and hunt groups. The maximum length for announcements is 10 minutes.

On new IP Office 4.0+ systems there are two default short codes that enable you to record announcements. On existing and upgraded systems these or similar short codes need to be added manually.

The default short codes are:

- *91N; / N".1" / Record Message
 Used to record an announcement 1. For example, to record announcement 1 for a hunt group on extension 300 dial
 *91300# and follow the instructions to record the new announcement.
- *92N; / N".2" / Record Message
 Used to record an announcement 2. For example, to record announcement 2 for a hunt group on extension 300 dial
 *92300# and follow the instructions to record the announcement.

Chapter 4. Hunt Group Mailbox Configuration

4. Hunt Group Mailbox Configuration

Embedded Voicemail creates a mailbox for each hunt group on the IP Office system. Calls are sent to the mailbox only when each available group member has been rung for the group's set ring time.

The group mailbox can be configured either through the mailbox (refer to the Embedded Voicemail User Guide) or through the hunt group settings in the IP Office Manager.

- Message Waiting Indication
 By default there is no message waiting indication to any user for hunt group messages. Users must be configured individually. For more information, see Message Waiting Indication 29.
- Mailbox Access

By default there is no mailbox access to hunt group mailboxes to collect messages. Users assigned hunt group message waiting indication can also gain access depending on their phone type or if using IP Office Phone Manager. Otherwise an access short code must be created for the hunt group. For more information, see Hunt Group Mailbox Access (30).

- Ringback
 - Embedded Voicemail can be set to ring the user whenever they have new messages in a hunt group mailbox for which they receive message waiting indication. This ringback is triggered the completion of a call at the user's extension.
- Voicemail On/Off
 - The sending of calls to the group's mailbox can be switched off. Note however that this does not stop other methods of leaving messages directly in the mailbox.
- Access Code

An access code can be assigned to the mailbox. Anyone accessing the mailbox must first enter this code before they can collect messages. The access code can be reset by the user once they are in the mailbox.

WARNING: Changing Hunt Group Names

Mailboxes are created based on the unique group name within the IP Office configuration. Changing a group name will associate that group with a new mailbox. If you need to change a group name, ensure that they have played and deleted all messages first. If a group name is changed without clearing the original mailbox, you must create a short code based on the old group name in order to access the old mailbox.

The group mailbox can be configured either through the mailbox and system short codes or through the hunt group settings within the IP Office configuration.

To configure a group mailbox in IP Office Manager:

- 1. Open IP Office Manager and receive the IP Office configuration.
- 2. Click Hunt Group to display the list of existing hunt groups.
- 3. Double-click the required hunt group.
- 4. Click the Voicemail tab. This tab includes settings that are used by IP Office Voicemail Lite and Voicemail Pro. For Embedded Voicemail complete the following details:
 - Voicemail Code
 - This field can be used to set a mailbox access code. That code must then be entered by anyone attempting to retrieve messages from the mailbox.
 - Voicemail On
 - When ticked, calls to the hunt group's number will divert to voicemail if all available group members are busy or do not answer within the group's set allocated answer interval.
- $5.\,\mbox{Make}$ any changes as required for the hunt group and click OK.
- 6. Repeat for any other hunt group.
- 7. Use to save the new changes back to the IP Office system.

4.1 Message Waiting Indication

By default no message waiting indication is sent to any user for a hunt group mailbox. The following process shows how to give a user message waiting indication from a hunt groups mailbox. The method of indication will depend on the type of telephone the user has and whether they are using IP Office Phone Manager.

- 1. Start IP Office Manager and receive the IP Office configuration.
- 2. Click User to display the list of existing users.
- 3. Double-click the user who requires hunt group message waiting indication.
- 4. Click the Source Numbers tab.
- 5. Click Add.
- 6. In the Source Number field, enter H followed by the name of the hunt group. For example, for the hunt group Main, enter H ain.
- 7. Click OK and repeat for any other hunt groups for which the user requires message waiting indication.
- 8. Click OK and repeat for any other users.
- 9. Use If to save the new changes back to the IP Office system.

4.2 Hunt Group Mailbox Access

By default no user has access to a hunt group mailbox until specifically configured for such access. Hunt group mailboxes can be accessed using the following methods:

Message Waiting Indication

Users who have been assigned hunt group message waiting indication are also given methods to access the hunt group mailbox. The method will depend on the telephone and/or software they are using. For more information, see Message Waiting Indication 29.

- Avaya 4400 Series Telephone Users

 DS display phone users on telephone models with a MENU key also gain access once they have been configured for hunt group message waiting. The hunt group name is then displayed when the user presses MENU, MENU, Mess, Voice. For more information, see your telephone user guide.
- Phone Manager Users
 Phone Manager users see the hunt group name and number of messages listed on the Messages tab. They can click this to access the hunt group mailbox.
- Voicemail Ringback
 If a user has voicemail ringback enabled, ringback will occur for new group messages as well as new personal messages. Ringback for personal messages takes place before any ringback for new group messages.
- Visual Voice
 If Visual Voice is available, the user will see the name of the hunt group listed. The number of new calls are shown in brackets next to the hunt group name.

Short Code and button Access

A short code can be created for hunt group mailbox access, as detailed in the table. This can be a system wide or user specific short code. For information about setting up short codes, see the IP Office Manager help or guide.

Field	Contains
Code	*99
Feature	Voicemail Collect
Telephone Number	"?Sales"
Line Group Id	0

The Voicemail Collect feature and hunt group mailbox name can also be assigned to a user's programmable button.

Remote Access

The standard methods for remote mailbox access apply to users or to hunt groups. For more information, see Remote Mailbox Access 464.


4.3 Announcements

Announcements are played to callers waiting to be answered. This includes callers being presented to hunt group members, ie. ringing, and callers queued for presentation.

- IP Office 4.0+ supports announcements using Embedded Voicemail.
- If no voicemail channel is available for an announcement, the announcement is not played.
- · Calls can be answered during the announcement.
- If a call is rerouted to a hunt group's Night Service Group or Out of Service Fallback Group, the announcements of the new group are applied.
- If a call overflows, the announcements of the original group are still applied, not those of the overflow group.
- For announcements to be used effectively, the hunt group's Voicemail Answer Time must be extended or Voicemail
 On must be unselected.

Announcement Configuration

- 1. Open IP Office Manager.
- 2. Select the user or hunt group for which announcements are required.
- 3. View the Announcements tab.

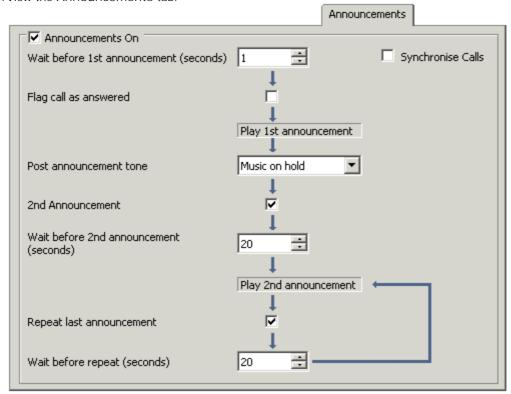

- Announcements On: Default = Off.
 This setting enables or disables announcements.
- Wait before 1st announcement: *Default = 10 seconds. Range = 0 to 9999 seconds.*This setting sets the time delay from the calls presentation, after which the first announcement should be played to the caller. If Synchronize Calls is selected, the actual wait may differ, see below.
- Flag call as answered: Default = Off.
 This setting is used by the IP Office CCC and CBC applications. By default they do not regarded a call as answered until it has been answered by a person. This setting allows calls to be marked as answered once the caller has heard the first announcement. This setting is not used by the IP Office Customer Call Reporter application.
- Post announcement tone: Default = Music on hold.
 Following the first announcement, you can select whether the caller should hear Music on Hold, Ringing or Silence until answered or played another announcement.
- 2nd Announcement: *Default = On.*If selected, a second announcement can be played to the caller if they have still not been answered.

- Wait before 2nd announcement: *Default = 20 seconds. Range = 0 to 9999 seconds.*This setting sets the wait between the 1st and the 2nd announcement. If Synchronize Calls is selected, the actual wait may differ, see below.
- Repeat last announcement: *Default = On*.

 If selected, the last announcement played to the caller is repeated until they are answered or hang-up.
- Wait before repeat: *Default = 20 seconds. Range = 0 to 9999 seconds.*If Repeat last announcement is selected, this setting sets is applied between each repeat of the last announcement. If Synchronize Calls is selected, this value is grayed out and set to match the Wait before 2nd announcement setting.
- Synchronize calls: *Default = Off*This option can be used to restrict how many voicemail channels are required to provide the announcements.
 - Off When Synchronize calls is off, announcement are played individually for each call. This requires a separate voicemail channel each time an announcement is played to each caller. While this ensures accurate following of the wait settings selected, it does not make efficient use of voicemail channels.
 - When Synchronize calls is on, if a required announcement is already being played to another caller, further callers wait until the announcement been completed and can be restarted. In addition, when a caller has waited for the set wait period and the announcement is started, any other callers waiting for the same announcement hear it even if they have not waited for the wait period. Using this setting, the maximum number of voicemail channels ever needed is 1 or 2 depending on the number of selected announcements.
- 4. Click OK to save the changes.
- 5. Click do nerge the configuration back to the IP Office.

Recording the Announcements

There are no default queue announcements for user and hunt groups. The maximum length for announcements is 10 minutes.

On new IP Office 4.0+ systems there are two default short codes that enable you to record announcements. On existing and upgraded systems these or similar short codes need to be added manually.

The default short codes are:

- *91N; / N".1" / Record Message
 Used to record an announcement 1. For example, to record announcement 1 for a hunt group on extension 300 dial
 *91300# and follow the instructions to record the new announcement.
- *92N; / N".2" / Record Message
 Used to record an announcement 2. For example, to record announcement 2 for a hunt group on extension 300 dial
 *92300# and follow the instructions to record the announcement.

Chapter 5. Auto Attendant Configuration

5. Auto Attendant Configuration

In addition to basic voicemail operation, you can create auto attendants using Embedded Voicemail. For IP Office 4.1+, up to 40 auto attendant services are supported whereas previously only 4 were supported.

Each auto attendant consists of:

Actions

Each of the normal DTMF dialing keys; *, # and 0 to 9, can be assigned to an action. Callers can dial-through prompts, that is press an action key while listening to the greetings prompts. For IP Office 4.0+, you can also assign an action to the key Fax. If a transfer action is set, on detecting fax tone the auto attendant will route the call to the fax transfer destination as specified using the Transfer action.

• Dial by Name IP Office 5.0+

Callers can dial the name of the user they require. A list of matching names is then played to them to make a selection.

• Dial by Number

Callers can dial the required extension number. There is no prompt associated with the action. If a prompt is required it as part of the menu prompt. Unexpected results can occur if the dial plan is not a uniform length. Hunt group and user extension numbers should all be the same length.

Normal Transfer

Transfers the caller to a specified number. This is a supervised transfer, that is, if busy or unanswered the call will follow the settings of the target user or hunt group. If the destination field is left blank, callers can dial the extension number that they require, however no prompts will be played.

Not Defined

Take no action.

· Replay Greeting

Repeat the menu greeting.

Transfer

Callers are transferred to the selected destination. This action is used with the key Fax so that when a fax tone is detected the call is transferred to the specified extension.

· Transfer to Attendant

Used to access one auto attendant from another.

Prompts

You can record separate morning, afternoon and evening (out of hours) greeting prompts. Which prompt is used is defined by associated Time Profiles. The greeting prompt is followed by a menu options prompt. This is used to inform the caller of the auto attendant options. For more information, see Recording Prompts 37.

• In situations where time profiles are absent, overlap or conflict; the order of precedence given is to time profiles assigned to *Morning, Afternoon* and then *Evening*.

5.1 Create an Auto Attendant

The following process shows by example the setup for an auto attendant for Embedded Voicemail. In this example the auto-attendant should give callers the option to press 0 for reception (hunt group 200) or 1 for sales (hunt group 301).

• For details of routing calls to the auto attendant, see Routing Incoming Calls to an Auto Attendant 38.

To create an auto attendant:

- 1. Start IP Office Manager and load the required configuration.
- 2. Note that if time profiles are going to be used in an auto attendant, the time profile has to be created before creating the auto attendant. For more information, see the IP Office Manager help.
- 3. Click Auto Attendant. Any existing Auto Attendants are listed.
- 4. Click Create a New Record in the Group Pane. Select Auto Attendant. In the Name field enter the name for the auto attendant. This can be up to 15 characters in length.




- Name: Range = Up to 12 characters
 This field sets the name for the auto-attendant service. External calls can be routed to the auto attendant by entering AA: Name in the destination field of an Incoming Call Route.
- Maximum I nactivity: *Default = 8 seconds; Range = 1 to 20 seconds, Software level = 3.0+.*This field sets how long after playing the prompts the Auto Attendant should wait for a valid key press. If exceeded, the caller is either transferred to the Fallback Extension set within the Incoming Call Route used for their call or else the caller is disconnected.
- Enable Local Recording: *Default = On, Software level = 4.0+ (Q2 2007 Maintenance release).*When off, use of short codes to record auto-attendant prompts is blocked. The short codes can still be used to playback the greetings.
- Direct Dial-By-Number: Default = Off, Software level = 6.0+.
 This setting affects the operation of any key presses in the auto attendant menu set to use the Dial By Number action.
 - If selected, the key press for the action is included in any following digits dialed by the caller for IP Office extension matching. For example, if 2 is set in the actions to *Dial by Number*, a caller can dial 201 for extension 201.
 - If not selected, the key press for the action is not included in any following digits dialed by the caller for IP Office extension matching. For example, if 2 is set in the actions to *Dial by Number*, a caller must dial 2 and then 201 for extension 201.
- Dial by Name Match Order: *Default = First Name/Last Name, Software level = 5.0+.*Determines the name order used for the Embedded Voicemail Dial by Name function. The options are *First then Last* or *Last then First.*
- AA Number: Software level = 4.1+.

 This number is assigned by the IP Office and cannot be changed. It is used in conjunction with short codes to access the auto attendant service or to record auto attendant greetings.

- Morning/Afternoon/Evening/Menu Options:
 Each auto-attendant can consist of three distinct time periods, defined by associated time profiles. A greeting can be recorded for each period. The appropriate greeting is played to callers and followed by the Menu Options greeting which should list the available actions.
 - Time Profile

 The time profile that defines each period of auto-attendant operation. When there are overlaps or gaps between time profiles, precedence is given in the order morning, afternoon and then evening.
 - Short code
 These fields indicate the system short codes automatically created to allow recording of the time profile greetings and the menu options prompt.
 - Recording Name: Default = Blank. Range = Up to 31 characters, Software level = 4.0+ (Q2 2007 Maintenance release).

 This field appears next to the short code used for manually recording auto-attendant prompts. It is only used is using pre-recorded wav files as greeting rather than manually recording greetings using the indicated short codes. If used, note that the field is case sensitive and uses the name embedded within the wav file file header rather than the actual file name. The utility for converting .wav files to the correct format is provided with Manager and can be launched via File | Advanced | LVM Greeting Utility | 42 | Files then need to be manually transferred to the embedded voicemail memory card.
- 5. Click the Actions tab. The option to press 0 for reception (hunt group Main) is entered by:
 - Click with the Key 0 row. Click Edit.
 - Select the action Normal Transfer from the available options.
 - Select the required destination. In this example the group Main is selected.
 - · Click OK.

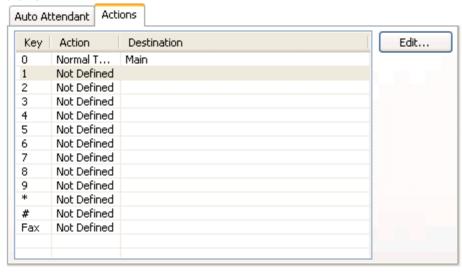

- 6. The option to press 1 for sales (hunt group 301) is entered by:
 - Click within the Key 1 row. Click Edit.
 - Select the action Normal Transfer from the available options.
 - Select the required destination, for this example the group **Sales**.
 - · Click OK.
- 7. Click OK to save the auto attendant. Short codes are automatically created for the auto attendant and the codes can be viewed in the Auto Attendant tab.
- 8. Click do to save the new changes back to the IP Office system.
- 9. Following the system reboot, you can record prompts for the auto attendant using the short codes created. For more information, see Recording Prompts (37^h).

5.2 Recording Prompts

When a new auto attendant is created, a number of short codes are automatically added to the system short codes table. The short codes allow the recording of the various auto attendant prompts. The appropriate number to dial is indicated against each greeting on the Auto Attendant tab in IP Office Manager.

The telephone number part takes the form "AA: *Name.x"*, where *Name* is the name of the auto attendant service, and x is 1 for the morning greeting, 2 for the afternoon greeting, 3 for the evening greeting and 4 for the menu options prompt.

For IP Office 4.1+ the number can also take the form " \mathcal{AA} : " \mathcal{N} ". \mathcal{N} " where \mathcal{N} is the auto attendant number and \mathcal{X} is 1 for the morning greeting, 2 for the afternoon greeting, 3 for the evening greeting and 4 for the menu options prompt.

When using any of these short codes, you hear the options:

- 1 to hear the current prompt.
- 2 to record a new prompt.
- 3 to save the new prompt.

Notes


- To prevent abuse of these default short codes, they can be deleted or changed. They can also be removed from the system short codes section and rebuilt in the user short codes of a trusted user. Alternately, disabling the Enabling Local Recording option (IP Office 4.0 May 2007 maintenance release and higher) stops the use of short codes to record the auto attendant greetings.
- Using the Dial feature, the short codes can be assigned to a programmable button. This allows quick access and recording of any prompts that change frequently.

5.3 Routing Incoming Calls to an Auto Attendant

An integral voicemail auto attendant created can be specified as a destination in the IP Office Incoming Call Routes table. Internal callers can access an auto attendant through a programmed DSS button or Phone Manager speed dial.

To route incoming calls to an auto attendant:

- 1. Start IP Office Manager and load the required configuration.
- 2. Click Incoming Call Route and select the required route.
- 3. View the Standard tab. Check that the settings match the calls you expect to be routed to the auto attendant (for full details refer to the IP Office Manager documentation).
- 4. Click the Destination tab. In the Destination field use the drop down list to select the auto attendant. The names of the configured auto attendants are shown prefixed with AA:

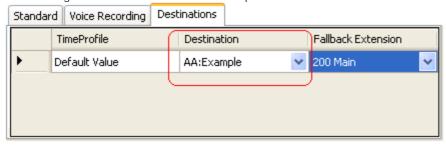

- 5. In the example above the Fallback Extension has also been set to route calls to a hunt group. The Fallback Extension setting is used for callers in the auto attendant who do not make a valid key press within the auto attendant's Maximum I nactivity time.
- 6. Using time profiles, additional destination sets can be added to use the auto attendant at certain times of day or to use different auto attendants at different times.
- 7. Click OK.
- 8. Use If to save the new changes back to the IP Office system.

5.4 Transferring Calls to an Attendant

Normally calls are directed to an auto attendant by an IP Office incoming call route. However it can also be useful to transfer calls received at an internal extension to an auto attendant.

You can transfer calls to an Auto Attendant by:

- Using Programmed Buttons 39
- Using Phone Manager 39
- Using SoftConsole 404.
- Using Short Codes 404

Using Programmed Buttons

On Avaya phones with programmable buttons, those buttons can be programmed to access auto attendant services.

To create an auto attendant button:

- 1. From the IP Office system configuration, set the action of one of the users programmable buttons to Dial.
- 2. Set the associated telephone number to AA: Name where Name matches the name of the auto attendant.
- 3. Save this configuration change back to the IP Office.

When the user receives a call they want to transfer to the auto-attendant, they can use a programmed button.

To transfer a call using the programmed button:

- 1. Place the call on hold.
- 2. Press the button programmed for the auto-attendant.
- 3. Hang-up the call at their extension. This will cause a blind transfer of the held call to the auto-attendant.

Using Phone Manager

To create an auto attendant speed dial:

- 1. Within the user's Phone Manager, click the Speed Dials tab.
- 2. Right-click the speed dial panel and select New > Speed Dial Group Member. The Speed Dial window opens.
- 3. In the Name field, enter a name for the Auto Attendant.
- 4. In the Number field, enter AA: Name where Name matches the name of the auto attendant.
- 5. Click OK.

To transfer a call using the Speed Dial:

- 1. During a call that you want to transfer to the auto attendant click Hold to place the call on hold.
- 2. Click the Speed Dials tab.
- 3. Click the speed dial created for the auto attendant.
- 4. Click Complete Transfer to transfer the held caller.

Using SoftConsole

To create an auto attendant speed dial:

- 1. Click the required BLF Group tab.
- 2. Right-click the speed dial panel and select New > BLF Group Member. The New BLF Group Member window opens.
- 3. In the Name field, enter a name for the Auto Attendant.
- 4. In the Number field, enter AA: Name where Name matches the name of the auto attendant.
- 5. Click OK.

To transfer a call using the Speed Dial:

- 1. During a call that you want to transfer to the auto attendant click Hold to place the call on hold.
- 2. Click the BLF Group tab.
- 3. Click the speed dial created for the auto attendant.
- 4. Click Complete Transfer to transfer the held caller.

Using Short Codes

The Auto Attendant short code feature can be used to connect to a particular auto attendant. The Telephone Number field takes the form AA: followed by the Auto Attendant service name.

In the example below, dialing *98 would connect the user with the auto attendant named Example.

Field	Contains
Code	*98
Feature	Auto Attendant
Telephone Number	"AA: Example"
Line Group Id	0

Once a short code for a particular auto attendant has been created, callers can be transferred.

To transfer a caller:

- 1. Press TRANSFER.
- 2. Dial the auto attendant short code.
- 3. Press TRANSFER again to complete the process.

5.5 Using Auto Attendant to Access Voicemail

A useful function in auto attendants is to let callers access their own voicemail mailbox. This can be achieved by first creating a short code and then using the short code as an auto attendant destination.

To create a short code for remote access:

- 1. Start IP Office Manager and load the required configuration.
- 2. For the user or hunt group for which you want to create remote access, open their settings and on the Voicemail tab ensure that a Voicemail Code has been set. Remote access will not work without this.
- 3. In the configuration tree panel, click Shortcode. Any existing system short codes are listed.
- 4. Click Create a New Record in the Group Pane. Select Short Code.
- 5. Create a short code such as the following example:

Field	Contains
Code	*99
Feature	Voicemail Collect
Telephone Number	?
Line Group Id	0

- 6. Click OK to add the new short code.
- 7. Create an auto attendant and select the key that the caller should use. Set the keys Action to Normal Transfer. Type the short code in the destination, in the example it would be *99.
- 8. Click OK.
- 9. Click I to save the new changes back to the IP Office system.

External callers to the auto-attendant selecting the right option will now be challenged to enter the mailbox number and then the mailbox access code. If entered correctly they will be able to collect messages.

5.6 Using Named Announcement Files


IP Office 4.1+ allows pre-recorded files to be converted and used as auto attendant greetings. This approach allows greetings to be recorded by methods other than through the IP Office phone short codes. It also allows the same greeting to be shared by several auto attendants.

Preventing Over Recording of Uploaded Files
 Once uploaded to the IP Office, the converted files can still be recorded over using the default short codes for
 recording auto attendant greetings. To prevent this use de-select the Enable Local Recording option of the auto
 attendant.

A. Converting the Recordings

This process converts the source WAV file recording to the format required by the IP Office Embedded Voicemail.

- 1. The original recording must be in the following WAV file format. If it is in a different format, convert the file using a tool such as Windows Sound Recorder.
 - PCM/Uncompressed.
 - 8000 KHz, 16bit, Mono.
- 2. Start IP Office Manager.
- 3. Select File | Advanced | LVM Greeting Utility.

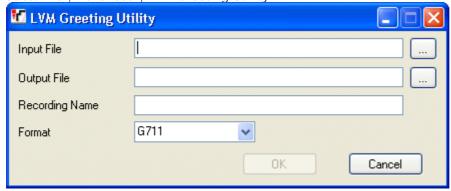

- 4. Click on the ... button for Input File and select the WAV file.
- 5. Click on the ... button for Output File and select the location into which you want the converted file saved.
- 6. Select the Format G711.
 - Enter a name for the file (up to 8 characters with no spaces) and end the file name with .c11.
 - Enter a name for the recording in the Recording Name field. This is the name that will be entered into the IP Office configuration to use the recording. Note that the field in case sensitive.
- 7. Ensure that the Format matches that selected for the Output File settings chosen above.
- 8 Click OK
- B. Editing an Auto Attendant to Use Named Recordings
 - 1. Start IP Office Manager and receive the IP Office configuration.
 - 2. Select the Auto Attendant form and select or create the required auto attendant.
 - 3. In the **Recording Name** field enter the name of the greeting to be used. This is the **Recording Name** entered during the files conversion, not the actual file name. It is case sensitive.
 - 4. If only converted greeting files are to be used with the auto attendant, you can disable the Enable Local Recording option to stop any system user recording over the file.
 - 5. Send the configuration back to the IP Office.
- C. Transferring the Recording to the Embedded Voicemail Memory Card Using IP Office Manager, select File | Advanced | Embedded File Management. Drag and drop the recording created above into appropriate folder on the memory card. For IP500v2 systems this is dynamic\lvmail\AAG folder on the System SD card, for other systems it is the Ivmail\AAG folder.

5.7 Dial by Name


IP Office 5.0 allows the option Dial by Name to be selected as an auto attendant option. Callers selecting this option are asked to dial the name they require and then press #. The recording name prompts of matching users are then used to allow the caller to make their selection.

The name order used for set to first name/last name or last name/first name by the <u>Dial by Name Match Order</u> 35 setting on the Auto Attendants settings.

The name used for matching is taken from the user's configuration within the IP Office configuration. The Full Name is used if set, otherwise the Name is used.

Users are exclude from Dial by Name if they:

- Are marked as Ex Directory (User | User) in the IP Office configuration.
- Do not have a recorded mailbox name prompt.
 - They can record their own name by dialing *05 after accessing their mailbox.
- The function assumes that a standard ITU lettered dialing pad is being used.

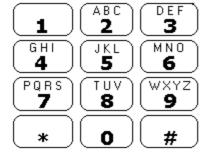

- The action prompts the caller to dial the name they require and then press #. For example, dialing 527 matches names starting with JAS (for example "Jason") and KAR (for example "Karl"). Callers can also press *# to exit without making a selection.
 - If no matches are found, the caller is given the option to retry.
 - If 10 or less matches are found, the matching mailbox name greetings are played as part of a selection list, i.e. "Press 1 for ..., press 2 for ..., ...".
 - If more then 10 matches are found, the caller is prompted to either press # to hear the first 10 or to dial more characters to reduce the number of matches. If they select to play the list, after each set of 10 matches they can either make a selection or follow the prompts for other options.

Chapter 6. Miscellaneous

6. Miscellaneous

6.1 Remote Mailbox Access

Remote mailbox access is accessing a mailbox from any location does not match the mailbox user or hunt group's number. That includes both internal and external access.

 Remote access is only possible if the mailbox user or hunt group has a voicemail code set in the IP Office configuration.

There are a number of ways to enable remote mailbox access.

1. Direct from an Incoming Call Route

An incoming call route could be configured to enable remote access to a mailbox. The option *Voicemail* can be selected as the Destination and/or Night Service Destination of an Incoming Call Route.

2. Using a Short Code

A short code can be created that uses the Voicemail Collect feature but without a mailbox name specified in the Telephone Number field will trigger remote access. An example is shown below. This short code could be utilized by users on the system, as the destination in an Incoming Call Route or as the destination for a auto attendant option.

Field	Contains
Code	*99
Feature	Voicemail Collect
Telephone Number	?
Line Group Id	0

3. Via an Auto Attendant

An auto attendant can be used to enable remote access to a mailbox. A short code similar to the example could be entered as the Destination for one of the auto attendant Normal Transfer key options. For more information, see Using Auto Attendant to Access Voicemail 41.

6.2 Monitoring Embedded Voicemail

The IP Office Monitor application can be used to observe the operation of Embedded Voicemail.

- 1. From the Start menu select Programs > IP Office.
- 2. Select Monitor.
- 3. From the File menu, click Select Unit. The Select System to Monitor window opens.
- 4. Enter the Control Unit IP Address and password. Depending on the IP Office system's configuration, the password required is either the system password or the separate monitor password if set.
- 5. Check that the Control Unit Type is set to IP Office.
- 6. Click OK.
- 7. The Monitor application attempts to connect with the control unit. If successful, something similar to the following will appear.

```
****** SysMonitor v6.0 (11031) *******
******* contact made with 192.168.42.119 at 10:08:25 15/11/2006 ********
****** System (192.168.42.119) has been up and running for 1day, 19hrs, 3mins and 7secs(154987775mS)
154987776mS PRN: Monitor Started IP=192.168.42.130 IP 500 4.0(11031) IP500_40
                  (IP Office: Supports Unicode, System Locale is eng)
154987776ms PRN: LAW=A PRI=0, BRI=4, ALOG=4, ADSL=0 VCOMP=32, MDM=0, WAN=0, MODU=0 LANM=0 CkSrC=1 VMAIL=1(VER 154987778ms LIST2: IFACE(4) "LAN1", "LAN2", "DialIn", "RemoteManager"
A:\lvmail\ENG\*.*
 155088356mS PRN: LVM Flash A: NextFlashItemScan: Scanning A:\lvmail\ITA\*.*
 155088456mS PRN: LVM Flash A: NextFlashItemScan: Finished Scanning A:\lvmail\ITA\*.*
 155088462mS PRN: LVM Flash A: NextFlashItemScan: Finished Scanning A:\lvmail\*.*
 155088462mS PRN: LVM Flash A: NextFlashItemScan: END-OF-LIST found
 155088462mS PRN: LVM FlashMan: FiveMinuteActions: called
                                                                2006/11/15 10:10:02
 155088520mS PRN: LVM FlashMan: FiveMinuteActions: Free: 955.9 MBytes ( 92% )
 155088520mS PRN:
                                   33 Hours 11 Minutes Approx. Remaining
                                   FMML Size: 27
 155088520mS PRN:
```

- 8. From the Filters menu select Trace Options. The All Settings window opens.
- 9. The following Embedded Voicemail events can be selected to be included on the monitor trace:
- 10.On the Call tab, select the options that you want to monitor in the Embedded Voicemail section.
- 11.On the System tab, select Print.
- 12. The Trace Color selection on the System tab is applied to Embedded Voicemail events.
- 13.Click OK.
- 14. Embedded Voicemail events are now shown in the Monitor trace when running. These events are all prefixed LV.

Embedded Voicemail Housekeeping

The embedded voicemail performs housekeeping approximately every 5 minutes, subject to other system activity. This can be seen in IP Office System Monitor by enabling the trace option Filters | Call | House Keeping (Embedded Voicemail).

The details include the approximate remaining message capacity of the memory card.

```
156165753mS LVM(housekeeping): FlashMan: FiveMinuteActions: called 2009/01/29 06:52:55 156165796mS LVM(housekeeping): FlashMan: FiveMinuteActions: Free: 426.4 MBytes (81%) 156165796mS LVM(housekeeping): 14 Hours 48 Minutes Approx. Remaining 156165796mS LVM(housekeeping): FMML Size: 35
```

Checking the Prompt Sets

The additional embedded voicemail features added in new IP Office releases require new prompts. Missing prompts can be reported in IP Office System Monitor by enabling the trace options Filters | System | Error. Error messages are output at regular intervals.

```
158267586mS ERR: EVM 4p0 upgrade file clips missing
158267587mS ERR: EVM 4p2 upgrade file clips missing
158267592mS ERR: EVM 5p0 upgrade file clips missing
```

6.3 Button Programming

The same features used for Embedded Voicemail short codes can also be assigned to telephone buttons.

- 1. Start IP Office Manager and receive the IP Office configuration.
- 2. Click User to display the list of existing users.
- 3. Click the required user.
- 4. Click the Button Programming tab.
- 5. Click the button line that you want to change. Click Edit. The Edit Button fields are shown at the bottom of the form.
- 6. Click at the end of the Action field. The Button Programming window opens.
- 7. Select Advanced > Voicemail to display the list of voicemail features.
- 8. Select the feature required:
 - Voicemail Collect

Allows access to a mailbox to collect or leave messages. The mailbox and action are determined by the associated telephone number. This takes the form "?Name" for message collection and "#Name" for leaving a message. The Name part must match the user or hunt group name set in the IP Office configuration. On suitable phones the DSS key displays VMCoI followed by the name.

Voicemail On

This feature switches the diversion of calls to the user or group mailbox on/off. When programmed on a DSS key, the action toggles so no separate Voicemail Off key is required. On suitable phones the DSS key displays VMOn.

- Voicemail Ringback On
 This feature switches new message ringback notification on/off. When programmed on a DSS key, the action toggles so that no separate Voicemail Ringback Off key is required. On suitable phones the DSS key displays VMRB+.
- 9. Repeat for all the keys required.
- 10.Click OK.
- 11. Repeat for any other users.
- 12. Use do to save the new changes back to the IP Office system.

6.4 Visual Voice

A user can be given a display menu to user for access to their mailbox. The menu provides the user with options to listen to messages, send messages, change their greetings and password.

- Note
 - The Visual Voice feature is not available on all telephones. It requires an Avaya phone with multi-line (more than 2) display.
- MESSAGES Button
 - For IP Office 4.2+, the MESSAGES button on phones can be configured to activate Visual Voice rather than access the spoken voicemail prompts. Within IP Office Manager, select System | Voicemail | Messages Button Goes to Visual Voice.

To give a user a Visual Voice button

- 1. Start IP Office Manager and receive the IP Office configuration.
- 2. Click User to display the list of existing users.
- 3. Click the required user.
- 4. Click the Button Programming tab.
- 5. Click the button line that you want to change.
- 6. Right-click in the Action field.
- 7. Select Emulation > Visual Voice.
- 8. Click OK to save the button details for the selected user.
- 9. Repeat for any other users.
- 10. Use If to save the new changes back to the IP Office system.

6.5 Short Codes

Embedded Voicemail supports a number of IP Office short code features.

Default Short Codes

The following default system short codes can be used with Embedded Voicemail.

• Collect Messages: *17

Can be used by users to access the mailbox associated with their extension.

Voicemail On/Off: *18/*19

Switches the diverting of callers to the user's mailbox on/off.

• Voicemail Ringback On/Off: *48/*49

Switches new message ringback to the user on/off.

· Record Message:

The Record Message feature is used to record announcements that are used when callers to a hunt group are queued. For more information, see Configuring Queue Announcements 31.

- *91N; To record an Announcement 1 for a hunt group.
- *92N; To record an Announcement 2 for a hunt group.

Short Code Features

Additional short codes can be added as required using the short code features listed below. For full details of short codes refer to the IP Office Manager documentation.

• Voicemail Collect

This short code feature can be used to create short codes for collecting or leaving messages. The exact action is set by the use of either? or # in the telephone number. For example "?Main" would indicate collection of messages in the mailbox called Main. "#Main" would indicate that a user wants to leave a message in the mailbox called Main. Note that the quotation marks " " are required and the name must match the user or hunt group whose mailbox is being accessed. For example:

Field	Contains
Code	*99
Feature	Voicemail Collect
Telephone Number	"?Main"
Line Group Id	0

- Using just ? in the Telephone Number without quote marks and a mailbox name allows remote access. The user would be prompted to enter the mailbox number and then the mailboxes access code if set.
- · Voicemail On/Voicemail Off

These two features switch the diversion of calls to the user or group mailbox on/off. No telephone number is required for either of these features.

· Voicemail Ringback On/Off

These two features switch new message ringback notification on/off. No telephone number is required for either of these features.

Auto Attendant

This feature is used for the recording of auto attendant prompts and greetings. Normally the short codes for this are created automatically. However they can be deleted and reassigned as required. For more information, see Create an Auto Attendant Telegold: 186).

Record Message

Allows the recording of announcement messages for users and hunt groups.

• Shutdown Embedded Voicemail

Supported for IP Office 4.0+. Allows the embedded voicemail service provided by the memory card to be disabled. For pre-IP Office Release 6 systems, this short code should be used before removing a memory card from the system. For IP Office Release 6+ systems, a memory card shutdown command should be used instead.

• Startup Embedded Voicemail

Supported for IP Office Release 6+. Allows an embedded voicemail service that has been shutdown to be restarted.

Index
Α
Access Code 20
Announcements 20 Auto Attendant 38
Auto Attendant Tricks 41
В
Breakout Numbers 20
С
Configuring
IP Office 17
Queues 31
D
DSS Key Programming 48
E
Embedded VoiceMail 17
Monitoring 47 Overview 7
Embedded VoiceMail Mailbox Features 7
Example Auto Attendant Setup 35
Н
Hunt Group Mailbox Access 30
1
Incoming Calls
Routing 38
Internal Access#DSSKeys 39 IP 500 Installation 15
IP Office
Configuring 17
L
Languages Supported 10
M
Mailbox Access 20
Message Waiting Indication 20, 29
Monitoring Embedded VoiceMail 47
C Embedded Voiceiviaii 47
Overview
Embedded VoiceMail 7
Р
Prompts
Recording 37
Upgrading 16
Q
Queues
Configuring 31
R
Recording Prompts 37
Remote Access 46
Ringback 20
Routing
Incoming Calls 38
S
Short Codes 50
U
Upgrading Prompts 16
Prompts 16 User Mailbox Configuration 20
Using Named Announcement Files 42

٧

Visual Voice 49 Voicemail Email 20 Voicemail Reception 20

W

What's New 9

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

Intellectual property related to this product (including trademarks) and registered to Lucent Technologies have been transferred or licensed to Avaya.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

Any comments or suggestions regarding this document should be sent to "wgctechpubs@avaya.com".

© 2011 Avaya Inc. All rights reserved.
Avaya
Unit 1, Sterling Court
15 - 21 Mundells
Welwyn Garden City
Hertfordshire
AL7 1LZ
England.

Tel: +44 (0) 1707 392200 Fax: +44 (0) 1707 376933

Web: http://www.avaya.com/ipoffice/knowledgebase