

Implementing Voicemail Pro

© 2014 AVAYA All Rights Reserved.

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

For full support, please see the complete document, Avaya Support Notices for Hardware Documentation, document number 03–600759. For full support, please see the complete document, Avaya Support Notices for Software Documentation, document number 03–600758. To locate this document on our website, simply go to http://www.avaya.com/support and search for the document number in the search box.

Documentation disclaimer

"Documentation" means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya generally makes available to users of its products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on its hardware and Software ("Product(s)"). Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this Product while under warranty is available to Avaya customers and other parties through the Avaya Support website: http://support.avaya.com. Please note that if you acquired the Product(s) from an authorized Avaya Channel Partner outside of the United States and Canada, the warranty is provided to you by said Avaya Channel Partner and not by Avaya. "Software" means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products or pre-installed on hardware products, and any upgrades, updates, bug fixes, or modified versions.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, HTTP://SUPPORT.AVAYA.COM/LICENSEINFO ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED AVAYA CHANNEL PARTNER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants you a license within the scope of the license types described below, with the exception of Heritage Nortel Software, for which the scope of the license is detailed below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to you. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users.

License type(s)

Designated System(s) License (DS). End User may install and use each copy of the Software only on a number of Designated Processors up to the number indicated in the order. Avaya may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Concurrent User License (CU). End User may install and use the Software on multiple Designated Processors or one or more Servers, so long as only the licensed number of Units are accessing and using the Software at any given time. A "Unit" means the unit on which Avaya, at its sole discretion, bases the pricing of its licenses and can be, without limitation, an agent, port or user, an e-mail or voice mail account in the name of a person or corporate function (e.g., webmaster or helpdesk), or a directory entry in the administrative database utilized by the Software that permits one user to interface with the Software. Units may be linked to a specific, identified Server.

Database License (DL). End User may install and use each copy of the Software on one Server or on multiple Servers provided that each of the Servers on which the Software is installed communicates with no more than a single instance of the same database.

CPU License (CP). End User may install and use each copy of the Software on a number of Servers up to the number indicated in the order provided that the performance capacity of the Server(s) does not exceed the performance capacity specified for the Software. End User may not reinstall or operate the Software on Server(s) with a larger performance capacity without Avaya's prior consent and payment of an upgrade fee

Named User License (NU). You may: (i) install and use the Software on a single Designated Processor or Server per authorized Named User (defined below); or (ii) install and use the Software on a Server so long as only authorized Named Users access and use the Software. "Named User", means a user or device that has been expressly authorized by Avaya to access and use the Software. At Avaya's sole discretion, a "Named User" may be, without limitation, designated by name, corporate function (e.g., webmaster or helpdesk), an e-mail or voice mail account in the name of a person or corporate function, or a directory entry in the administrative database utilized by the Software that permits one user to interface with the Software.

Shrinkwrap License (SR). You may install and use the Software in accordance with the terms and conditions of the applicable license agreements, such as "shrinkwrap" or "clickthrough" license accompanying or applicable to the Software ("Shrinkwrap License").

Heritage Nortel Software

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software currently available for license from Avaya is the software contained within the list of Heritage Nortel Products located at http://support.avaya.com/LicenseInfo under the link "Heritage Nortel Products". For Heritage Nortel Software, Avaya grants Customer a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or (in the event the applicable Documentation permits installation on non-Avaya equipment) for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, or hardware provided by Avaya. All content on this site, the documentation and the Product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

Each vAppliance will have its own ordering code. Note that each instance of a vAppliance must be separately ordered. If the end user customer or Avaya channel partner would like to install two of the same type of vAppliances, then two vAppliances of that type must be ordered.

Each Product has its own ordering code. Note that each instance of a Product must be separately licensed and ordered. "Instance" means one unique copy of the Software. For example, if the end user customer or Avaya channel partner would like to install two instances of the same type of Products, then two Products of that type must be ordered.

Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software that may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the Documentation or on Avaya's website at: http://support.avaya.com/Copyright. You agree to the Third Party Terms for any such Third Party Components.

Note to Service Provider

The Product may use Third Party Components that have Third Party Terms that do not allow hosting and may need to be independently licensed for such purpose.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If you suspect that you are being victimized by Toll Fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: http://support.avaya.com. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation and Product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation and Product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: http://support.avaya.com.

Contact Avaya Support

See the Avaya Support website: http://support.avaya.com for product notices and articles, or to report a problem with your Avaya product. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: http://support.avaya.com, scroll to the bottom of the page, and select Contact Avaya Support.


Cantanta		5.1 General	105
Contents		5.2 Directories	107
		5.3 Email	108
1. Voicemail Pro		5.3.1 MAPI	108
1.1 Supported Languages		5.3.2 SMTP Sender	110
1.2 Voicemail Pro Licenses		5.3.3 SMTP Receiver	113
1.3 Number of Simultaneous Users	13	5.4 Housekeeping	
2. Windows Installation		5.5 SNMP Alarm	
2.1 General Installation Requirements	17	5.6 Outcalling	
•		5.7 Voicemail Recording	
2.1.1 Computer Specifications 2.1.2 Single Server Support		5.8 Backup & Restore	
2.1.3 Virtual Server Support		5.9 VPNM	120
2.1.4 Network Requirements		6. Centralized Voicemail Pro	
2.1.5 Disk Space Requirements			400
2.1.6 Web Server Operation		6.1 Centralized Voicemail	
2.1.7 ContactStore Operation		6.3 Backup Voicemail Server Operation	
2.1.8 SFTP Server Requirements		6.3.1 Manual Failback	
2.2 Server/Client Installation		6.3.2 Graceful Failback	
2.2.1 Modifying the Installed Components		6.3.3 Automatic Failback	
2.2.2 Web Campaigns Installation		6.4 Distributed Voicemail Servers	
2.2.3 The Voicemail Pro Services		6.5 Combined Options	
2.3 Upgrading to Voicemail Pro 9.0		6.6 Installation Notes	
2.4 UMS Web Services		0.0 Installation Notes	130
2.4.1 IMAP Installation		7. Appendix	
2.4.2 Web Voicemail Installation		7.1 SMTP Logging	146
2.4.3 UMS Exchange Configuration		7.2 SFTP Host Key Verification	
2.5 Voicemail Email		7.3 Installing VoiceMail Pro as an ACM Gateway	
2.5.1 SMTP Setup		7.4 Installing Networked Messaging (VPNM)	
2.5.2 MAPI Setup		7.4.1 Requirements for VPNM	
2.5.3 Voicemail Email Operation		7.4.2 Installing VoiceMail Pro with VPNM Support	
2.6 Text To Speech (TTS) Installation		7.4.3 Configuring VPNM Preferences	
2.6.1 Installing Generic Text to Speech		7.4.4 Testing a VPNM Setup	
2.6.2 Installing Avaya Text to Speech		7.5 Glossary	
2.6.3 Setting Up Text To Speech to Read Email		7.5.1 Centralized Voicemail Pro Server	155
2.7 Troubleshooting		7.5.2 Distributed Voicemail Pro Server	155
2.7.1 Checking the Voicemail Pro Service		7.5.3 MAPI	155
2.7.2 Voicemail Pro User Log		7.5.4 SNTP	155
2.7.3 Tracing in Debug		7.5.5 VPNM	155
2.7.4 The Voicemail Console		7.5.6 VRL	155
3. Using the Voicemail Pro Client		8. Document changes since last issue	
3.1 Logging in to the Voicemail Pro Server	86	Index	.159
3.2 Confirm Call Flow Download Window	88		
3.3 Continue Offline Message Window	88		
3.4 Saving Changes	89		
3.5 Changing Sound Preferences	89		
3.6 Logging Out	89		
3.7 Closing Down	90		
4. IP Office Configuration			
4.1 User and Group Mailboxes	93		
4.2 System Settings	94		
4.3 User Voicemail Settings	96		
4.4 User Source Numbers	98		
4.5 Hunt Group Settings	99		
4.6 Voicemail Channel Reservations	101		

5. System Preferences

Chapter 1. Voicemail Pro

1. Voicemail Pro

The diagram illustrates a Voicemail Pro system with some of the setup options.

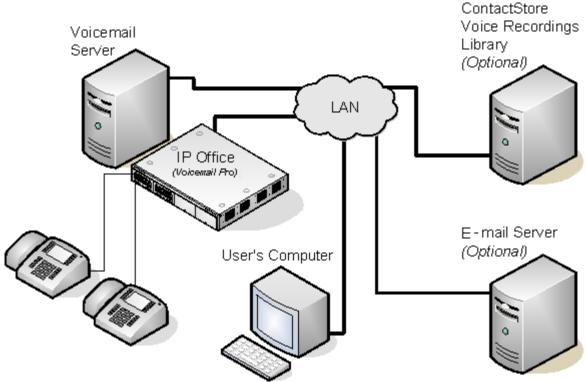

• IP Office Control Unit

The IP Office Voicemail Pro <u>licenses</u> 12 are entered into the configuration of the IP Office system. The licenses are required to activate Voicemail Pro features. You can run an unlicensed Voicemail Pro service for demonstration and testing for a duration of two hours only. License keys are issued against and validated against the unique serial number of the feature key dongle used by the IP Office.

Voicemail Pro Server

The Voicemail Pro service is installed on a server computer. This becomes the computer where messages and other data are stored for the mailboxes and services provided by Voicemail Pro. The server can be a Windows or Linux based server.

Multiple Servers

There are a number of scenarios where multiple Voicemail Pro servers can be supported. For example, to provide a backup Voicemail Pro server or to support multiple IP Office systems in a network. See Centralized Voicemail Pro 120.

• Voicemail Pro Client

The Voicemail Pro Client is used to administer the Voicemail Pro service. The client is a Windows application that you can install on another computer to allow remote administration of the server. Only one client can connect to the server at any time.

The version of a Voicemail Pro client used with a Voicemail Pro server should match. If the Voicemail Pro client
is used to load a call flow from an earlier version of Voicemail Pro server, you will be warned that if you edit
the call flow you will not be able to save it back to the original server. If the client is used to load a call flow
from a later version of Voicemail Pro server it will stop the action and prompt that the call flow cannot be
loaded.

• Telephone Extension

For internal extensions, the Voicemail Pro server provides message waiting indication. This is done automatically for the telephone user's own mailbox. However, the user can also be configured to receive message waiting indication for other mailboxes.

• User's Computer

In addition to accessing mailbox voicemail messages through the telephone, there is a range of methods for accessing messages from a user's computer. This can be by web browser, IMAP e-mail account, Exchange server e-mail account, and various other options. The IP Office one-X Portal for IP Office application can also be used.

• E-mail Server

Using an e-mail server, Voicemail Pro can provide a number of services. This includes the ability to send message alerts or message copies. For Exchange e-mail servers, with the forward to e-mail option, the Exchange server can be used as the message store with users accessing their messages using Exchange clients such as Microsoft Outlook, Outlook Web Access, and so on.

• ContactStore Server

In addition to taking voicemail messages, the Voicemail Pro can be used for automatic and manual call recordings. These recordings are stored in the Voicemail Pro server mailboxes. ContactStore for IP Office is an additional licensed application to which recordings can be transferred for long term storage. ContactStore supports archiving to DVD, access by web browser, and searching based on call details.

• Installation of ContactStore for IP Office is covered in its own separate installation manual. For proper functioning, install and test Voicemail Pro before installing ContactStore for IP Office.

1.1 Supported Languages

By default, the prompts installed match the installer language selection plus English. If other languages are required, they need to be selected by doing a custom installation. The installable Voicemail Pro prompts are listed in the table below. The availability of a language in voicemail does not necessarily indicate support for IP Office in a country that uses that language.

Language	WAV Folder	Fallback Selection	TTS Windows	TTS Linux
Brazilian Portuguese	ptb	> pt > en.	-	
Chinese (Cantonese)	zzh	> en > enu.	/	×
Chinese (Mandarin)	ch	> en > enu.	✓	1
Danish	da	> en.	/	7
Dutch	nl	> en.	/	7
English UK	en	en.	/	7
English US	enu	> en.	-	1
Finnish	fi	> en.	-	<i>y</i>
French	fr	> frc > en.	-	-
French Canadian	frc	> fr > enu > en.	-	-
German	de	> en.	-	-
Greek	el	> en.	-	<i>-</i>
Hungarian	hu	> en.	X	X
Italian	it	> en.	-	-
Korean	ko	> en.	-	X
Latin Spanish	eso	> es > enu > en.	-	
Norwegian	no	> en.	/	-
Polish	pl	> en.	-	
Portuguese	pt	> ptb > en.	/	-
Russian	ru	> en.	/	7
Spanish	es	> eso > en.	/	7
Swedish	sv	> en.	/	
Turkish	trk	> en.	×	×

Note: If you are using Voicemail Pro installed on Unified Communications Module, see <u>Languages Supported on UC Module Voicemail Pro 166.</u>

When the IP Office routes a call to the Voicemail Pro server, it indicates the locale for which matching prompts should be provided, if available. Within the IP Office configuration, a locale is always set for the system. However, differing locales can be set for each user, incoming call route, and short codes in addition to the default system locale.

The locale sent to the Voicemail Pro server by the IP Office is determined as follows:

Locale Source	Usage
Short Code Locale	The short code locale, if set, is used if the call is routed to voicemail using the short code.
System Locale	If no user or incoming call route locale is set, system locale is used, unless overridden by a short code locale.
Incoming Call Route Locale	The incoming call route locale, if set, is used if the caller is external.
User Locale	The user locale, if set, is used if the caller is internal.

If the prompts matching the IP Office locale are not available, the Voicemail Pro server will provide prompts from a fallback language, if available. The above table of languages lists the order of fallback selection.

If required, the language provided by a voicemail call flow can be changed using a Select System Prompt Language action.

TTY Teletype Prompts

TTY (Teletype (Textphone)) is included in the list of installable languages. TTY is a text-based system that is used to provide services to users with impaired hearing.

1.2 Voicemail Pro Licenses

The **Help | About** screen in the voicemail client can be used to check which IP Office the Voicemail Pro server is working and the licenses it has received from that IP Office.

The license keys are entered into the IP Office configuration using the IP Office Manager. If the Voicemail Pro server is installed without licenses, it will run for 2 hours and then shut down.

For IP Office Release 6 and higher, support for Voicemail Pro is enabled by the addition of a **Preferred Edition** license.

• 🦠 Preferred Edition (Voicemail Pro):

This license enables support for Voicemail Pro as the IP Office's voicemail server with four voicemail ports. A Voicemail Pro server with the **Preferred Edition** license provides the services listed below. Additional licenses can be added for additional voicemail features, these are detailed separately. The **Preferred Edition** license was previously called **Voicemail Pro (4 ports)**.

- · Mailboxes for all users and hunt groups.
- · Announcements for users and hunt groups.
- · Customizable call flows.
- Call recording to mailboxes.

- · Campaigns.
- TTS e-mail reading for users licensed for Mobile User or Power User profiles, if valid TTS licenses are available.
- Use of Conference Meet Me functions on IP500, IP500 V2, and Server Edition systems.

Section 4.

The **Advanced Edition** license enables the additional features listed below. A **Preferred Edition** license is a prerequisite for the **Advanced Edition** license.

- Support for Customer Call Reporter.
- Voicemail Pro database interaction (IVR).
- Voicemail Pro call flow generic TTS (8 ports).[1]
- Voicemail Pro Visual Basic Scripting.
- Voicemail Pro call recording to ContactStore.
 [2]
- 1. Provides up to 8 ports of TTS for use with Speak Text actions within call flows.
- 2. In a Small Community Network using centralized voicemail, this license only enables ContactStore support for the central IP Office. Remote IP Offices in the network require their own **Advanced Edition** license or a **VMPro Recordings Administrator** license.

• 🛰 Server Edition :

On IP Office Server Edition, the **Server Edition** license provides all the Voicemail Pro features that are provided by the **Preferred Edition** license on IP500 and IP500 V2.

Section Additional Voicemail Pro Messaging Ports

The required license for Voicemail Pro server support (**Preferred Edition (Voicemail Pro)**) also enables four voicemail ports. This license can be used to add additional voicemail ports up to the maximum capacity of the IP Office system (IP406 V2 = 20, IP412 = 30, IP500 = 40, IP500 V2 = 40, IP Office Server Edition = 150). This license was previously called **Additional Voicemail Pro (ports)**.

Note: If you are using Voicemail Pro installed on Unified Communications Module, see <u>Number of Simultaneous</u> <u>Users on UC Module Voicemail Pro 160</u> for the maximum capacity of the IP Office system.

Second Sec

To support ContactStore in a small community network (SCN), all the IP Offices in the SCN require either their own **Advanced Edition** license or the **VMPro Recordings Administrators** license.

• Networked Messaging:

Enables the VPNM (Voicemail Pro Networked Messaging) functionality within Voicemail Pro. Enabling VPNM is required for message exchange with remote Voicemail Pro systems and Avaya Interchange systems.

Section 11 (Mark 1998) • Section

This legacy license enables use of text-to-speech facilities using third-party TTS software with Voicemail Pro. One license per simultaneous instance of TTS usage. The IP Office **Advanced Edition** license also enables eight ports of generic TTS.

ScanSoft) :

This legacy license enables use of text-to-speech facilities using Avaya-supplied TTS software with Voicemail Pro running on a Windows server. One license per simultaneous instance of TTS usage.

• 🛰 VMPro TTS Professional :

This license enables use of all text-to-speech facilities provided by Voicemail Pro running on a Linux server. One license per simultaneous instance of TTS usage.

Note: If you plan to use Voicemail Pro installed on Unified Communications Module for centralized voicemail, also see Storage Space for Call Recordings on UC Module Voicemail Pro 16.

Legacy Licenses

The following legacy licenses are still supported by IP Office Release 6 and higher.

Substitution Subst

This legacy license is used to enable UMS voicemail services support for users set to the **Basic User** profile. Other users are enabled for UMS through their licensed user profile.

• 🛼 VMPro Database Interface :

This legacy license enables third-party database support within Voicemail Pro call flows. For IP Office Release 6 and higher, this is also enabled by the **Advanced Edition** license.

• 🛰 VMPro VB Script:

This legacy license enables Visual Basic Script support with Voicemail Pro. For IP Office Release 6 and higher, this is also enabled by the **Advanced Edition** license.

1.3 Number of Simultaneous Users

All connections between the Voicemail Pro server and IP Office are through LAN using data channels. The maximum number of data channels that can be used for voicemail operation at any moment are shown below.

IP Office	Maximum for Voicemail Pro
IP500	40
IP500 V2	40
Server Edition	150

The actual number of simultaneous users is determined by the <u>licenses for Voicemail Pro 12</u> added to the IP Office configuration. Note that some specific functions can have <u>voicemail channels reserved</u> 101 for their use or can have channel restrictions.

Note: If you are using Voicemail Pro installed on Unified Communications Module, see <u>Number of Simultaneous Users on UC Module Voicemail Pro 16</u>.

Chapter 2. Windows Installation

2. Windows Installation

Windows Server Installation

This section covers the installation of the Voicemail Pro server on a Windows server computer. Voicemail Pro 9.0 can be installed with the following IP Office systems running IP Office Release 9.0 software:

- IP Office 500
- IP Office 500v2
- IP Office Server Edition

Linux Server Installation

A Voicemail Pro server is one of the Linux components installable as part of the IP Office Application Server DVD installation. See *Avaya IP Office Application Server Installation and Maintenance* (15-160611) for details.

- The license requirements 12 on the IP Office system for supported voicemail features are the same.
- Configuration of the <u>IP Office configuration 22</u> settings for voicemail is not affected by whether the server is Windows-based or Linux-based.
- Configuration of the voicemail server setting is still done using the Windows based Voicemail Pro client application. The client can be downloaded from the Linux server for installation on a Windows client computer.

Mixing Linux and Windows Servers

In scenarios where multiple Voicemail Pro servers are used, a mix of Linux-based and Windows-based servers can be used. For details on scenarios where multiple Voicemail Pro servers are used, see Centralized Voicemail Pro 126.

Linux Server Feature Support

For a Voicemail Pro 9.0 server running on a Linux based server, the following Voicemail Pro features are currently **not supported**:

VB Scripting.

• 3rd Party Database Integration.

· VPNM.

When logged into the Voicemail Pro server using the Voicemail Pro client, the features that are not supported are grayed out or hidden. If those features are present in an imported call flow, they will not function and calls that attempt to use those features will be disconnected.

For Small Community Network scenarios where multiple Voicemail Pro servers are present, for example distributed and backup server, a mix of Linux-based and Windows-based servers are supported.

UC Module Voicemail Pro

A Linux-based Voicemail Pro server is pre-installed on Unified Communications Module and is operational with the default **Preferred Edition** license. However, the following behaviors of a Voicemail Pro server installed on Unified Communications Module are different from a standard Linux-based Voicemail Pro server.

• Supported Languages

Only the English US and English UK languages are supported for Text to Speech (TTS).

· Accessing Voicemail Pro Server

To access the Voicemail Pro server running on Unified Communications Module, use the IP address or the DNS name of the IP Office control unit that hosts Unified Communications Module.

· Backup and Restore Settings

Backup files can be saved on a USB storage. The available file paths for the USB storage are /media/sdb1 and / media/sdc1. As the storage space available on UC Module SSD is limited and primarily required for saving call recordings, use a USB storage for the backups.

· Voicemail Pro Logging Level

The default logging level is set to **Critical**.

• Number of Simultaneous Users

The maximum number of data channels that can be simultaneously used for voicemail operation is 40. However, if one-X is also enabled on Unified Communications Module, the maximum number of data channels that can be used simultaneously may reduce to 20.

Storage Space for Call Recordings

Voicemail call recordings use an approximate storage space of 1 Mb for each minute of recording. Therefore, the available storage space on UC Module SSD is limited to an estimated maximum of 400 hours of call recordings. Consider this fact if you plan to use the Voicemail Pro server installed on Unified Communications Module for centralized voicemail.

• Voicemail IP Address

IP Office hosting Unified Communications Module connects to the Voicemail Pro server installed on the card by default. The IP address of the Voicemail Pro server is automatically detected and cannot be modified.

2.1 General Installation Requirements

Here is a list of general requirements for all types of voicemail installation.

- A client computer with IP Office Manager and Microsoft .NET Framework versions 2.0 installed on it. If .NET 2.0 is not detected, you will be prompted to install it before the Voicemail Pro installation proceeds.
- An IP Office Feature Key. For details, see Avaya IP Office Standard Version Installation (15-601042).
- · Licenses based on the serial number of the IP Office Feature Key. These should include:
 - A license for Voicemail Pro and any additional voicemail ports is required. If Voicemail Pro Server is installed without a license it will run for two hours and then shut down.
 - Licenses for any other Voicemail Pro components being installed, see Voicemail Pro Licenses 12.
- Latest version of the IP Office Applications DVD or the IP Office Unified Communications Module Software along with the latest fixes and patches. To get the latest version of a required software, visit http://support.avaya.com.

Tips

- Before you begin to install Voicemail Pro, check that the computer that you are using can connect to the IP Office unit and that you can load and save a configuration file using IP Office Manager.
- Switch off any computer and hard disk sleep, power down, suspend, hibernation modes.
- Install the Voicemail Pro software using an account with full administrator rights on the computer. The service subsequently runs under that account. If you prefer, create a separate account for this purpose and configure it such that the account password does not expire.

2.1.1 Computer Specifications

The Voicemail Pro application requires various licenses entered into the IP Office configuration to control the features it offers and the number of simultaneous connections [3]. The number of simultaneous connections can be up to 40 on IP Office 5.0+ IP500 control units and up to 150 on IP Office 8.1+ IP Office Server Edition control units. The operation of Voicemail Pro can be customized to provide special services.

The Voicemail Pro software can be installed as separate Voicemail Pro client and server parts. You can perform remote administration of the Voicemail Pro server from a computer with just the Voicemail Pro client installed. A copy of the client is automatically installed locally with the Voicemail Pro server.

Source	
DVD	IP Office 8.0 Application DVD (Disk 1).
Languages	See Supported Languages 114.
IP500	✓ IP Office Preferred Edition.
IP Office Server Edition	✓ Server Edition
License	✓ See below.

The Voicemail Pro server part of the software consists of several components in addition to the core server software, these are:

Campaigns

The Voicemail Pro can be configured to run a campaign. This consists of a series of questions for which the Voicemail Pro records the callers answer or key presses. With International Time Zone (ITZ) support, the Voicemail Pro records the IP Office time and not the Voicemail Pro local time. The resulting recordings can then be played back by users. Users can use the web aspect of campaigns to perform this playback and processing of campaign recordings via their web browser. This requires an IIS web server to be run on the same computer as the Voicemail Pro software.

UMS Web Voicemail

Users can use UMS to access their voicemail mailbox using either an IMAP compatible e-mail program or through their web browser. UMS Web Voicemail requires the Voicemail Pro service to be installed on a server computer that has a pre-installed IIS. It also installs PHP if not detected as already present.

• Text to Speech (TTS)

Through adding additional licenses, the Voicemail Pro is able to use the TTS functions of Windows to speak text and numbers to callers in addition to recording prompts. This is intended mainly for scenarios where the Voicemail Pro is obtaining text and number values from a customer database.

The Voicemail Pro server part of the software consists of Text to Speech (TTS) in addition to the core server software. Through additional licenses, Voicemail Pro can use the TTS functions to speak text and numbers to callers in addition to recording prompts. This is intended mainly for scenarios where Voicemail Pro is obtaining text and number values from a customer database.

• Installation on Windows Server Operating Systems

On many Windows server computers, while the Windows Audio components are present by default they are not always enabled. If this is the case the playback of voice prompts may be 'choppy' and the TTS (if installed) will not work. However, enabling Windows Audio does not require the server computer to have a sound card installed.

- 1. Verify that you have full administrator rights for the computer.
- $2.\, \text{Click Start} \mid \textbf{Administrative Tools} \mid \textbf{Services}.$
- 3. If the status of the **Windows Audio** service is not **Started**, start the service and set the **Startup Type** to **Automatic**.

Notes:

- 1. Do not use the **Large Fonts** setting, as it may cause options on some screens to become inaccessible.
- 2. For a good connection speed, use a 100 Mbps network card.
- 3. Free <u>disk space requirements</u> are also subject to the message storage required.
- 4.

Basic Voicemail Pro

Minimum Hardware Requirements		Operating System Support		
RAM	256MB	Server OS:	Service	Client
Hard Disk Free Space	2GB*	2003 Server	-	-
Processor:		2008 Server	-	1

Minimum Hardware Requirements		Operating System Support		
- Pentium	P4 1.4GHz	Windows 2012 (64-bit)	y	7
- Celeron	Any 1.7GHz	Client OS:		
- AMD	Any 1.4GHz.	XP Professional	7	7
*Add 1MB per minute of message and prompt storage space as		Vista	1	1
per your requiremer	ts.	Windows 7		1
		Windows 8	1	1

Voicemail Pro plus UMS Web Voicemail and/or Campaigns

Minimum Hardware Req	uirements	Operating System Suppor	:	
RAM	512MB	Server OS:	Service	Client
Hard Disk Free Space	2GB*	2003 Server	/	7
Processor:		2008 Server	-	7
- Pentium	P4 2.8GHz	Windows 2012 (64-bit)	7	7
- Celeron	Not tested.	Client OS:		
- AMD	Athlon XP 3000+, Athlon 64	XP Professional	×	×
*Add 1MB per minute of m	essage and prompt storage space as	Vista	X	×
per your requirements.	essage and prompt storage space as	Windows 7	×	×
		Windows 8	7	

- Both Web Campaigns and UMS Web Voicemail require the IIS web server on the Voicemail Pro server computer to be enabled. On Windows 8 and Windows 2012, you also need to install ASP.NET 3.5.
- UMS Web Voicemail will install PHP if not detected as already installed.

Voicemail Pro plus IVR and or TTS

Minimum Hardware Rec	uirements: Basic Voicemail Pro	Operating System Suppor	t	
RAM	512MB	Server OS:	Service	Client
Hard Disk Free Space	20GB*	2003 Server	-	-
Processor:		2008 Server	J	1
- Pentium	P4 2.8GHz	Windows 2012 (64-bit)	7	7
- Celeron	Not tested.	Client OS:		
- AMD	Athlon XP 3000+, Athlon 64	XP Professional	J	7
Add 1MR per minute of me	seage and prompt storage space as ne	Vista	×	×
Add 1MB per minute of message and prompt storage space as pe your requirements.		Windows 7	X	×
Generic TTS only. The current ScanSoft TTS provided with		Windows 8	1	7

• If the database being queried is located on the Voicemail Pro server, the query speed of the database will be affected by the amount of memory available. You must take into account the memory requirements of the database being queried.

Pre-requisites

• For systems running Windows 8 or Windows 2012, install .<u>NET Framework 3.5 Features</u>.

Voicemail Pro and IP Office Customer Call Reporter

Voicemail Pro and IP Office Customer Call Reporter can be run on the same server up to a maximum of 16 Voicemail Pro ports. Supported on a Dual Core CPU of 2.4Ghz and higher. The separate requirements of Voicemail Pro and Customer Call Reporter must be met.

Ports

The Voicemail Pro service uses the following ports.

Port Number	Туре	Description	
25	ТСР	Used to listen for SMTP connections.	
37	UDP	Used to receive time requests (RFC 868).	
69	UDP	Used to interchange the status, configuration, and program data.	
80	ТСР	Used to service HTTP requests (Web Voicemail, mobility clients, one-X Portal for IP Office) for Voicemail Pro server running on Windows.	
143	ТСР	Used to service IMAP4 requests.	
514	UDP	Used as the default port to write syslogs to a syslog server.	
993	ТСР	Used to service IMAP4 requests over SSL.	
50791	UDP	Used to receive requests from IP Office PBX.	
	ТСР	Used to receive requests from one-X Portal for IP Office and to receive connections from the Voicemail Pro Client application.	
50792	ТСР	Used to communicate with the MAPI Proxy service.	
8000	ТСР	Used to service HTTP requests (Web Voicemail, mobility clients, one Portal for IP Office) for Voicemail Pro server running on Linux.	

Note that Voicemail may use additional ports for connection to services such as third-party database or Microsoft Exchange.

Notes:

1. Do not install Voicemail Pro server on a computer that runs the Domain Name System (DNS) Server service, as the DNS Server service might prevent the Voicemail Pro service from obtaining the ports that the Voicemail Pro service requires to function correctly.

If you must install Voicemail Pro on a computer running the DNS Server service, refer to the following for the additional configuration requirements:

http://technet.microsoft.com/en-us/library/ee683907%28WS.10%29.aspx

http://support.microsoft.com/kb/956188

http://support.microsoft.com/kb/929851

2. Do not install Voicemail Pro on a computer that runs an Exchange server, as the SMTP configuration settings of Voicemail Pro server might create conflicts with those of the Exchange server.

2.1.2 Single Server Support

The following scenarios are supported for combining IP Office server applications onto a single Windows server computer.

In all cases, the individual requirements of each application as if installed on a separate server are still applicable. Also, depending on the application combination, additional restrictions and requirements may be applied as detailed below.

	Voicemail Pro	Customer Call Reporter	One-X Portal for IP Office	Minimum IP Office Release	Minimum Computer Specifications
1.	16 Ports	150 Agents	-	Release 5.0	As per each application.
2.	8 Ports (4 TTS)	-	50 Simultaneous users.	Release 6.0	2GHz Dual Core, 4GB RAM, Windows Server 2008 R2 (32 or 64- bit).
3.	8 Ports (4 TTS)	30 Agents	50 Simultaneous users.	Release 6.0	2GHz Quad Core, 6GB RAM, Windows 2008 64-bit.
4.	16 ports (8 TTS)	50 Agents	150 Simultaneous users.	Release 6.0	CCR run in Windows 2003 on a virtual server.

- Voicemail Pro includes UMS, VB Scripting and 3rd party database operation. It also includes the installation of ContactStore if required.
- Both ContactStore and one-X Portal for IP Office use Tomcat servers as part of the application. For scenarios with both installed, the redirect port setting of the ContactStore's Tomcat server should be configured to a port other than 8080.
- When used in a virtual server configuration, Customer Call Reporter and one-X Portal each require a 2GB RAM virtual machine. Voicemail Pro and ContactStore each require a 1GB RAM virtual machine.

2.1.3 Virtual Server Support

Operation of IP Office server applications, including Voicemail Pro, is supported using the following virtual servers.

- VMWare Server.
- Microsoft Virtual Server 2005 R2.
- Microsoft Server Hyper-V.

2.1.4 Network Requirements

The computer should be configured and tested for TCP/IP networking.

The Voicemail Pro server computer must be connected to the IP Office Control Unit directly or through a LAN switch.

If directly connected, changing the settings of the computer network card to match the IP Office control unit can resolve some issues. This should be done according to the computer or network card manufacturer's instructions. The options for IP Office LAN ports are:

• All IP Office LAN ports are 10Mbps/100Mbps auto sensing.

If not directly connected, using any of the above settings must be supported and matched by the intervening network equipment.

- The computer must have a static IP address.
- If the IP Office is acting as a DHCP server, it defaults to using 192.168.42.2 to 192.168.42.201 for DHCP clients. This leaves 192.168.42.202 to 192.168.42.254 for devices that require fixed IP addresses.

2.1.5 Disk Space Requirements

The following are only approximations:

- At least 2GB of free disk space is required on the operating system drive (by default c:), regardless of to which
 drive Voicemail Pro is actually installed.
- A compact Voicemail Pro installation requires 130MB.
- A typical installation requires approximately 255MB.
- A custom installation requires up to 2GB of disk space. However, prompts and recorded messages consume an additional 1MB of disk space per minute.
- For a busy environment you can expect to require at least 1000 minutes of message recording space, that is 1GB.
- If you are installing the Client only, you can expect to require at least 170MB.

2.1.6 Web Server Operation

If a Web browser access is required, the Microsoft IIS Web Server must be installed on the server computer **before** Voicemail Pro is installed:

- Microsoft web server products run as services and require Voicemail Pro to also run as a service.
- Internet Information Server 5.0 or higher is required.

2.1.7 ContactStore Operation

ContactStore is the current IP Office Voice Recording Library (VRL) application. For details on ContactStore, see *Avaya IP Office ContactStore* (15-601037).

You must do the following to use ContactStore with Voicemail Pro:

- Install the latest version of IP Office ContactStore along with the available patches and verify its operation before you install Voicemail Pro.
- Use different hard disk partitions to store the archived IP Office ContactStore messages and the Voicemail Pro
 messages. Alternatively, you may use a different hard disk to store the archived IP Office ContactStore messages,
 or install IP Office ContactStore on a different computer.
- As you require additional <u>Voicemail Pro licenses</u> 12 to use ContactStore to store recordings, enter an **Advanced Edition** license key on IP Office hosting the Voicemail Pro server. If you are using a Small Community Network, enter either **Advanced Edition** license keys or **VMPro Recordings Administrators** license keys on other IP Offices in the network that you want to use with ContactStore.
- Use RAID 1 or RAID 5.
- Use a DVD recorder for long-term archiving.
- Use a hard drive that has enough space to store the archived recordings. You need approximately 7.2MB of hard disk space to store an archived recording of one hour duration.
- Verify that no other web service running on the host computer is using the port address 8888, as the system uses
 the non-configurable port address 8888 to access the archived messages stored in IP Office ContactStore through
 a web interface.

2.1.8 SFTP Server Requirements

To be able to use some of the features of Voicemail Pro server (for example, the remote backup operation, VRLA, and so on), you must install and configure an SFTP server. You can choose to install any of the commercial or free SFTP server applications. However, ensure the following for the SFTP server to work with the Voicemail Pro server:

- Configure port 22 to accept incoming connections to the SFTP server.
- Create a separate user account on the SFTP server for use with the Voicemail Pro server.
- If the SFTP server application requires you to set permissions for the user account, set the **Read**, **Write**, and **Delete** file permissions and the **List**, **Create**, and **Delete** folder permissions for the user account.

SFTP configuration requirements for VRLA feature on Linux-based server

For the VRLA feature to work on a Linux-based Voicemail Pro server, you must:

- $\bullet\,$ Install the SFTP server on the computer that runs the ContactStore application.
- Set the Home directory of the user account such that the VRL directory (specified by the value of the registry entry HKEY_LOCAL_MACHINE->SOFTWARE->Network Alchemy->Voicemail->Directories->VRLDir on a 32-bit system and HKEY_LOCAL_MACHINE->SOFTWARE->Wow6432Node->Network Alchemy->Voicemail->Directories->VRLDir on a 64-bit system) lies inside the SFTP directory structure. For example, if you set C:\asdf\xyz as the VRL directory, then set either C:\asdf\xyz or C:\asdf as the Home directory of the SFTP user account.

Testing and troubleshooting the SFTP connection

- 1.Log in to the command line interface as the root user on the Voicemail Pro server.
- 2.Enter Sftp <username>@sftpIP, where <username> is the username of the SFTP user account.
- 3. Enter the password of the SFTP user account. The SFTP connection should get established.
- 4. If the SFTP connection is not established, then:
 - a. On the computer that runs the SFTP server, check if any other application is using port 22 for an SFTP connection. If yes, stop the application.
 - b. Clear all the entries in /root/.ssh/known_hosts that are associated with the IP address of the SFTP server.

2.2 Server/Client Installation

The Voicemail Pro installation software for Windows offers a number of different types of installation. The key types are client only, compact, typical and custom. These differ in the components installed as detailed in the table below.

Component Sub Component		Installation Type			Туре	Notes		
		Client	Compa ct	Typic al	Custo m			
Voicemail Pro	Voicemail Pro Client	7	7	7	7			
	Voicemail Pro Service	×	\	,	'			
	Languages		,	,		Installs the prompts that best match the server computer locale plus English prompts. For an installation with additional languages use the Custom installation option.		
Voicemail Pro Campaign Web Component		×	×	7	1	Not available for installation on an XP Pro server.		
Web Voicemail (UMS)		×	×	×		Only available for installation on server operating systems.		

Before you begin:

- 1. Log on to the server computer using the user account under which you intend the Voicemail Pro server or service to run. This user account must have full administrator rights to the server computer. You must update the Voicemail Pro service password if the user account password is changed.
 - To ensure that the voicemail service does not get interrupted, create a new user account called Voicemail and configure it such that it has full administrator rights on the computer and the account password does not expire.
- 2. In IP Office Manager, check that the correct <u>licenses for Voicemail Pro 12</u> have been installed and show a status of **Valid**.
- 3. For installations other than client-only and compact, check that the required pre-installation processes have been completed.
 - Web Campaigns Installation 29
 - Voicemail E-mail Installation 57^h
 - UMS Web Voicemail 31
 - IMAP Installation 33
 - Web Voicemail Installation 36
 - UMS Exchange Configuration 434
 - Centralized Voicemail Pro 126
 - Installing Text to Speech Features 78
 - Voicemail Private Networked Messaging (VPNM) Installation 148

Installation on Windows Server Operating Systems

On many Windows server computers, while the Windows Audio components are present by default they are not always enabled. If this is the case the playback of voice prompts may be 'choppy' and the TTS (if installed) will not work. However, enabling Windows Audio does not require the server computer to have a sound card installed.

- 1. Verify that you have full administrator rights for the computer.
- 2. Click Start | Administrative Tools | Services.
- 3. If the status of the Windows Audio service is not Started, start the service and set the Startup Type to Automatic.

Windows	Installation:	Server/Client	Installation

To install the Voicemail Pro software components:

- 1. Insert the IP Office Applications DVD. Click on the link for Voicemail Pro and then double-click on setup.exe.
- 2. The **Choose Setup Language** menu is displayed. This language is used for the installation process and does not affect the language prompts that are installed.
- 3. Select the language for the installation process. Click **OK**.
- 4. The Preparing Installation menu is displayed.
 - Voicemail Pro requires Microsoft .NET 2.0 Framework. If this is not detected, you will be prompted to install it. Click **Yes** to install Microsoft .NET 2.0 Framework.
 - If the Modify, repair or remove the program window is displayed, follow the upgrade process 314.
- 5. The **Welcome** window is displayed. Click **Next**.
- 6. The Customer Information menu is displayed.
 - Use the default names or enter a user and company name. These settings do not affect the Voicemail Pro installation.
 - Select the option Anyone who uses this computer (all users).
 - Click Next
- 7. The Choose Destination Location menu is displayed. Unless specifically required, for ease of maintenance, use the proposed folder location. Click Next.
- 8. The **Messaging Components** menu is displayed.
- 9. Select *Voicemail Pro (Full)* or *Voicemail Pro Client Only*. Click **Next**. If *Voicemail Pro Client Only* was selected, go to step 14 26.
- 10. The Setup Type menu is displayed. Select Compact, Typical or Custom and click Next.
 - If the option selected was **Custom**, the **Select Features** menu is displayed. Select the components required for the installation and click **Next**.
- 11. The **Service Account Name** window is displayed. This window is used to select the account under which the Voicemail Pro services will be run following installation.
 - Enter the user name and password of the account to use. Alternatively, click **Browse** and select a name from the list of available computer or network accounts.
 - Click **Next**. The account name and password are validated. If the validation fails, the system prompts you whether to create a new account that matches the details entered.
- 12. The **Select Program Folder** menu is displayed. By default, the program folder for the Voicemail Pro client is set to IP Office. For ease of maintenance use this option unless there is a specific reason to use a different folder. Click **Next**.
- 13. The **Start Copying Files** menu is displayed. It shows a summary of the components that are about to be installed. Check that this list is as expected. If for any reason the details are not what you expect, click **Back** and make the required changes. When you are satisfied that the details are correct, click **Next** to start copying the files.
- 14. The **Setup Status** menu is displayed. This shows you the progress of the file installation. For a client only installation, the software installation process is now completed.
 - **Note:** You may get the prompt to reset IIS. If so, click **Yes** to reset IIS. If you click **No**, some of the functionalities may not be available until you restart IIS.
- 15. The **InstallShield Wizard Complete** menu is displayed.
- 16.Depending on the operating system and the components installed you may be prompted to restart the computer. If so select **Yes, I want to restart my computer now**.
- 17.Click Finish.
- 18.If the computer restarts, you will need to log in to continue the installation process.
- 19. The installation process continues by requesting a number of configuration settings used by the Voicemail Proservice:
 - 1. The IP Office Voicemail Pro E-mail Settings window is displayed. This is used to enter the account that the voicemail pro server should use for e-mail functions. Enter the name of the e-mail account to use or click Browse and select an account to use. Click Next.
 - 2. The IP Office Voicemail Pro SMTP E-mail Settings window opens.
 - 3. In the Mail Server box, type the name of the SMTP mail server or use the name that is proposed. This should be the fully qualified domain name.
 - 4. In the **Port Number** box, type the number of the receiving port on the SMTP mail server. The default is 25.

- 5. To enforce server authentication, check the **Server Requires Authentication** box. This is optional. If you check it you also need to provide the Account Name and Password that need to be entered. You can also choose whether or not to set the Use Challenge Response Authentication option.
- 6. Click **Finish**. The e-mail settings are validated. An error message is displayed if the system fails to connect to an SMTP server. Click **OK** to acknowledge the message.
- 20. You have now finished installing the Voicemail Pro server and client software.
- 21.If you use custom installation to install a specific Voicemail Pro feature, refer to the appropriate section for details of actions that need to be performed after the installation of the Voicemail Pro server software.
 - Web Campaigns Installation 29
 - Voicemail E-mail Installation 57
 - UMS Web Voicemail 31
 - IMAP Installation 33
 - Web Voicemail Installation 36
 - UMS Exchange Configuration 43h
 - Centralized Voicemail Pro 128
 - Installing Text to Speech Features 78
 - Voicemail Private Networked Messaging (VPNM) Installation 148

Initial Configuration

Following installation of the server and client, you should check operation by using the client to connect to the server.

- 1. Click Start | Programs | IP Office | Voicemail Pro. The Voicemail Pro Client starts and the main window opens.
- 2. Change the default remote administrator account details:
 - a. In the navigation panel, click on Voicemail Pro Administrators. There should be one account called Administrator.
 - b. Double-click on the account (or right click and select **Modify**).
 - c. Change the Password and Confirm Password to a new value than the default (Administrator).
- 3. Initialize the server call flow:
 - a. Click the Save and Make Live icon.
 - b. Select **Yes**. The file **root.vmp** is created on the server. This is the compiled non-editable version of the call flow that is used by the server.
 - c. Voicemail operation can now be tested from an extension by dialing *17.
- 4. You can now start configuring the operation of the Voicemail Pro server, for example, changing the system preferences 104.

2.2.1 Modifying the Installed Components

- 1. Open the Windows Control Panel.
- 2. Click **Programs | Programs and Features**.
- 3. In the list of installed programs, select **IP Office Voicemail Pro** and click **Change**. The installation wizard for IP Office Voicemail Pro opens up.
- Select Modify and click Next.
 The Select Features menu is displayed.
- 5. Select the check boxes for all the features in the list that you want to install.

Note: If you clear the check box for a feature that is already installed, the installation wizard will uninstall the feature.

- 6. Click Next.
 - The Service Account Name window is displayed.
- 7. Continue with the installation wizard following the steps from the **To install the Voicemail Pro software components** section of <u>Server/Client Installation</u> 24.

2.2.2 Web Campaigns Installation

The web campaigns component of Voicemail Pro requires IIS to be installed and running on the server computer.

- 1. Check that IIS is installed and running on the server computer.
 - Windows Server 2008 R2 IIS does not support legacy IIS applications such as Campaigns by default. This is
 rectified by reinstalling IIS from the Windows installation disk and selecting Legacy IIS support during the
 installation.
- 2. Check that the server computer can be browsed from the other computers on the customer network.
- 3. If the Voicemail Pro server software has not yet been installed:
 - Run the <u>Voicemail Pro software installation</u> 4 and select **Voicemail Pro (Full)**.
 - Select either *Typical* or *Custom*. If *Custom* is selected, select *Voicemail Pro Campaign Web Component* in the list of components.
- 4. If the Voicemail Pro server software is already installed:
 - Modify the installed components and select Voicemail Pro Campaign Web Component in the list of components.

Configuring Windows Server 2003 (64 bit) for web campaigns

The web sites that Voicemail Pro support are 32 bit application. To support Voicemail Pro on Win 2003 (64 bit) IIS 6, you must enable the IIS application pool flag Enable32BitAppOnWin64 before starting the installation.

Use this procedure to enable the flag Enable32BitAppOnWin64.

- 1. Click Start > Run.
- 2. Type cmd and click **OK**.
- 3. Run the following command to enable the 32-bit mode:

cscript %SYSTEMDRIVE%\inetpub\adminscripts\adsutil.vbs SET W3SVC/AppPools/Enable32bitAppOnWi 4.After executing the command start with Voicemail Pro installation.

• Caution:

When you enable the Enable32BitAppOnWin64 flag, the existing 64 bit websites might fail.

Windows 2008 Server

The following configuration changes are required for IIS version 7 after installation of the Voicemail Pro web campaigns component.


- 5. Click Start | Administrative Tools | Internet Information Services (IIS) Manager.
- 6. In the **Connections** pane, click the server node in the tree. The server **Home** page is displayed.
- 7. In Features View, double-click Handler Mappings.
- 8. Click Edit Feature Permissions.
- 9. Check the **Scripts** and **Execute** check boxes.
- 10.Click OK.
- 11.In the **Connections** pane, expand the server node in the tree.
- 12.Expand the **Sites** node, then expand the **Default Web Site** node, and select **Campaign**. The **Campaign Home** page is displayed.
- 13.In Features View, double-click Authentication.
- 14. Click ASP .NET Impersonation.
- 15.In the Actions pane, click Disable.

2.2.3 The Voicemail Pro Services

If you have installed Voicemail Pro successfully and rebooted the server computer, then the voicemail service starts automatically. However, you can restart the service manually, if required.

To check/restart the Voicemail Pro Service:

1. Click Start | Administrative Tools | Services.

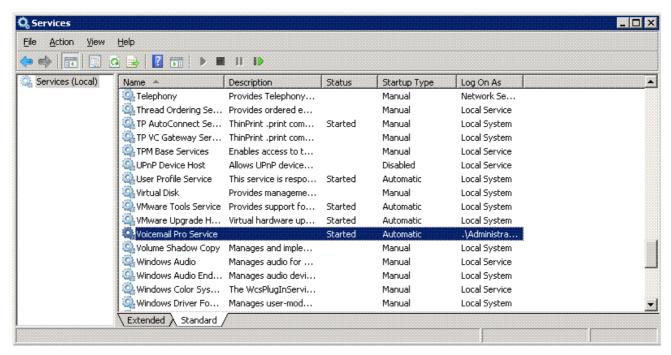

- 2. The Voicemail Pro Service should be visible. Its Status should be Started and the Startup Type should be set to Automatic. Other services may be present depending on the installed Voicemail Pro features. The Voicemail Pro Service is the main Voicemail Pro service. This is the only service that needs to be stopped and restarted. It will stop and restart the other services that it uses.
- 3. Close Services.

Setting the Voicemail Pro Service or Computer to Restart Automatically

The following action is optional. If a fault causes the Voicemail Pro service to stop, the fault should be investigated and fixed. However, setting the options to restart the services or the computer automatically will minimize the disruption to the Voicemail Pro users.

- 1. Click Start | Administrative Tools | Services.
- 2. Right-click Voicemail Pro Service and select Properties.
- 3. Select the **Recovery** tab.
- 4. Select the items in the drop-down lists to specify the action that the computer must take in case of failures.

Using a Batch File to Start Services

In some instances, certain computers might not respond quickly enough to start all of the Avaya services in the correct order. In this circumstance, it is advisable to create a batch file which delays the start of these services until the computer is fully running.

Avaya IP Office Services can be started successfully at system start-up using a scheduled task that initiates the batch file below. This batch file ensures that the services will start successfully and in the correct order.

- 1. Set all Avaya services listed below to Manual start. Do not include Key Server.
- 2. Create the batch file below and save it to %SYSTEMROOT%. Only include lines for the services which are installed.

```
@echo off
rem Wait 60 seconds before execute.
timeout /t 60
net start Voicemail Pro Service
```

3. Create a scheduled task to start the batch file at system start-up.

2.3 Upgrading to Voicemail Pro 9.0

This section describes how to upgrade Voicemail Pro.

Voicemail Pro 9.0 supports upgrade from only two previous versions of Voicemail Pro. To upgrade from earlier versions of Voicemail Pro, you must first upgrade your setup to one of the two previous versions.

To upgrade to Voicemail Pro 9.0 from the two previous versions:

- 1. Insert the **IP Office Applications DVD**. Click on the link for **Voicemail Pro** and then double-click on **setup.exe**. The system displays a prompt to select the installation language.
- 2. Select the installation language, and click **OK**.

The system displays the IP Office Voicemail Pro <Installed Release> is current installed. Would you like to do a major upgrade to IP Office Voicemail Pro 9.0? message.

Click Yes.

The system displays the **Select Features** dialog box.

- 4. Select the items that you want to install.
- 5. (Optional) If you want to uninstall an item that is already installed, clear the check box corresponding to item in the list.
- 6. Click **Next**.

The system displays the **Select account name** dialog box.

7. Click Next.

After validating the account details, the system displays the Start Copying Files dialog box.

8. Click **Next** to start the upgrade.

The system displays the **Setup Status** dialog box, which displays the progress of the upgrade.

9. After the installation is complete, click Finish.

The system displays the **E-mail settings** dialog box.

10.Enter your e-mail account details and click Next.

The system displays the SMTP E-mail settings dialog box.

11. Enter your SMTP E-mail details and click Finish.

The system validates the SMTP settings that you enter and displays the **Do you wish to start the service now?** message.

Note: If an error occurs, the system also displays the SMTP Error 1461.

12 Click **Yes**

The installation of the Voicemail Pro 9.0 is complete.

Dial *17 from any extension to test the system. The system should play the mailbox announcement.

Note: After upgrade, the general system preference **Client/Server Connection Timeout (mins)** is reset to the default value **5**.

2.4 UMS Web Services

Voicemail Pro supports user mailboxes and hunt group mailboxes to be accessed using the additional methods listed below.

• IMAP E-mail Client Support

This method supports mailbox access using any e-mail client that supports IMAP, for example Outlook and Lotus Notes. The Voicemail Pro server computer acts as the IMAP server.

Web Voicemail Access

This method supports mailbox access using a web browser. Messages can be played back to an IP Office telephone extension or through the computer if the browser is audio enabled. Web Voicemail requires the Voicemail Pro server to also run IIS and PHP.

• UMS Exchange Configuration

A user or group can be configured to have their voicemail messages forwarded to the inbox of an Exchange server e-mail account. Telephone, including Visual Voice, mailbox access is redirected to that e-mail inbox as the store for voicemail messages. Alternatively the user can access their voicemail messages using Outlook 2007 or any other mechanisms supported by the Exchange server. Voicemail messages in an Exchange 2007 inbox are not visible to UMS IMAP and UMS Web Voicemail, however Exchange 2007/2010 provides its own methods to use IMAP and web browsing with Exchange mailboxes.

Use of these options requires the user to be licensed, either using an appropriate IP Office user profile license or the legacy UMS Web Services license.

Feature	Web Voicemail	IMAP Client	Exchange 2003	Exchange 2007	Exchange 2010
Playback via computer.	1	/	X	/	/
Playback via User Extension.	y	×	X [1]	X [1]	X [1]
Save message Wav to computer.	×	V	×	/	· ·
Forward messages to other voicemail mailbox.	7	×	×	×	×
Forward messages to other e-mail mailbox.	×	/	X	/	· ·
Undelete manually deleted messages.	<i>J</i>	-	X	1	· ·
Mark message as unread.	7	-	×	1	· ·
Change voicemail password.	1	×	X	X	X
Show Message Types	Web Voicemail	IMAP Client	Exchange 2003	Exchange 2007	Exchange 2010
- New (Unread).	-	✓	×		
- Old (read).	7	7	X	1	-
- Saved.	1	-	X	X	X
- Priority.	J	-	×	1	1
- Private.	X [2]	X	×	1	1
- Deleted.	7	-	×	1	J


^{1.} Exchange Unified Messaging supports the playback of messages through a range of options controlled and configured on the exchange server.

^{2.} Private messages are not indicated, however the web voicemail does not support the forwarding of private messages.

2.4.1 IMAP Installation

Voicemail Pro supports mailbox synchronization with e-mail clients that can support IMAP (Internet Message Access Protocol) accounts. Examples are Outlook, Outlook Express and Lotus Notes.

Once configured, the IMAP folder and the mailbox are synchronized whenever the IMAP folder is opened. The method of indication of the different message types will depend on the e-mail client being used and is not controlled by the Voicemail Pro.

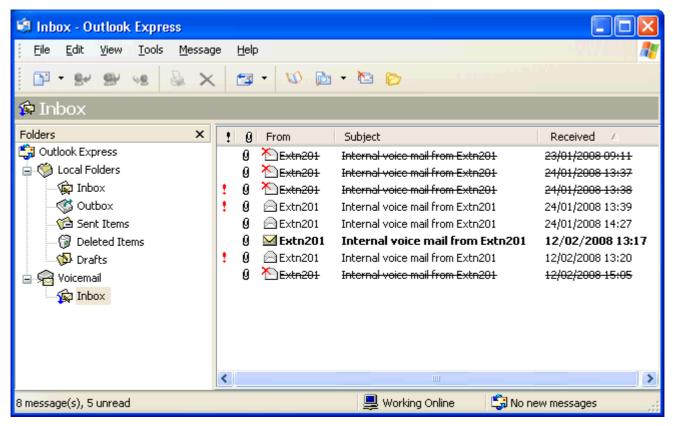

The number of mailboxes that can be configured for IMAP and/or web access is controlled by licenses.

Installing the Voicemail Pro IMAP Server

The IMAP server is installed as a part of the Voicemail Pro service installation. It uses the IP address of the Voicemail Pro server computer and runs on the standard IMAP port 143. To prevent any conflicts with the Voicemail Pro IMAP server, do not run any other IMAP server on the same computer.

Licensing IP Office for Web Services

UMS web services can be licensed in a number of ways by licenses added to the IP Office configuration:

User Licensing

User licensing is done as follows.

- Users whose Profile is set to Teleworker User or Power User can be licensed using the Teleworker Profile or Power User Profile licenses.
- User's whose **Profile** is set to **Basic User** can be licensed using the legacy **UMS Web Services** licenses.

• Hunt Group Licensing

Hunt groups are licensed by **UMS Web Services** licenses.

- 1. Start IP Office Manager.
- 2. Receive the configuration from the IP Office associated with the Voicemail Pro server.
- 3. In the **Licenses** section, add the required licenses.
- 4. Merge the configuration back to the IP Office and then receive the configuration again.
- 5. In the Licenses section check that the License Status of the licenses is now shown as Valid.
- 6. Start the Voicemail Pro client
- 7. Select Help | About.
- 8. The screen should list the **Web Services** as **Started** and should show the number of UMS licenses.

Configure Users for UMS

- 1. Start IP Office Manager.
- 2. Receive the configuration from the IP Office system hosting the user.
- 3. Select **Wuser** and then select the required user.
- 4. Set their Profile to either Teleworker or Power User.
- 5. Select the Voicemail tab. Enable UMS Web Services. Click OK.
- 6. Merge the configuration back to the IP Office.

Configuring Hunt Groups for UMS

Access to hunt group mailboxes using UMS is supported for Voicemail Pro 5.0+.

- 1. Start IP Office Manager.
- $2. \, \text{Receive}$ the configuration from the IP Office system hosting the hunt group.
- 3. Select the hunt group.
- 4. Click on the Voicemail tab.
- 5. Enable UMS Web Services. Click OK.
- 6. Merge the configuration back to the IP Office.

Configuring a User E-mail account

The exact method of configuration of an IMAP account depends on the IMAP client being used by the user. For example it may be required to enable some field with dummy data in order for the e-mail client to accept the account even though those settings are not used by the Voicemail Pro IMAP server.

The general details that are required are:

IMAP Account Setting	IP Office Value
Incoming Server	Voicemail Pro server IP address or domain name address.
Account Name	User name or extension number.
Password	User voicemail code.

Example: Outlook


- 1. Select **Tools** and then **Options**.
- 2. Select Mail Setup and then click E-mail Accounts.
- 3. Select Add a new e-mail account.
- 4. Select **IMAP** as the server type.
- 5. In **Server Information for Incoming mail server** and **Outgoing mail server** enter the IP address or domain name address of the Voicemail Pro server computer.
- 6. In **Logon Information** enter the user's extension number and voicemail code as the **User Name** and **Password**
- 7. Click Next.

Example: Outlook Express

- 1. Select Tools and then Accounts.
- 2. Select Add and then Mail.
- 3. Enter a descriptive name such as Voicemail and click Next.
- 4. Enter an e-mail address. This is not used but a value must be entered to move to the next screen. Click **Next**.
- 5. Set My incoming mail server is a to IMAP.
- 6. In the **Incoming server** field enter the IP address or domain name address of the Voicemail Pro server computer.
- 7. Enter a value in the **Outgoing mail server** field. This is not used but a value must be entered to move to the next screen. Click **Next**.
- 8. For **Account Name** enter the user's extension number or name in the IP Office configuration.
- 9. For **Password** enter the user's Voicemail Code.
- 10.Click Next and then Finish.

2.4.2 Web Voicemail Installation

Voicemail Pro 4.2+ support web access to user mailboxes. Users are then able to play their messages, mark them as saved or deleted, or forward messages to another mailbox. Playback is through an IP Office extension or through the audio facilities of the computer.

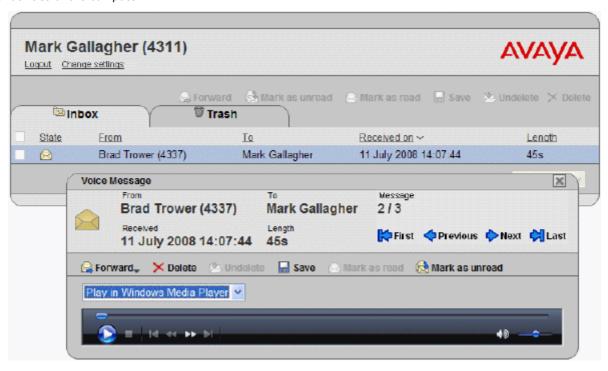

Web Voicemail Installation Requirements

The Web Voicemail component is selectable as part of a custom Voicemail Pro installation. Note the pre-requisites below before doing the Web Voicemail installation.

IIS Web Server

Must be installed on the computer that runs Voicemail Pro service before the Voicemail Pro Web Voicemail component is installed.

PHP

Web Voicemail uses PHP. If an existing PHP is not detected, the Voicemail Pro installation will install its own PHP.

Licenses

The use of Web Voicemail and the number of users who can be configured to access it are controlled by the UMS Web Services license entered in the IP Office configuration.

UMS web services can be licensed in a number of ways by licenses added to the IP Office configuration:

User Licensing

User licensing is done as follows.

- Users whose Profile is set to Teleworker User or Power User can be licensed using the Teleworker Profile or Power User Profile licenses.
- User's whose **Profile** is set to **Basic User** can be licensed using the legacy **UMS Web Services** licenses.

Hunt Group Licensing

Hunt groups are licensed by **UMS Web Services** licenses.

Computer Name\URL

The computer name is used as part of its URL on the network. Set the name to something that appropriately indicates its purpose and that can be used as part of the URL for the web server within the customer's domain.

Remove IMS

Voicemail Pro UMS is not supported on systems that are using Voicemail Pro IMS. IMS must be removed before UMS can be selected for installation.

User and Browser Requirements

For users to access Web Voicemail they require a web browser that meets the following requirements:

• Javascript Enabled Web Browser

Web Voicemail is tested against the following browsers. Other browser can also work if they support JavaScript and CSS.

- Internet Explorer V8.0 or higher
- Mozilla Firefox V3.0 or higher.
- Opera V10.0 or higher.

· Computer Playback

Using browser access, you can playback messages either via an IP Office extension or through the web browser. Avaya test browser playback using the following Windows media players:

- Windows Media Player 10.
- · Windows Media Player 11.
- Quick Time 7.4.
- VLC 0.8.

• User Name and Password

Once enabled for UMS Web Services in the IP Office configuration, to log on using Web Voicemail, the user will need to know their **Name** and **Voicemail Code** as set in the IP Office configuration. Note that this is the **Name** and not the **Full Name**.

IIS Configuration Requirements for Windows Server 2003

If you are using the Windows 2003 Server operating system, Web Voicemail does not work if you do not enable the CGI Web service extension in IIS Manager before the installation of Web Voicemail. If you install ASP.NET from a Web download or as part of an application such as Visual Studio .NET, you also need to enable the ASP.NET Web service extension in IIS Manager.

Note:

The web sites that Voicemail Pro support are 32 bit application. To support Voicemail Pro on Win 2003 (64 bit) IIS 6, you must enable the IIS application pool flag Enable32BitAppOnWin64 before starting the installation.

Proceed as follows to enable the Web service extensions:

- 1. Click Start | Administrative Tools | Internet Information Services (IIS) Manager.
- 2. In the left pane, expand the server node and click **Web Service Extensions** in the tree.
- 3. In the right pane, select the Web service extension that you want to enable, and then click Allow.

Note: If you use the **Configure Your Server** wizard or the **Add or Remove Programs** dialog box to install ASP.NET, ASP.NET Web service extension is automatically enabled in IIS Manager.

Voicemail Pro Software Installation with Web Voicemail Component

The Web Voicemail component is installed as part of a Custom Voicemail Pro installation.

- Verify that IIS is installed and running on the Voicemail Pro server computer. Check that it can be browsed from user computers.
 - While the server can be browsed by IP address, the URL used by users will be based on the server's computer name within the customer domain. Check that web server can be browsed from user computers using the server's computer name as part of the URL.
- Insert the IP Office Applications DVD. Click on the link for Voicemail Pro and then double-click on setup.exe.
 The Choose Setup Language window opens.
- 3. When asked for the type of Voicemail Pro install to perform, select Voicemail Pro (Full).
- 4. On the next screen select **Custom**.
- 5. In the list of components scroll down and select **Web Voicemail**. Do not change any of the other selections unless you understand the requirements for those components.
- 6. Follow the remainder of the installation process and reboot the Voicemail Pro server when required.

Licensing IP Office for Web Services

UMS web services can be licensed in a number of ways by licenses added to the IP Office configuration:

User Licensing

User licensing is done as follows.

- Users whose Profile is set to Teleworker User or Power User can be licensed using the Teleworker Profile or Power User Profile licenses.
- User's whose Profile is set to Basic User can be licensed using the legacy UMS Web Services licenses.

· Hunt Group Licensing

Hunt groups are licensed by UMS Web Services licenses.

- 1. Start IP Office Manager.
- 2. Receive the configuration from the IP Office associated with the Voicemail Pro server.
- 3. In the **Licenses** section, add the required licenses.
- 4. Merge the configuration back to the IP Office and then receive the configuration again.
- 5. In the Licenses section check that the License Status of the licenses is now shown as *Valid*.
- 6. Start the Voicemail Pro client
- 7. Select Help | About.
- 8. The screen should list the Web Services as Started and should show the number of UMS licenses.

Configure Users for UMS

- 1. Start IP Office Manager.
- 2. Receive the configuration from the IP Office system hosting the user.
- 3. Select **User** and then select the required user.
- 4. Set their **Profile** to either **Teleworker** or **Power User**.
- 5. Select the Voicemail tab. Enable UMS Web Services. Click OK.
- 6. Merge the configuration back to the IP Office.

Configuring Hunt Groups for UMS

Access to hunt group mailboxes using UMS is supported for Voicemail Pro 5.0+.

- 1. Start IP Office Manager.
- 2. Receive the configuration from the IP Office system hosting the hunt group.
- 3. Select the hunt group.
- 4. Click on the Voicemail tab.
- 5. Enable UMS Web Services. Click OK.
- 6. Merge the configuration back to the IP Office.

Enabling Web Voicemail

If the Exchange server and Voicemail Pro are installed on the same computer, the security settings of the Exchange server override the Voicemail Pro settings. So, if you access Web Voicemail with default settings, you may receive an error message "HTTP Error 403.4 - Forbidden".

Follow the below procedure to enable Web Voicemail:

- 1. Click Start | Administrative Tools | Internet Information Services (IIS) Manager.
- 2. In the Connections pane, expand the Sites node and click Default Web Site in the tree.
- 3. In Features View, double-click SSL Settings.
- 4. Clear the **Require SSL** check box.
- 5. Restart the IIS service.

Note: If the Exchange server and Voicemail Pro are not installed on the same computer, you do not need to enable Web Voicemail explicitly.

UMS Web Voicemail and ContactStore

It is possible to run ContactStore and UMS Web Voicemail on the same server computer. However some additional steps are required after the installation to enable browser access to both applications.

- 1. Install UMS Web Voicemail.
- 2. Install ContactStore.
- 3. Reboot the server.
- 4. Within services, stop the *ContactStore* service.
- 5. Using a web browser access a voicemail mailbox using UMS Web Voicemail.
- 6. Restart the ContactStore service.
- 7. Both application should now be accessible via web browser.

Playback Control


UMS message playback through the web browser is tested and supported with Windows Media Player. It may work with other audio playback controls also but it has not been tested.

The following methods can be used to check that the audio playback is associated with the Windows Media Player.

Firefox

1. Select Tools | Options | Applications or Tools | Options | Content | File Types | Manage.

2. In the search box enter *x-mplayer2*.

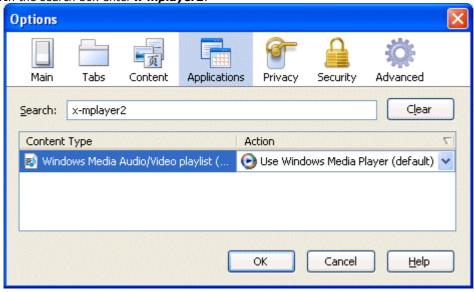


3. Check that the **Action** is set to **Use Windows Media Player** or **Use Windows Media Player plug-in Dynamic Link Library**.

Opera

1. Select Tools | Preferences.

2. Select Downloads and use the search box to find x-mplayer2.

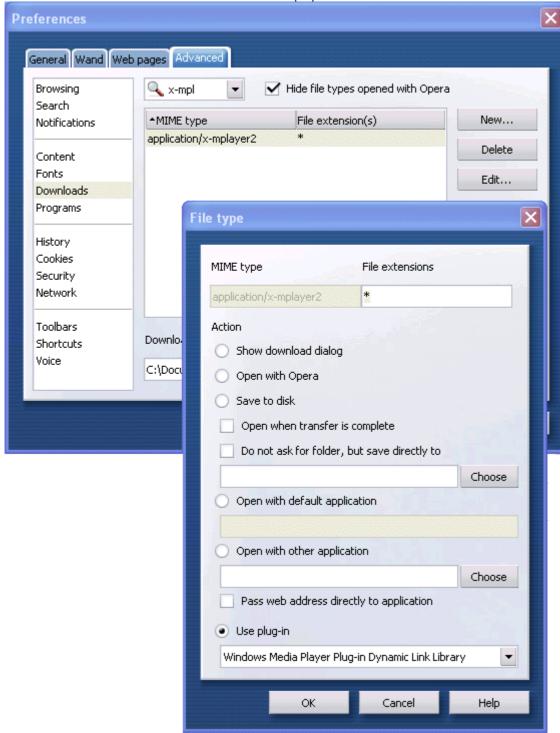


3. Check that the setting is set to Use plug-in and Windows Media Player Plug-In Dynamic Link Library.

Internet Explorer

- ${\bf 1.} \\ Internet \ Explorer \ uses \ the \ application \ associated \ with \ the \ wav \ file \ type \ for \ Windows.$
- 2. Select My Computer.
- 3. Select Tools | Folder Options.
- 4. Select File Types.

5. Locate and select the **WAV** extension type.

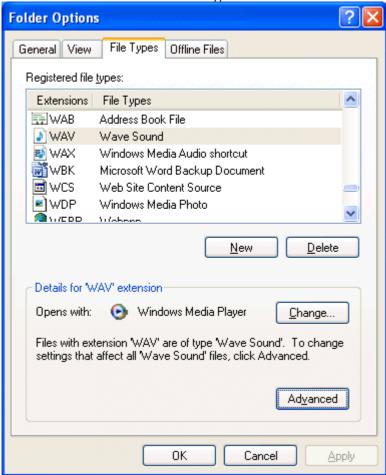

6. Check that the details show Windows Media Player as the selected application for this file type.


2.4.3 UMS Exchange Configuration

A UMS user or group can be configured to have their voicemail messages forwarded to the inbox of an Exchange server e-mail account. They can then access their voicemail messages using Outlook 2007/2010 and playback those messages on their computer. Alternatively any other mechanisms supported by Exchange Server Unified Messaging can be used. Access to the messages from an IP Office telephone is still supported, including Visual Voice.

Voicemail messages in an Exchange 2007 inbox are not visible to UMS IMAP and UMS Web Voicemail, however Exchange 2007/2010 provides its own methods to use IMAP and web browsing with Exchange mailboxes.

Note

When using an Exchange server as the message store for a user's voicemail messages, the Voicemail Pro server will deliver messages to the Exchange server on completion of the recording. However, the presentation to Outlook and back to the Voicemail Pro server for message waiting indication (MWI) and access via telephone is delayed by Exchange server processing. The delay is typically 1 or 2 minutes. The same delay also applies to changes in the message status that affect message waiting indication.

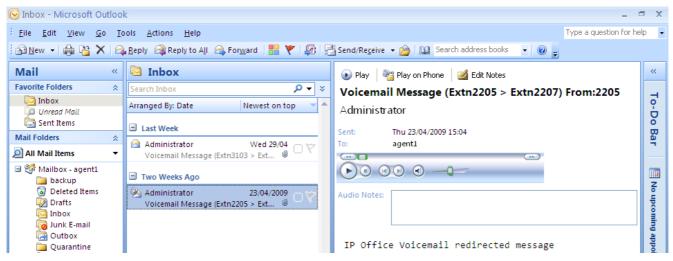

The following are the pre-requisites for UMS Exchange:

• Exchange Server

- The Exchange server must be configured with the Unified Messaging Server Role selected.
- A Dial Plan must be created on the Exchange server. This can be a blank dial plan but it must exist.
- Within the Exchange server settings for each mailbox, select Enable Unified Messaging.

(See Configuring Exchange Server 2007 43) for Exchange Server 2007 and Configuring Exchange Server 2010 48) for Exchange Server 2010.)

Voicemail Pro

- The Voicemail Pro server must be configured for MAPI based voicemail e-mail 614.
- The supported MAPI applications are Exchange server (2003, 2007, and 2010) and Microsoft Outlook (all 32-bit versions supported by the Exchange servers).

• IP Office

- The user or hunt group must be licensed and enabled for UMS Web Services.
- The user or hunt group's Voicemail E-mail mode must be set to Forward.


2.4.3.1 Configuring Exchange Server 2007

This is a simple overview of the minimum steps required. For full details refer to Microsoft documentation.


To support UMS Exchange Server 2007 operation, the Exchange Server must be configured to include the Unified Messaging Server Role.

1. In the Windows Control Panel, select Program and Features.

2. Select Microsoft Exchange Server 2007 and click Change.

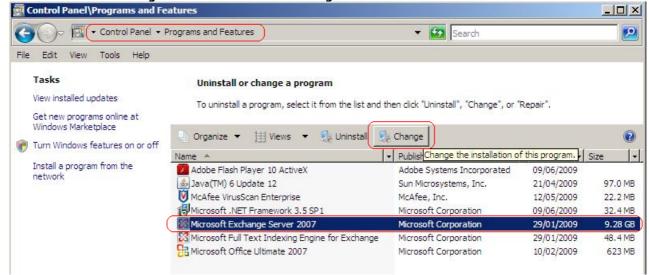


3. The wizard for changing Exchange Server setup is started. Click **Next**.

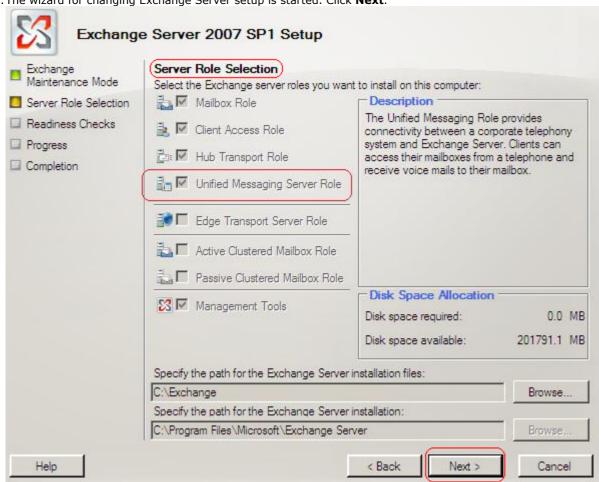


4. In the **Server Role Selection** list check that **Unified Messaging Server Role** is one of the selected roles. Click **Next** through the wizard, and then click **Finish**.

Having enabled the Unified Messaging role on the Exchange Server, configure and enable the role for the mailboxes.

- 1. Select Start | Programs | Microsoft Exchange Server 2007 | Exchange Server Management Console.
- 2. Expand the Server Configuration list. The Unified Messaging role should be included in the list.

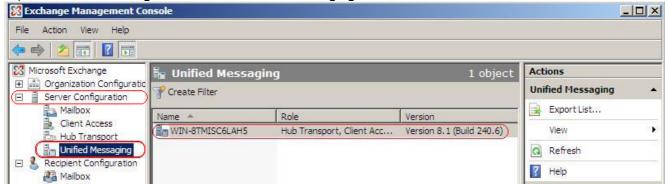

- 3. Create a Unified Messaging dial plan.
 - a. Expand the Organization Configuration and select Unified Messaging.

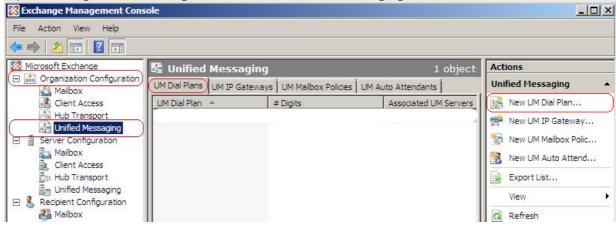


- b. Select the UM Dial Plans tab and in the Actions list, select New UM Dial Plan.
- c. The New UM Dial Plan wizard will be started.




- d. Create a plan similar to the one shown above. The number of digits is not important but must be matched later in the process. The simplest option is to set it to match the length of your IP Office extension number. Click **New**, and then click **Finish**.
- 4. You now need to select the mailboxes that the Unified Server role is available on.

a. Expand the **Recipient Configuration** section, and select **Mailbox**.

b. Right-click the configuration settings used for the general mailbox users, and select **Enable Unified**

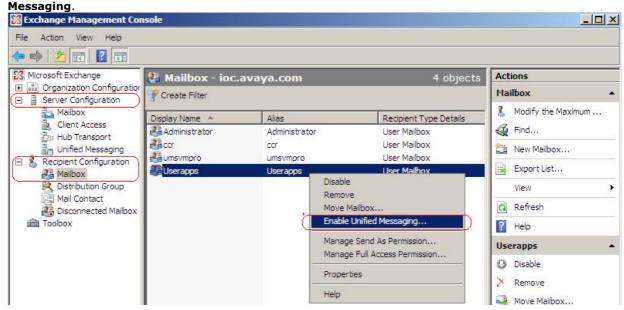


c. The wizard for the mailbox Unified Messaging settings is started.

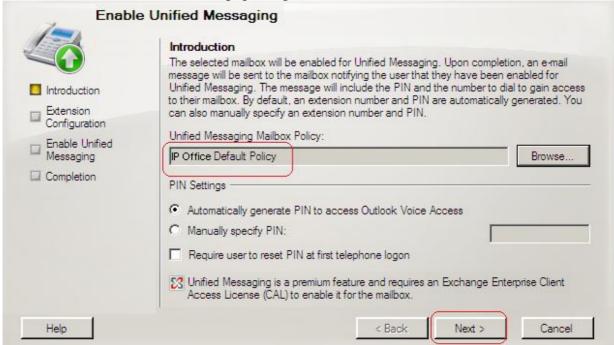

d. For the **Unified Messaging Mailbox Policy**, click **Browse** and select a previously created dial plan.

e. Select Automatically generate PIN to access Outlook Voice Access. Click Next.

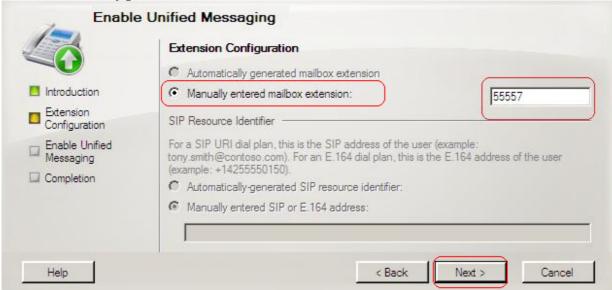


- f. Select **Manually entered mailbox extension**. Enter a number that matches the number of digits that was specified in the UM Dial Plan created earlier. The number entered does not need to match an IP Office extension, only the length is important. Click **Next**.
- g. Select ${f Enable}$, and then click ${f Finish}$.

2.4.3.2 Configuring Exchange Server 2010


This is a simple overview of the minimum steps required. For full details refer to Microsoft documentation.

To support UMS Exchange Server 2010 operation, the Exchange Server must be configured to include the Unified Messaging Server Role.

- 1. In the Windows Control Panel, select Programs | Program and Features.
- 2. Select Microsoft Exchange Server 2010 and click Change.

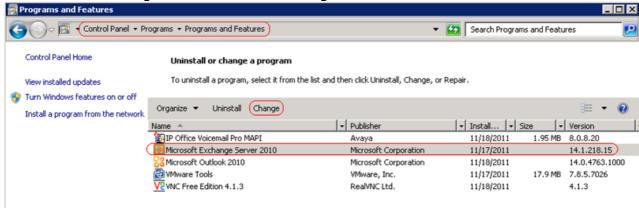


3. The wizard for changing Exchange Server setup is started. Click Next.

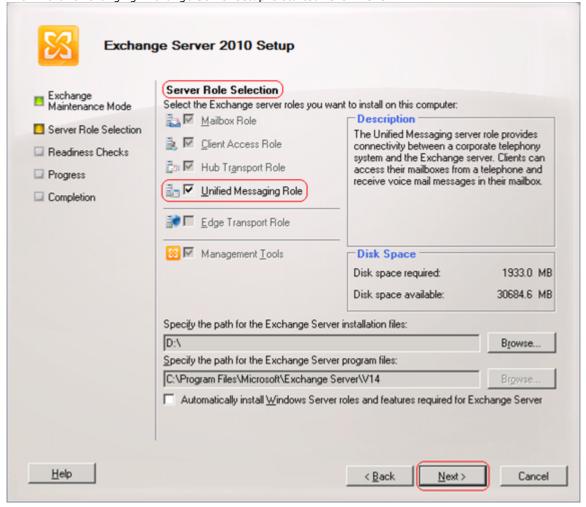


4. In the **Server Role Selection** list check that **Unified Messaging Server Role** is one of the selected roles. Click **Next** through the wizard, and then click **Finish**.

Having enabled the Unified Messaging role on the Exchange Server, configure and enable the role for the mailboxes.

- 1. Select Start | All Programs | Microsoft Exchange Server 2010 | Exchange Management Console.
- 2. Expand the Server Configuration list. The Unified Messaging role should be included in the list.

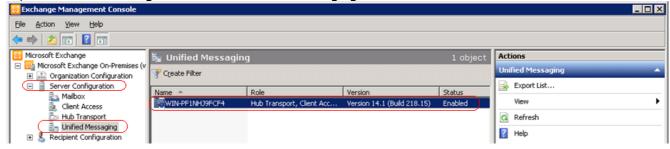


- 3. Create a Unified Messaging dial plan.
 - a. Expand the Organization Configuration, and select Unified Messaging.

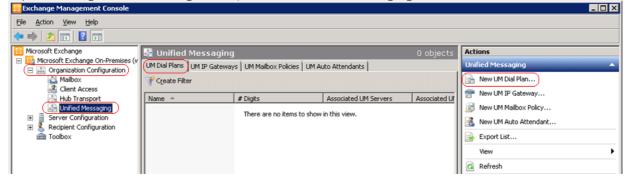


b. Select the UM Dial Plans tab and in the Actions list, select New UM Dial Plan.

c. The New UM Dial Plan wizard will be started.

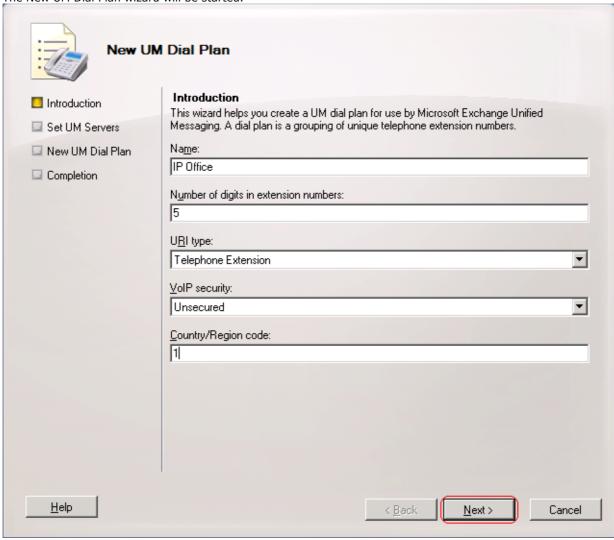


- d. Create a plan similar to the one shown above. The number of digits is not important but must be matched later in the process. The simplest option is to set it to match the length of your IP Office extension number. Click **Next**.
- e. On the **Set UM Servers** screen, click **Add** to select the UM server that you want to add to the UM dial plan. Click **Next**.
- f. Click **New**, and then click **Finish**.
- 4. You now need to select the mailboxes that the Unified Server role is available on.
 - a. Expand the **Recipient Configuration** section, and select **Mailbox**.


b. Right-click the configuration settings used for general mailbox users, and select **Enable Unified Messaging**.

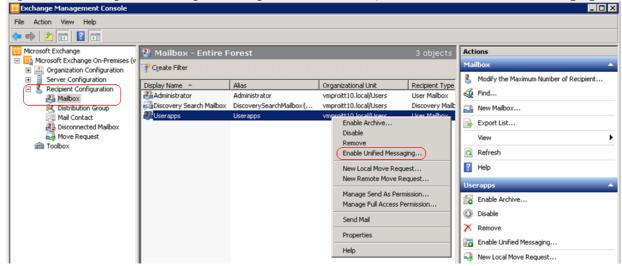

c. The wizard for the mailbox Unified Messaging settings is started.

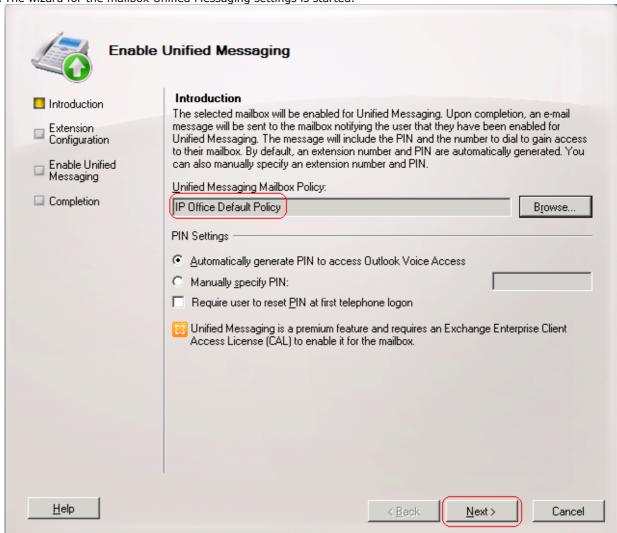

d. For the Unified Messaging Mailbox Policy, click Browse and select a previously created dial plan.

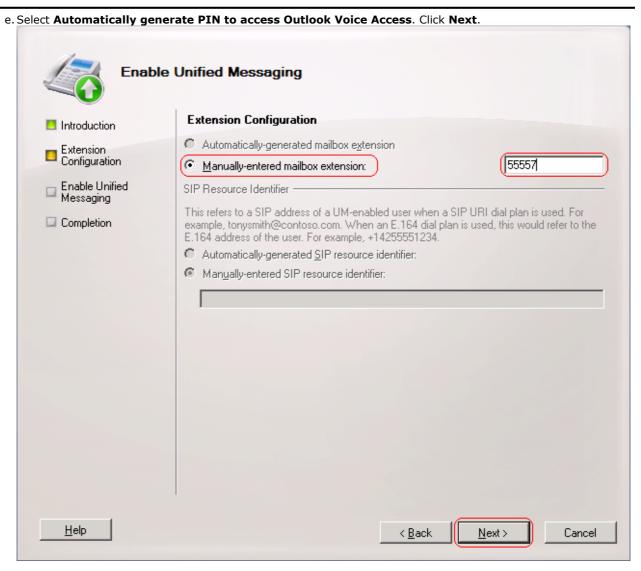

- f. Select **Manually entered mailbox extension**. Enter a number that matches the number of digits that was specified in the UM Dial Plan created earlier. The actual number entered does not need to match an IP Office extension, only the length is important. Click **Next**.
- g. Select **Enable**, and then click **Finish**.

2.4.3.3 Configuring Registry Settings

By default, UMS Exchange supports only up to 166 users. In order to support more number of users, proceed as follows:

- 1. On the computer hosting the Exchange server, open Registry Editor.
- 2. Under HKEY_LOCAL_MACHINE/SYSTEM/CurrentControlSet/Services/MSExchangeIS/ParametersSystem, add a new key MaxObjsPerMapiSession.
- 3. Under the new key, create a new DWORD Value *objtMessageView*, and set the value to thrice the number of required users. For example, to support 500 users, set the value to 1500.
- 4. Restart the Microsoft Exchange Information Store service.

2.4.3.4 Assigning Permission to Users for MAPI

Use the steps in this section to assign permissions to user accounts to run the MAPI service. To assign permissions, complete the following procedures:

- 1. Assign Send As permissions 53.
- 2. Assign additional permissions 53.

Assigning additional permissions

Procedures for assigning permissions are different for the different versions of Exchange Server. Select the procedure that applies to your environment.

- Assigning permissions on Exchange 2003 54
- Assigning permissions on Exchange 2007 55
- Assigning permissions on Exchange 2010 56

2.4.3.4.1 Assigning Send As Permissions

To assign security permissions to the user under whose account MAPI service is to be executed:

- 1. Log on to the Active Directory server using an account that has Domain Administrator privileges.
- 2. Click Start | Administrative Tools | Active Directory Users and Computers.
- 3. From the View drop-down menu, select Advanced Features.
- 4. In the left pane of the **Active Directory Users and Computers** dialog box, right-click the domain and select **Properties**.
- 5. In the **Properties** dialog box, select the **Security** tab.
- 6. Click Advanced.
- 7. In the Advanced Security Settings dialog box, click Add.
- 8. In the Select Users, Computers, Service Account, or Group dialog box, add the user's account.
- 9. Click OK.
- 10. In the Apply to field, select Descendant User objects.
- 11. In the Permissions box, select Send As permissions.
- 12. Click **OK** to close the **Permission Entry** dialog box.
- 13. Click **OK** to close the **Advanced Security Settings** dialog box.
- 14. Click **OK** to close the **Properties** dialog box.

The system periodically applies a security descriptor to the following groups, which results in the **Send As** permissions being removed from these groups.

- Administrators
- Domain Administrators

To prevent the **Send As** permissions from being removed:

- 1. Click **Start** > **Run**, type **cmd**, and click **OK**.
 - Note: You must be a member of the domain administrator group.
- 2. In the command window, enter the following:

dsacls "cn=adminsdholder,cn=system,dc=<xxx>,dc=<yyy>" /G "\<MM Security Group>:CA;Send As" where,

- dc=<xxx>, dc=<yyy> is the customer's fully qualified domain name (for example, dc=Avaya, dc=com).
- <MAPI> is the name of the service permissions group.

It will take at least an hour for the security permissions to replicate to the user's account.

2.4.3.4.2 Assigning Permissions on Exchange 2003

If the user is on Exchange 2003 server, proceed as follows:

- 1. Modify the advanced security settings for Mailbox Store.
- 2. Edit the registry to display the Security tab.

Note: To edit the registry, you must be a member of the domain administrator group.

3. Add the additional permissions to the user account.

Modifying Advanced Security Settings for Mailbox Store

- 1. Log on to the Active Directory server using an account that has privileges to edit permissions (such as administrator).
- 2. Click Start | All Programs | Microsoft Exchange | System Manager.
- 3. In the left pane of the Exchange System Manager window, expand the Servers node in the tree.
- 4. Expand the server node in the list, and then expand the First Storage Group node.
- 5. Right-click Mailbox Store and select Properties.
- 6. In the **Security** tab of the **Properties** dialog box, click **Advanced**.
- 7. Under the **Permissions** tab of the **Advanced Security Settings** window, change all the **Permission Entries** to **Allow**.
- 8. Restart the computer.

Editing the registry

If you are using Exchange System Manager or Active Directory Sites and Services, the Security tab for the Exchange organization container and a few sub-containers are not visible. To enable the Security tab at all levels within the Microsoft Exchange container, you can update the registry.

- 1. Log on as the Microsoft Exchange administrator.
- 2. Click Start > Run.
- 3. In the Run dialog box, in the Open field, type regedit.
- 4. Press Enter.
- 5. In the **Registry Editor** dialog box, locate the following key: "HKEY_CURRENT_USER\Software\Microsoft\Exchange\ExAdmin"
- 6. Right-click **ExAdmin** and select **New > DWORD Value**.
- 7. Enter the following value name: ShowSecurityPage.
- 8. Double-click the **ShowSecurityPage** value.
- 9. In the Edit DWORD Value dialog box, set the Value data to 1.
- 10. Click **OK**.

Adding permissions on Exchange 2003

Proceed as follows to add the additional permissions to the user's account:

- 1. Log on to the Active Directory server using an account that has privileges to assign permissions to accounts (such as administrator).
- 2. Click Start | Administrative Tools | Active Directory Sites and Services.
- 3. In the left pane, select Active Directory Sites and Services.
- 4. From the View drop-down menu, select Show Services Node.
- 5. In the left pane, expand **Services**, expand **Microsoft Exchange**, and then locate the appropriate Exchange Organization object that MAPI will connect to.
- 6. Right-click and select **Properties**.
- 7. In the **Properties** dialog box, click the **Security** tab.

Note: This tab is visible only if you have edited the registry (see Editing the registry 544).

8. Click Add.

9. In the Select Users, Computers, Service Accounts, or Groups dialog box, add the user's account.

10 Click OK

- 11. Under **Permissions**, select the permissions that you want to assign to the user's account.
 - Read
 - Execute
 - · Read permissions
 - · Create children
 - List contents
 - · Read properties
 - Write properties
 - · Administer information store
 - Create named properties in the information store
 - · View information store status
 - · Receive As
 - Send As
- 12.Click Apply.
- 13.Click OK.
- 14. Close the Active Directory Sites and Services dialog box.
- 15. Wait for the directory cache to expire.
- 2.4.3.4.3 Assigning Permissions on Exchange 2007

If user account is on Exchange 2007 server, proceed as follows to assign additional permissions to the user account:

- 1. Verify that the user to be added is a member of the Exchange recipient Administrator group.
- 2. Log on to the Active Directory server using an account that has privileges to assign permissions to accounts (such as administrator).
- 3. Click Start | Administrative Tools | Active Directory Sites and Services.
- 4. In the left pane, select Active Directory Sites and Services.
- 5. From the **View** pull-down menu, select **Show Services Node**.
- In the left pane, expand Services, expand Microsoft Exchange, and then locate the appropriate Exchange Organization.
- 7. Right-click it and select Properties.
- 8. In the Properties window, click the **Security** tab.

 The Security tab may not be visible in an environment with both Exchange 2003 and Exchange 2007 mail servers. To enable the Security tab, see Editing the registry [54].
- 9. Click Add.
- 10. In the Select Users, Computers, Service Accounts, or Groups window, add the user's account.
- 11. Click **OK**.
- 12. Under Permissions for the group, select Read and click Apply.
- 13. Click Advanced.
- 14. In the **Advanced Security Settings** window, on the **Permissions** tab, select the check box at the bottom of the window. This will apply the permissions inherited from the parent to this object and its child objects.
- 15. Click Add and add the user's account.
- 16. Click **OK**.
- 17. In the Apply to field, select This object and all descendant objects.
- 18. Verify that the following box is **not selected**: **Apply these permissions to objects and/or containers within this container only**.
- 19. In the **Permissions** field, select the required permissions.
 - List contents

- · Read all properties
- · Write all properties
- · Read permissions
- · Create all child objects
- · Administer information store
- · Create named properties in the information store
- · Receive As
- · Send As
- · View information store status

For a mixed environment of Exchange 2003 and Exchange 2007 mail servers, also select the following permissions, which are only displayed for Exchange 2007 in the mixed environment:

- Read
- Execute
- 20. Click **OK**.
- 2.4.3.4.4 Assigning Permissions on Exchange 2010

If user account is on Exchange 2010 server, proceed as follows to assign additional permissions to the user account:

- 1. Verify that the user to be added is a member of the Exchange recipient Administrator group.
- 2. Log on to the Active Directory server using an account that has privileges to assign permissions to accounts (such as administrator).
- 3. Click Start | Administrative Tools | Active Directory Sites and Services.
- 4. In the left pane, select Active Directory Sites and Services.
- 5. From the View pull-down menu, select Show Services Node.
- In the left pane, expand Services, expand Microsoft Exchange, right-click the appropriate Exchange Organization, and select Properties.
- 7. In the **Properties** window, click the **Security** tab.

 The **Security** tab may not be visible in an environment with both Exchange 2003 and Exchange 2010 mail servers. To enable the Security tab, see Editing the registry [54].
- 8. Click Add.
- 9. In the Select Users, Computers, Service Accounts, or Groups window, add the user's account.
- 10. Click **OK**.
- 11. Under Permissions for the group, select Read and click Apply.
- 12. Click Advanced.
- 13. In the **Advanced Security Settings** window, on the **Permissions** tab, select the check box at the bottom of the window. This will apply the permissions inherited from the parent to this object and its child objects.
- 14. Click Add and add the user's account.
- 15. Click **OK**.
- 16. In the Apply to field, select This object and all descendant objects.
- 17. Verify that the following box is not selected: Apply these permissions to objects and/or containers within this container only.
- 18. In the **Permissions** field, select the required permissions.
 - List contents
 - Read all properties
 - Write all properties
 - Read permissions
 - · Create all child objects
 - · Administer information store
 - Create named properties in the information store
 - Receive As

- Send As
- · View information store status

For a mixed environment of Exchange 2003 and Exchange 2010 mail servers, also select the following permissions, which are only displayed for Exchange 2010 in the mixed environment:

- Read
- Execute
- 19. Click **OK**.

2.5 Voicemail Email

Voicemail E-mail features of the Voicemail Pro server provide a number of email functions:

Forward a Message to E-mail

If the Voicemail Pro server is set to IP Office mailbox mode, mailbox users are able to manually forward an voicemail message to their e-mail.

· Automatic New Voicemail Messages

For all mailbox modes, users can use voicemail e-mail to automatically have a message sent to their e-mail whenever they receive a new voicemail message. The e-mail can be a simple alert or it can include a copy of the voicemail as an attachment.

eMail Action

With customized call flows, an **eMail** action can be used to send a caller's recorded voicemail message to a specified e-mail address.

UMS Exchange

In conjunction with Exchange server and Microsoft Outlook, users are able to use their Outlook inbox as their mailbox for voicemail messages. If the Exchange server is 2007/2010 and the mailbox is configured for Unified Messaging, the users will also have the ability to play the message within Outlook, if using Microsoft Outlook 2007/2010.

Voicemail E-mail features require the Voicemail Pro server to be configured for access to either an SMTP e-mail server or to a MAPI e-mail server via a MAPI enabled e-mail client program on the Voicemail Pro server computer.

• SMTP Installation 58

This is an e-mail standard supported by most e-mail servers. It is the default e-mail mode for the Voicemail Pro server.

• MAPI Installation 63

MAPI requires a MAPI compliant e-mail client program to be installed on the Voicemail Pro server. Supported MAPI clients are Outlook 2000, 2002, 2003, 2007. It also requires the Voicemail Pro service to be run using a user account that is able to send e-mails via that MAPI client.

- The exact method of integration between the Voicemail Pro server and the MAPI e-mail client depends on whether the Voicemail Pro server is part of a work group or a domain. This guide contains examples for both approaches.
- The MAPI process described in this guide is based on Microsoft Windows 2000 Professional with Microsoft Outlook 2000 and Microsoft Outlook Express 5.5. Steps may differ depending on the version of Windows and e-mail client used.


Note:

- 1. Starting with Exchange Server 2007, the MAPI is not shipped with the Exchange server but can be installed separately. For details, see http://support.microsoft.com/kb/945835.
- 2. Microsoft does not support installing Exchange Server components and Microsoft Outlook on the same computer. For details, see http://support.microsoft.com/kb/266418.

2.5.1 SMTP Setup

To configure the server SMTP e-mail settings:

- 1. Start the Voicemail Pro Client.
- 2. Click **Preferences** and select **General**.
- 3. Click the **Email** tab.
- 4. Verify that there are no settings on the MAPI sub tab.
- 5. Enter the SMTP settings on the SMTP Sender 110 sub tab. These are the settings that the Voicemail Pro server uses for sending SMTP e-mails.

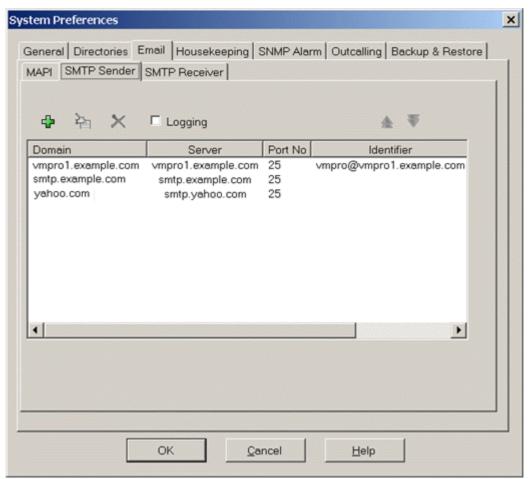


Logging

If selected, <u>SMTP logging 148</u> by the server is enabled.

Servers

This section is used to enter details of the SMTP server or servers to which the Voicemail Pro server sends its messages.

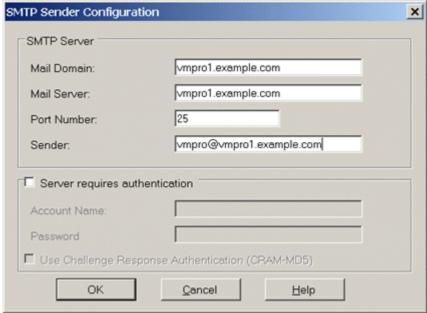

To add a server, click on the Φ . icon. To edit the server, click on the Φ icon. To delete a server entry, click on X.

• Mail Domain

This field is used differently depending on whether it is the first entry in the list or not:

• For the first server entry in the list:

This is the default outgoing e-mail settings. It also sets the mail destination domain on which the Voicemail Pro server filters incoming messages (see below) and so is repeated on the **SMTP Receiver** 1139 tab.

• Messaging Between Voicemail Pro servers

For messaging between Voicemail Pro servers, the first entry in the SMTP Sender list must be the one configured and used. Each server uses the SMTP server service on the same server computer as the voicemail service. For example a Windows based servers uses the SMTP e-mail provided by the IIS on the same server. The voicemail service also uses the domain set to filter incoming SMTP mails received by the SMTP server. For this to work, the domain entered should be the fully qualified name of the server on which the Voicemail Pro serveris running, for example *vmpro1.example.com*. Any incoming messages where the recipient mail domain is not exactly the same as the specified domain are ignored. The recipient can either by *vmsyncmaster*, *vmsyncslave* or the name or extension of a mailbox on the Voicemail Pro server, for example *Extn201@vmprocentral.example.com* or *201@vmprocentral.example.com*.

· For subsequent entries:

The domain specifies that these settings should be used for e-mails sent to the matching domain. The entry must be a fully qualified name resolvable by DNS or an IP address.

Server

This specifies the IP address or fully qualified domain name of the SMTP server to which messages are sent. Voicemail Pro supports SMTP communication over both - SSL/TLS and plain text.

• For the first server entry in the list:

Where messaging between Voicemail Pro servers is being used (central, backup and or distributed servers), the first entry is used and will match the domain set above.

• For subsequent entries:

It will be the address of the e-mail server that will handle e-mails for recipients other than another Voicemail Pro server on the network.

Port Number

This is the port number on the SMTP server to which the messages are sent. Port number for an external SMTP server can be different depending on whether you want to send the messages in secure mode or non-secure mode.

• Sender (Identifier)

Note that some servers will only accept e-mails from a specific sender or sender domain. If left blank, the Voicemail Pro server will insert a sender using either the e-mail address set for the voicemail mailbox user if set or otherwise using the best matching name it can resolve from the IP Office.

• Server Requires Authentication

This check box indicates whether the connection to send SMTP messages to the mail server requires authentication with that server. The authentication will typically be to the name and password of a mailbox account configured on that server.

Account Name

Sets the name to use for authentication.

Password

Set the password to use for authentication.

• User Challenge Response Authentication (Cram MD5)

If this check box is selected, the name and password are sent using Cram MD5.

6. Click **OK**.



2.5.2 MAPI Setup

2.5.2.1 Domain Member

Before you start to install the Voicemail Pro software, you must:

- 1. Create a Voicemail Domain Account 61.
- 2. Configure Outlook for Internet Mail 70.

You are then ready to install Voicemail Pro for MAPI Voicemail E-mail as a Domain Member. This involves the following key stages:

- 1. Install the Voicemail Pro Software 714.
- 2. <u>Install the MAPI Service</u> 63.
- 3. Switch Voicemail Pro to MAPI 65.

2.5.2.1.1 Creating a Voicemail Domain Account

- 1. Make sure that the computer that is running the Voicemail server or the MAPI client service is a member of the domain. To join the domain you will need access to a log account with administrative permissions on the domain as well as the server computer, consult the domain administrator.
- 2. On the Exchange server:
 - Create an account called Voicemail on the domain and an associated mailbox.
 - Provide a secure password.
 - Check the User Cannot Change Password and Password Never Expires boxes.
- 3. Log on to the Voicemail Pro server computer using a domain administrator account.
- 4. Click Start | Administrative Tools | Computer Management.
- 5. In the left pane, expand **Local Users and Groups**, and click **Groups**.
- 6. Double-click Administrators, and click Add.
- 7. Click **Locations** and select the domain name in the list.
- 8. In the Enter the object names to select field, type Voicemail and click Check Names.
- 9. Select Voicemail in the list and click OK followed by OK.

2.5.2.1.2 Configuring Outlook for VoiceMail Email

To configure Outlook on your system, perform the following steps:

- 1. On the desktop, right-click the Outlook icon and select **Properties**.
- 2. On the General tab, select Add.
 - a. Select Microsoft Exchange Server.
 - b. Click Next.
 - c. In the **Server** field, enter the name of the Exchange server.
 - d. In the Mailbox field, enter Voicemail.
 - e. Click Next.
 - f. When you are asked if you travel with this computer, select **No**.
 - g. Click Next.
 - h. Click Finish.
- 3. Highlight the MS Exchange Settings and click Properties.
 - a. Highlight Microsoft Exchange Server and click Properties.
 - b. Click Check name.
 - c. If the name is resolved, select Apply.
 - d. Click **OK**, **OK**, and **Close** to shut the mail settings.
- 4. Do not continue until the name has been resolved correctly with the Exchange server. If the name is not resolved, check the account details with the Exchange Administrator.
- 5. Open **Outlook** and select **Yes** to register Outlook as the default e-mail application.
 - a. Select Tools > Options.
 - b. Click the **Preferences** tab.
 - c. Click E-mail Options.
 - d. Uncheck Save copies of messages in Sent Items folder.
 - You might want this option selected during initial setup to aid troubleshooting. However due to the size of wav
 file message attachments you should uncheck it after installation testing is completed.
- 6. Log on to the computer running the the Voicemail Pro Server or the MAPI client service using the voicemail account.
- 7. From Outlook, send a message direct to an extension user.
- 8. If this message is received correctly, you can continue installing the Voicemail Pro software. See <u>Installing the Voicemail Pro Software 71</u>.

2.5.2.1.3 Installing the VoiceMail Pro Software

To install Voicemail Pro software, perform the following steps:

- 1. Log off and log on using the Voicemail account and password.
- 2. Install the required Voicemail Pro software.
- 3. When the system prompts for a User Name and Password for the Voicemail Pro service, enter the Voicemail account details.
- 4. Restart the server and log on using the Voicemail account.
- 5. When SMTP e-mail details are requested, enter no values and ignore the error message following the SMTP check.
- 6. Start the Voicemail Pro Service 30.
- 7. Check that the basic voicemail services start and operate correctly.

2.5.2.1.4 Installing the MAPI Service

For a Linux based Voicemail server, you must install MAPI service on a Windows server to allow Voicemail Pro installed on Linux to communicate to MS Exchange servers.

Note: You must install MAPI on the same user's account on which you have installed Windows. Also note that if you are running Exchange Server 2003, you must not install the MAPI Service on the same computer that runs the Exchange server.

1. Insert the IP Office Applications DVD. Click on the link for Voicemail Pro MAPI and then double-click on setup.exe.

The system displays the **Choose Setup Language** menu. This language is used for the installation process and does not affect the language prompts that are installed on the system.

- 2. Select the language for the installation process.
- 3. Click OK.

The system displays the **Preparing Installation** menu.

• If the Modify, repair or remove the program window is displayed, follow the upgrade process 31h.

The system displays the **Welcome** window.

4. Click Next.

The system displays the **License Agreement** dialog box.

5. Accept the terms and conditions and click Next.

The system displays the ${\bf Customer\ Information}$ menu.

Use the default names or enter a user and company name.

 $\textbf{Note} \hbox{: } \textbf{These settings do not affect the Voicemail Pro MAPI installation}.$

- Select the option Anyone who uses this computer (all users).
- Enter the company name.
- Click Next.

The system displays the Choose Destination Location menu.

- 6. Unless specifically required, for ease of maintenance, use the proposed folder location. Click Next.
- 7. The system displays the Service Account Name menu.
 - Enter the user name and password of the account to use. Alternatively, click **Browse** and select a name from the list of available computer or network accounts.
 - Enter the port number that Voicemail Pro MAPI service will use.
 - Click **Next**. The system validates the account name, password, and the port number.

If the validation fails, the system prompts you to create a new account that matches the details entered. If the port entered is already being used, the installer prompts you for entering a different port number. The system displays **50792** as the default port number.

The system displays the **Outlook Client Details** dialog box.

8. Enter a valid outlook profile and click Next.

The system displays the **Ready to Install** dialog box.

9. Click Install.

The system prompts you to start the Voicemail Pro MAPI service.

10.Click Yes to start the service immediately or click No to start the service later.

The system displays the **Final Installation** dialog box.

11.Click Finish.

12. Switch Voicemail Pro to MAPI 65.

2.5.2.1.5 Adding Port to Windows Firewall

Voicemail Pro installed on Linux uses MAPI service as a proxy to the Microsoft Exchange server. Voicemail Pro will send commands to the MAPI service, which in turn will send the corresponding MAPI commands to the Exchange server. The responses from the Exchange server will be relayed back to the Voicemail Pro server via the MAPI service.

For the client servers to communicate with the Voicemail Pro server, add the port that the MAPI service uses to the Windows Firewall.


- 1. Open the Windows Control Panel.
- 2. Open System and Security | Windows Firewall.
- 3. Click Advanced settings.
- 4. Click Inbound Rules in the left pane.
- 5. Click **New Rule** in the right pane.
 The **New Inbound Rule Wizard** opens up.
- 6. Select Port and click Next.
- 7. Select **TCP** and enter the port number that the MAPI service uses in the **Specific local ports** field.
- 8. Click Next.
- 9. Select Allow the connection and click Next.
- 10. Check the **Domain**, **Private**, and **Public** check boxes.
- 11.Click Next.
- 12.Enter a name for the rule and click Finish.
- 13.Click **Outbound Rules** in the left pane and repeat step 5 65 to step 12 65.
- 2.5.2.1.6 Switching VoiceMail Pro to MAPI

By default, the Voicemail Pro server is configured for SMTP e-mail mode. However, if MAPI settings are entered it will switch to MAPI mode. Some options are not available if you are working offline. You must be working online to use this feature.

To select the server e-mail mode


- 1. Start the Voicemail Pro client.
- 2. Click Preferences and select General.
- 3. Click the **Email** tab.
- 4. Select the MAPI Service sub tab.
 - a. In the Address field, type the IP address of the Windows based computer where the MAPI service is installed.

b. In the **Port** field, type the default **50792** TCP Port of the Windows based computer where the MAPI service is installed.

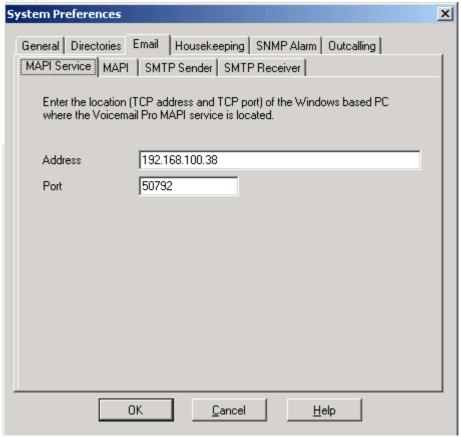

- 5. Select the **MAPI** sub tab.
 - a. Select the **Enable MAPI** check box to switch the Voicemail Pro server to use MAPI for its e-mail options rather than SMTP.

b. Choose the MAPI e-mail account listed in **Profile**. The Voicemail Pro server uses this MAPI e-mail account to provide visibility to the e-mail account mailboxes for which the Voicemail Pro server requires access. The profile must exist within the MAPI e-mail client on the server computer and must be useable by the Windows account under which the Voicemail Pro service is running.

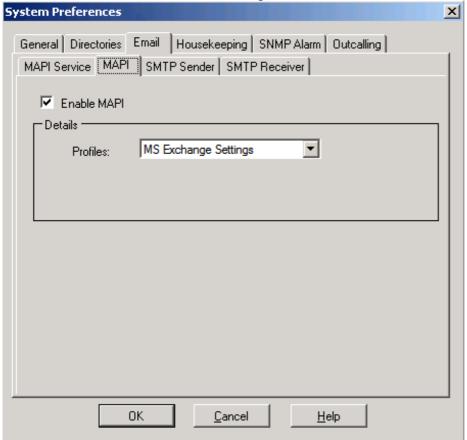

6. Click **OK**.

7. Click Save and Make Live.

2.5.2.2 Work Group Member

Before you start to install the Voicemail Pro software, you must:

- 1. Create a Voicemail User Account 684.
- 2. Configure Outlook Express for Internet Mail 69.
- 3. Configure Outlook for Voicemail E-mail 62.
- 4. Configure Outlook for Exchange Server 714.

The user name and password created are requested as part of the installation of the Voicemail Pro service. The Microsoft Outlook software must be installed on your computer before you can configure it.

You are then ready to install the Voicemail Pro software. See Installing the Voicemail Pro Software 714.

By default, Voicemail Pro is set to use SMTP for e-mails. Set Voicemail Pro to use MAPI. See <u>Switching Voicemail Pro to MAPI 65</u>.

You also need to set the SMTP E-mail Account settings on the Voicemail Pro so that they match those of the customer's e-mail server. See Changing SMTP E-mail Account Settings 74.

2.5.2.2.1 Installing VoiceMail Pro for MAPI VoiceMail Email as a Work Group Member

Before you start to install the Voicemail Pro software, you must:

- 1. Create a voicemail user account. See Creating a Voicemail User Account 684.
- 2. Configure Outlook Express for Internet Mail. See Configuring Outlook Express for Internet Mail 69.
- 3. Configure Outlook for Internet mail. See Configuring Outlook for Voicemail E-mail 62.
- 4. Configure Outlook for Exchange Server. See Configuring Outlook for Exchange Server 71.

The user name and password created are requested as part of the installation of the Voicemail Pro service. The Microsoft Outlook software must be installed on your computer before you can configure it.

You are then ready to install the Voicemail Pro software. See Installing the Voicemail Pro Software 11

By default, Voicemail Pro is set to use SMTP for e-mails. Set Voicemail Pro to use MAPI. See , Switching Voicemail Pro to MAPI 66° .

You also need to set the SMTP E-mail Account settings on the Voicemail Pro so that they match those of the customer's e-mail server. See Changing SMTP E-mail Account Settings 74.

2.5.2.2.2 Creating a Voicemail User Account

To create a Voicemail User Account

For this example the name of the created user account is **Voicemail**.

- 1. Log on to the server computer using an administrator account.
- 2. Open the Windows Control Panel.
- 3. Click User Accounts | Add or remove user accounts.
- 4. Click Create a new account.
- 5. Enter Voicemail as the new account name and select Administrator as the account type.
- 6. Click Create Account.

The new account Voicemail is created and added to the list of user accounts.

- 7. Click Voicemail and create a secure password for the account.
- 8. Continue with one of the following as appropriate to the installed MAPI client and method for sending e-mail.

2.5.2.2.3 Configuring Outlook Express for Internet Mail

To configure Outlook Express for Internet Mail

- 1. Click the Outlook Express icon to start the Configuration wizard.
- 2. In the Display name box enter Voicemail.
- 3. Click Next.
- Select I already have an e-mail address that I'd like to use and enter the address in E-mail address, eg. voicemail@example.com. Click Next.
- Enter the name or address of the Incoming mail server and the Outgoing mail server.
 Note: If you enter the name, configure the IP address of the DNS Server in the voicemail computer.
- 6. Click Next.
- 7. Enter the e-mail account name and password, for example Voicemail. Select Remember password.
- 8. Click Next.
- 9. Click **Finish** to complete the wizard.
- 10. Open Outlook Express and select **Tools** > **Options**.
- 11. Click the General tab.
 - Uncheck Send and Receive messages at Start up.
 - Uncheck Check for new messages every.
- 12. Select the **Send** tab.
 - Uncheck Save copy of sent messages in the 'Sent Items' folder.
 - Check Send messages immediately.
 - Under Mail Sending Format select Plain Text.
- 13. Click **OK**.
- 14. Log on to the server computer using the account that will be used for the Voicemail Pro server.
- 15. From Outlook or Outlook Express, send a message direct to an extension user.
- 16. If this message is received correctly, continue with installing the Voicemail Pro software.

2.5.2.2.4 Configuring Outlook for Internet Mail

For the installation of Outlook to work correctly, the following setup process must be followed. Outlook can be configured in two ways. Using the Wizard, prior to completing the steps below will cause Outlook not to send the messages correctly.

To configure Outlook for Internet Mail:

- 1. Right-click the Outlook icon on the desktop and select **Properties**.
- Select Add.
- 3. Select Internet E-mail and click OK.
- 4. For the Mail Account, enter Voicemail.
- For User Information enter Voicemail as the Name and for the E-mail address enter your address, for example. voicemail@example.com.
- 6. Select the Servers tab. Enter the name or IP address of the Outgoing mail server and Incoming mail server.
- 7. The **Incoming Mail Server** details can be left blank as Outlook does not need to check for mail. Otherwise, enter the account name and password for example, **Voicemail**. Select **Remember password**.
- 8. Select the Connection tab. Select Connect using my local area network (LAN). Click Next.
- 9. Click OK.
- 10. Click Next.
- 11. Accept the default path for file creation.
- 12. Select Next, then Finish and then Close.
- 13. Open Outlook.
- 14. On the E-mail Service Option Screen, select Internet Only.
- 15. Click Next.
- 16. Select **Yes** to register Outlook as the default e-mail application.
- 17. Select Tools > Options.
- 18. Click the Preferences tab.
- 19. Click E-mail Options.
- 20. Uncheck Save copies of messages in Sent Items folder.
 - You might want this option selected during initial setup and troubleshooting. Due to the size of wav file message attachments it is advisable to uncheck it after installation is complete.
- 21. Log on to the server computer using the account that will be used for the Voicemail Pro server.
- 22. From Outlook or Outlook Express, send a message direct to an extension user.
- 23. If this message is received correctly, continue with installing the Voicemail Pro software.

2.5.2.2.5 Configuring Outlook for Exchange Server

This option can be selected if Outlook is to be configured to connect to the Exchange server, using a valid user name and password, while the Voicemail computer remains a member of a work group.

To configure Outlook for Exchange Server:

- Create a new mailbox on the Exchange server, for example Voicemail, and assign it the same password as has been configured on the voicemail computer.
- 2. Clear User must Change password at Next Logon and select Password Never Expires.
- 3. On the voicemail computer, logon with the Voicemail account.
- 4. Right-click the Outlook icon on the desktop and select **Properties**.
- 5. Select Add.
- 6. Highlight **Microsoft Exchange Server** and click OK.
- 7. Type in the Exchange server name and enter **Voicemail** in the **Mailbox** field.
- 8. Highlight the MS Exchange Settings, Click Properties.
- 9. Highlight Microsoft Exchange Server. Click Properties.
- 10. Click Check name.
- 11. If the name is resolved, select Apply. Click OK, OK and Close to shut the Mail settings.
- 12. Do not continue until the name has been resolved correctly with the Exchange server. If the name is not resolved, check the account details with the Exchange administrator.
- 13. Open Outlook and select Yes to register Outlook as the default e-mail application.
- 14. Select Tools > Options.
- 15. Choose the Preferences tab. Click E-mail Options.
- 16. Uncheck Save copies of messages in Sent Items folder.
 - You can keep this option selected during initial setup and troubleshooting. Due to the size of the wav file message attachments, deselect it once the installation is complete.
- 17. Log on to the server computer using the account that will be used for the Voicemail Pro server.
- 18. From Outlook or Outlook Express, send a message direct to an extension user.
- 19. If this message is received correctly, continue with installing the Voicemail Pro software.

2.5.2.2.6 Installing the VoiceMail Pro Software

To install Voicemail Pro software, perform the following steps:

- 1. Log off and log on using the Voicemail account and password.
- 2. Install the required Voicemail Pro software.
- 3. When the system prompts for a User Name and Password for the Voicemail Pro service, enter the Voicemail account details.
- 4. Restart the server and log on using the Voicemail account.
- 5. When SMTP e-mail details are requested, enter no values and ignore the error message following the SMTP check.
- 6. Start the Voicemail Pro Service 30.
- 7. Check that the basic voicemail services start and operate correctly.


2.5.2.2.7 Switching VoiceMail Pro to MAPI

By default, the Voicemail Pro server is configured for SMTP e-mail mode. However, if MAPI settings are entered it will switch to MAPI mode. Some options are not available if you are working offline. You must be working online to use this feature.

To select the server e-mail mode


- 1. Start the Voicemail Pro client.
- 2. Click Preferences and select General.
- 3. Click the Email tab.
- 4. Select the MAPI Service sub tab.
 - a. In the Address field, type the IP address of the Windows based computer where the MAPI service is installed.

b. In the **Port** field, type the default **50792** TCP Port of the Windows based computer where the MAPI service is installed.

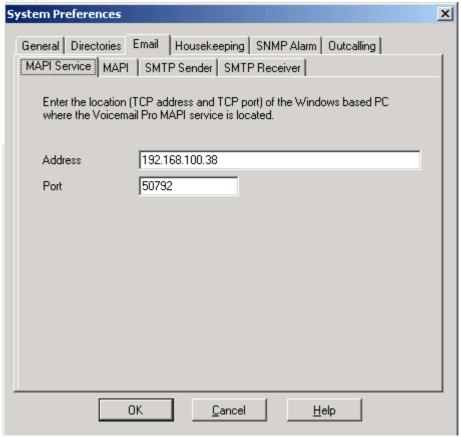

- 5. Select the **MAPI** sub tab.
 - a. Select the **Enable MAPI** check box to switch the Voicemail Pro server to use MAPI for its e-mail options rather than SMTP.

b. Choose the MAPI e-mail account listed in **Profile**. The Voicemail Pro server uses this MAPI e-mail account to provide visibility to the e-mail account mailboxes for which the Voicemail Pro server requires access. The profile must exist within the MAPI e-mail client on the server computer and must be useable by the Windows account under which the Voicemail Pro service is running.

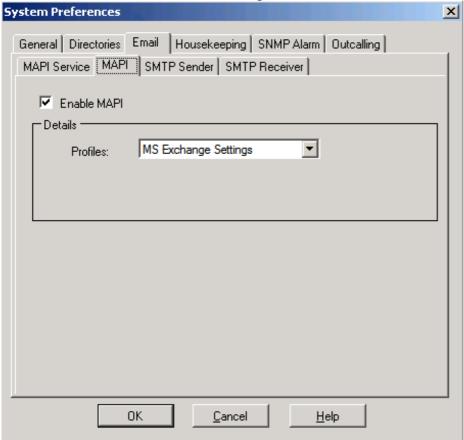


6. Click **OK**.

7. Click Save and Make Live.


2.5.2.2.8 Changing SMTP Email Account Settings

To change SMTP E-mail Account Settings:

- 1. Open the Windows Control Panel.
- 2. Select IP Office Voicemail Pro.
- 3. Select the **SMTP E-mail Settings** tab.

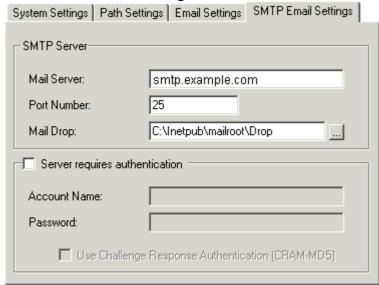

- 4. Enter the settings to match the customer's e-mail server and the e-mail account configured on that server for the Voicemail Pro service.
- 5. Click the **E-mail Settings** tab.

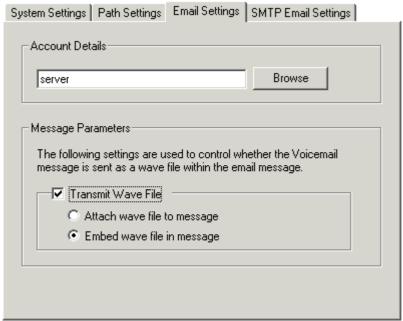


- 6. Enter the e-mail address for the account setup on the customer's e-mail server for the Voicemail Pro service.
- 7. Click **Check** to test the connection to the specified e-mail account.
- 8. Click OK.

2.5.3 Voicemail Email Operation

2.5.3.1 User and Group Configuration

The e-mail address for each user and hunt group is set through the IP Office configuration.

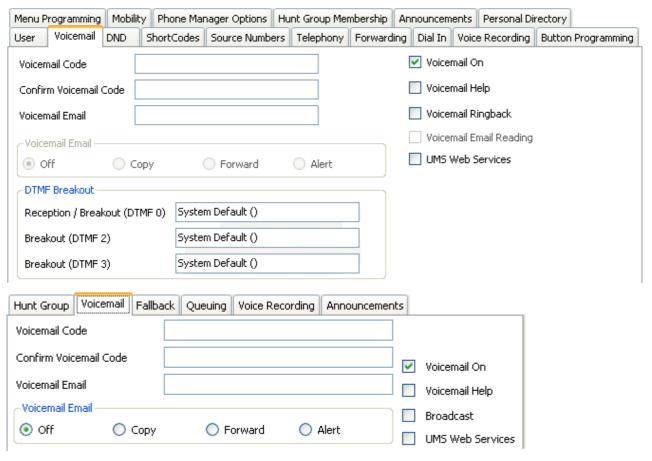

• **Voicemail E-mail:** Default = Blank (No voicemail e-mail features)

This field is used to set the user or group e-mail address used by the Voicemail Pro-

This field is used to set the user or group e-mail address used by the Voicemail Pro server for voicemail e-mail operation. When an address is entered, the additional Voicemail E-mail control below are selectable to configure the type of voicemail e-mail service that should be provided.

- Use of voicemail e-mail requires the voicemail pro server to have been configured to use either a local MAPI e-mail client or an SMTP e-mail server account. See Voicemail E-mail Installation [57].
- Use of voicemail e-mail for sending (automatic or manual) e-mail messages with wav files attached requires discretion, as a one-minute message creates a wav file of 1MB size.
- Voicemail E-mail Default = Off

If an e-mail address is entered for the user or group, the following options become selectable. These control the mode of automatic voicemail e-mail operation provided by the Voicemail Pro server whenever the voicemail mailbox receives a new voicemail message.

- Users can change their voicemail e-mail mode using visual voice. If the Voicemail Pro server is set to
 IP Office mode, user can also change their voicemail e-mail mode through the telephone prompts.
 The ability to change the voicemail e-mail mode can also be provided in a call flow using a Personal
 Options Menu action or a Generic action.
- If the Voicemail Pro server is set to IP Office mode, users can manually forward a message to email.
- Off

If off, none of the options below are used for automatic voicemail e-mail. Users can also select this mode by dialing *03 from their extension.

Copy

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a copy of the message is attached to an e-mail and sent to the e-mail address. There is no mailbox synchronization between the e-mail and voicemail mailboxes. For example reading and deletion of the e-mail message does not affect the message in the voicemail mailbox or the message waiting indication provided for that new message.

Forward

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, that message is attached to an e-mail and sent to the e-mail address. No copy of the voicemail message is retained in the voicemail mailbox and their is no message waiting indication. As with Copy, their is no mailbox synchronization between the e-mail and voicemail mailboxes. Users can also select this mode by dialing *01 from their extension.

• UMS Exchange

Voicemail Pro 5.0+ supports voicemail e-mail to an Exchange server e-mail account. For users and groups also enabled for UMS Web Services this significantly changes their mailbox operation. The Exchange server inbox is used as their voicemail message store and features such as message waiting indication are set by new messages in that location rather than the voicemail mailbox on the voicemail server. Telephone access to voicemail messages, including Visual Voice access, is redirected to the Exchange server mailbox. See UMS Exchange. Installation

Alert

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a simple e-mail message is sent to the e-mail address. This is an e-mail message announcing details of the voicemail message but with no copy of the voicemail message attached. Users can also select this mode by dialing *02 from their extension.

2.5.3.2 How Voicemail Email Messages Look

Messages sent by a user or group's voicemail e-mail settings contain the following:

To

The user/group e-mail address.

From

The name and address setting of the e-mail client account.

Subject

Voicemail Message ('calling number' > 'user name') From: 'calling number'.

Body

If the user or group's Voicemail E-mail mode is set to Copy or Forward, the message body will contain "IP Office Voicemail redirected message".


Attachment

When using Copy or Forward mode, the message is attached as a wav file.

Messages sent through a Voicemail Pro eMail action are configurable, see The Voicemail Pro eMail Action 77.

2.5.3.3 The Voicemail Pro Email Action

The **eMail** action in Voicemail Pro can be used to send messages through e-mail in response to caller actions in the voicemail call flow. The action can also attach a way file.

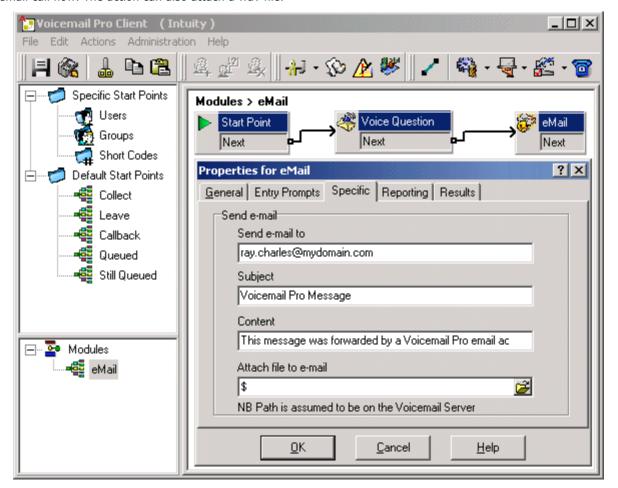

In the example above, the **eMail** action follows a **Voice Question** action. The \$ in the eMail action's **Attach file to e-mail** field instructs it to use the file recorded by the preceding **Voice Question** action.

The same method can be used with a **Leave Mail** action. Note however that the **Leave Mail** action must be set to a valid target mailbox which will then have a copy of the message.

Alternatively, the **eMail** action can attach a prerecorded wav file by specifying the file name. That named file can be created by an **Edit Play List** action.

2.6 Text To Speech (TTS) Installation

The Voicemail Pro server uses Text To Speech (TTS) in the following ways:

- Speak text in call flows using the Speak Text action. The text can include variables passed from other actions including database actions.
- When installed in parallel with Voicemail E-mail 57, TTS can be used to provide e-mail reading 79 to selected mailbox users.
- TTS can be used by the Voicemail Pro client user to record prompts used by call flow actions.

Windows TTS Licensing

Voicemail Pro TTS requires the server computer to have a Microsoft SAPI 5 compatible TTS engine installed and a valid license entry.

E-mail Reading

Users who want to use this feature must have their user profile configured as either **Mobile User** or **Power User** using **Mobile User Profile** or **Power User Profile** licenses. In addition, IP Office with a Windows-based Voicemail Pro server must have a **VMPro TTS (Generic)** or a **VMPro TTS (ScanSoft)** license and IP Office with a Windows-based Voicemail Pro server must have a **VMPro TTS Professional** license for e-mail reading to work.

Speak Text Actions / Prompt Recording

The license for this operation depend on whether you will be using the Avaya-supplied ScanSoft TTS speech engines or a 3rd party generic TTS speech engines (including the TTS speech engines included in Microsoft operating systems).

Generic TTS

The use of up to 8 simultaneous generic TTS ports is enabled by the **Advanced Edition** license. Alternatively separate **VMPro TTS (Generic)** licenses can be added.

Avaya ScanSoft TTS

The use of the Avaya supplied ScanSoft TTS engines is licensed by the addition of **VMPro TTS (ScanSoft)** licenses to the IP Office configuration.

Linux TTS Licensing

All TTS features (E-mail Reading, Speak Text Action, and Prompt Recording) require the **VMPro TTS Professional** license before they can be used.

Generic TTS Licensing

If you add both **VMPro TTS (Generic)** and **VMPro TTS (ScanSoft)** licenses, the system will use both of the TTS engines for calls on a first-come-first-serve basis. You will not be able to control the use of TTS engine for particular calls. Therefore, license only one type of TTS engine within a system. **VMPro TTS (Generic)** is not supported on Linux.

Languages

For Voicemail Pro 5.0 or higher on Windows, the TTS engine supports the same set of languages as Voicemail Pro speech prompts except for Hungarian. For Voicemail Pro 8.0 or higher on Linux, the TTS engine supports the same set of languages as Voicemail Pro speech prompts except for Hungarian, Korean, and Chinese (Cantonese). For these unsupported languages, there will be no alternate languages selected. If any of the three unsupported languages is configured in Voicemail Pro 8.0 or higher, then TTS will not play anything.

Note: If you are using Voicemail Pro installed on Unified Communications Module, see <u>Languages Supported on UC</u> Module Voicemail Pro 16.

If more than one TTS language is installed, use **Select System Prompt Language** action to switch TTS to a different language from the selected default.

• Installation on Windows Server Operating Systems

On many Windows server computers, while the Windows Audio components are present by default they are not always enabled. If this is the case the playback of voice prompts may be 'choppy' and the TTS (if installed) will not work. However, enabling Windows Audio does not require the server computer to have a sound card installed.

- 1. Verify that you have full administrator rights for the computer.
- 2. Click Start | Administrative Tools | Services.
- 3. If the status of the **Windows Audio** service is not **Started**, start the service and set the **Startup Type** to **Automatic**.

2.6.1 Installing Generic Text to Speech

To install Text To Speech:

- 1. Install and test Voicemail Pro as normal.
- Using IP Office Manager, add the Advanced Edition or VMPro TTS (Generic) license into the IP Office configuration. Send the new configuration to the IP Office system.

- 3. Reload the IP Office configuration into IP Office Manager and check that the status of the license has changed to **Valid**.
- 4. The Voicemail Pro installation includes the default Microsoft TTS engines (Microsoft Sam, Mike, Mary, and Simplified Chinese) as standard. If another third-party SAPI 5 compatible TTS engine is going to be used, install that software.
- 5. If the system is licensed for generic TTS, Voicemail Pro will automatically discover any SAPI 5 installed engine. If there is no third-party engine installed then the Microsoft third-party engine is used.

2.6.2 Installing Avaya Text to Speech

For Windows, the Avaya TTS engine for Voicemail Pro is supplied on media disks (x2) separate from the Voicemail Pro software installation media. By default, TTS engine installation also includes installation of the English US and English UK language packs.

For Linux, the Avaya TTS engine is packaged as a default component in the Voicemail Pro installation. For Voicemail Pro running on Unified Communications Module or IP Office Server Edition, the TTS engine installation includes installation of the English US and English UK language packs by default. However, for Voicemail Pro running on IP Office Application Server, you must install the language packs separately, as no language pack is installed by default.

To install Avaya Text To Speech on Microsoft Windows:

- 1. Install and test Voicemail Pro as normal.
- 2. Using IP Office Manager, add the **VMPro TTS (ScanSoft)** license into the IP Office configuration. Send the new configuration to the IP Office system.
- 3. Reload the IP Office configuration into IP Office Manager and check that the status of the license has changed to **Valid**
- 4. Insert the first Avaya TTS DVD. The installation should auto-start.
- 5. Follow the prompts and install the required languages.
- 6. If the system is licensed for Avaya TTS, the ScanSoft engine is automatically used.

To install Avaya Text To Speech on Linux:

- 1. Install and test Voicemail Pro as normal.
- 2. Using IP Office Manager, add the **VMPro TTS Professional** license into the IP Office configuration. Send the new configuration to the IP Office system.
- 3. Reload the IP Office configuration into IP Office Manager and check that the status of the license has changed to Valid

2.6.3 Setting Up Text To Speech to Read Email


In conjunction with MAPI e-mail clients and Exchange server, TTS can be used to read new e-mails in a user's e-mail inbox when they access their voicemail mailbox.

- The Voicemail Pro server must have been installed and configure to support voicemail e-mail using a MAPI client 57.
- E-mail reading can only be enabled for IP Office users whose Profile setting is set to Mobile User or Power User. IP
 Office must have a VMPro TTS (Generic) or a VMPro TTS (ScanSoft) license for e-mail reading to work with a
 Windows-based Voicemail Pro server and a VMPro TTS Professional license for e-mail reading to work with a
 Linux-based Voicemail Pro server.
- This feature is supported only for Intuity mode. Users hear their new voicemail messages and then the number of "Messages with text". Before each e-mail is spoken, details of who it is from, when the message was sent and the size are given. These details assist you in deciding to skip large or non-urgent e-mails.
- E-mail reading cannot be used for e-mails in HTML format. If HTML messages are received, all of the code will be read out as a message.
- 1. Within the IP Office configuration, display the settings for the user.

2. On the **User** tab, set the user's **Profile** to either **Mobile User** or **Power User**.



3. On the Voicemail tab:

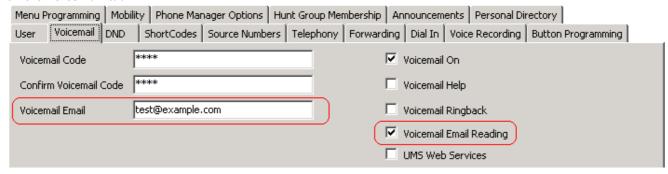

- Voicemail E-mail
 Enter the user's e-mail address.
- Voicemail E-mail Reading
 Enable this option for TTS e-mail reading.

Note: As Voicemail Pro Generic TTS is not supported on Linux, the e-mail reading feature is not available with the VMPro Preferred and VMPro Advanced Editions licenses. You require the VMPro TTS Professional license to be able to use the e-mail reading feature.


2.7 Troubleshooting

2.7.1 Checking the Voicemail Pro Service

If you have installed Voicemail Pro successfully and rebooted the server computer, then the voicemail service starts automatically. However, you can restart the service manually, if required.

To check/restart the Voicemail Pro Service:

1. Click Start | Administrative Tools | Services.

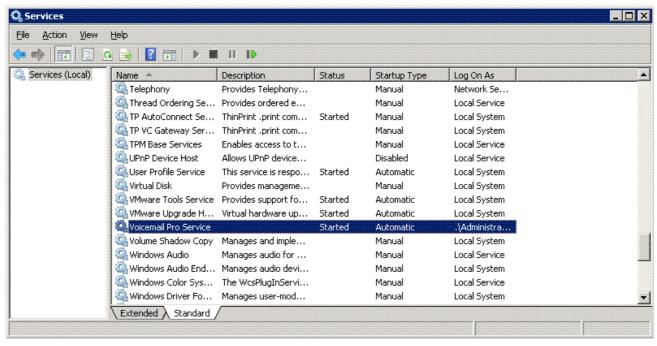

- 2. The Voicemail Pro Service should be visible. Its Status should be Started and the Startup Type should be set to Automatic. Other services may be present depending on the installed Voicemail Pro features. The Voicemail Pro Service is the main Voicemail Pro service. This is the only service that needs to be stopped and restarted. It will stop and restart the other services that it uses.
- Close Services.

Setting the Voicemail Pro Service or Computer to Restart Automatically

The following action is optional. If a fault causes the Voicemail Pro service to stop, the fault should be investigated and fixed. However, setting the options to restart the services or the computer automatically will minimize the disruption to the Voicemail Pro users.

- 1. Click Start | Administrative Tools | Services.
- 2. Right-click Voicemail Pro Service and select Properties.
- Select the Recovery tab.
- 4. Select the items in the drop-down lists to specify the action that the computer must take in case of failures.

Using a Batch File to Start Services

In some instances, certain computers might not respond quickly enough to start all of the Avaya services in the correct order. In this circumstance, it is advisable to create a batch file which delays the start of these services until the computer is fully running.

Avaya IP Office Services can be started successfully at system start-up using a scheduled task that initiates the batch file below. This batch file ensures that the services will start successfully and in the correct order.

- 1. Set all Avaya services listed below to Manual start. Do not include Key Server.
- 2. Create the batch file below and save it to %SYSTEMROOT%. Only include lines for the services which are installed.


```
@echo off
rem Wait 60 seconds before execute.
timeout /t 60
net start Voicemail Pro Service
```

3. Create a scheduled task to start the batch file at system start-up.

2.7.2 Voicemail Pro User Log

User authentication failures are logged in the event viewer, under VMPro User Log. The following details are logged:

- UserID
- Tool name
- IP address of the Client trying to log in.

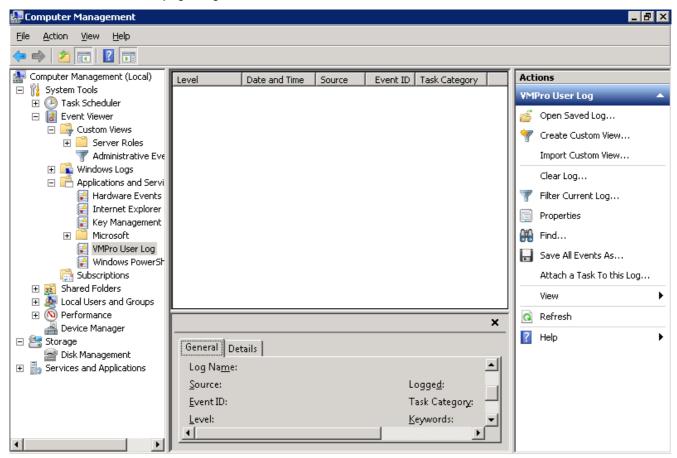


To view the log details:

- 1. Click Start | Administrative Tools | Computer Management.
- 2. In the left pane, expand **System Tools** | **Event Viewer** | **Applications and Services Logs** and click **VMPro User Log** in the tree to view the details.

2.7.3 Tracing in Debug

Many applications, including Voicemail Pro, output activity messages that are viewable in Debug View (DbgView). This application can be downloaded at http://marketingtools.avaya.com/knowledgebase/tools/debug.

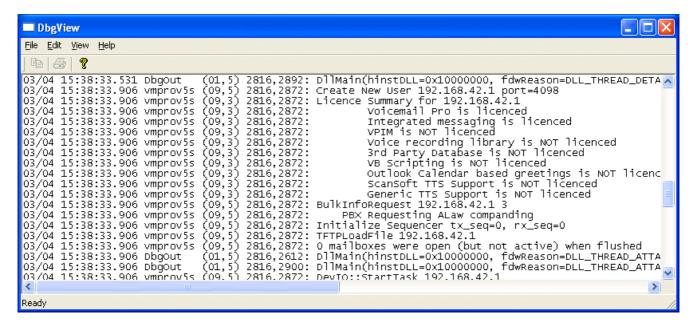


Installation

- 1. Download the zip file.
- 2. Unpack the files into a folder such as c:\debug on the server computer.
- 3. Run DbgView.exe.
- 4. Events are shown in the DbgView window. These can be logged to a file if required. The level of detail shown can be filtered to show more or less activity.

Logging

1. Run **DbgView.exe**.


2. Select File | Log Preferences.

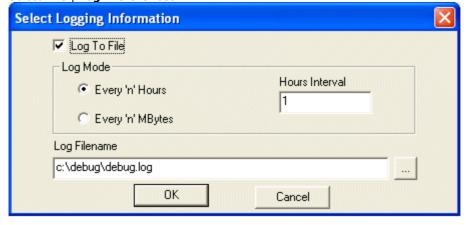

- 3. Set the logging details are required and click \mathbf{OK} .
- 4. While **DbgView** is running the viewable trace is also copied to the specified file.
- 5. The debug log files can be opened in programs such as WordPad.

Filtering

1. Select View | Debug Filters.

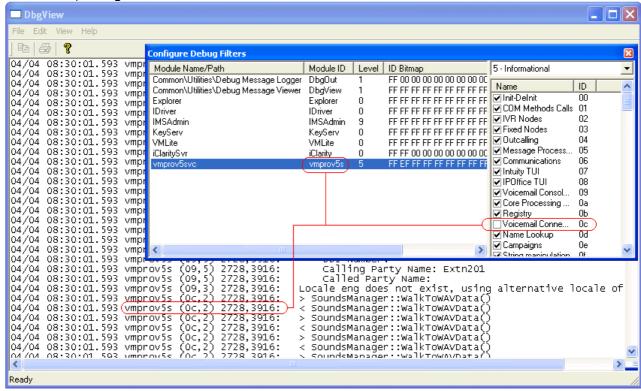

- 2. Select the module for which you want to increase/decrease reporting.
- 3. In the right hand panel adjust the level of reporting.
- 4. Close the Configure Debug Filters window.

2.7.4 The Voicemail Console

The voicemail console mode (that is running as the voicemail service in **Interact with desktop** mode) is no longer used. Running services in this mode is not supported by Microsoft on Vista or Server 2008.

Instead you should use the <u>debug viewer</u> 83th to view Voicemail Pro server activity as it occurs.

Chapter 3. Using the Voicemail Pro Client

3. Using the Voicemail Pro Client

The Voicemail Pro client is used to administer the Voicemail Pro server. This section covers the basic operation of the Voicemail Pro client to connect to a Voicemail Pro server. For details on administration using the Voicemail Pro client, see *Avaya IP Office Administering Voicemail Pro* (15-601063).

For a Windows-based server, the client can be installed on the same server and used locally to administer the server. The client can also be installed separately on another Windows computer and then be used to administer the server remotely.

For a Linux based server, the client must be installed on a separate Windows computer and then be used to administer the server remotely.


3.1 Logging in to the Voicemail Pro Server

If you start the Voicemail Pro client on the same computer as the Voicemail Pro server, the system will automatically load the settings to manage the server. You will have full access to all the servers settings, you do not need to login with an administrator account name and password.


To connect to a remote Voicemail Pro server you will need to login using the name and password of an administrator account already configured on that server. The default account is **Administrator** and **Administrator**. After logging in with this account you should change the password from that default value.

To Start the Voicemail Pro Client

- 1. From the Start menu, select Programs | IP Office | Voicemail Pro Client.
- 2. The Voicemail Pro Client window opens.
 - If the client has been started before, it will start in the same mode as it used previously. If it fails to do that or if it is the first time that the client has been started, the select mode menu is displayed.

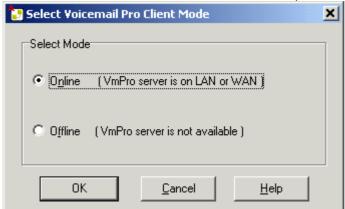


- Select either of the **Offline** modes to import and export voicemail call flow and module files without being connected to any Voicemail Pro server. In the option **Offline mode for Linux**, those call flow options not supported by a Linux-based Voicemail Pro server are grayed out.
- To connect to a Voicemail Pro server, select Online.

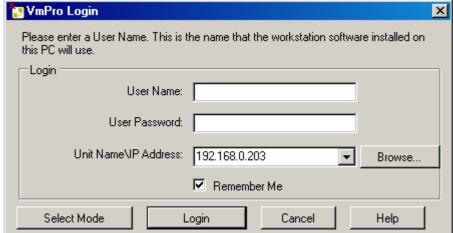

- Enter the name and password for an administrator account on the Voicemail Pro server.
 - Note that these are not required is accessing a Voicemail Pro server on the same computer as the client.


- The default account is **Administrator** and **Administrator**. After logging in with this account you should change the password from that default value.
- If three consecutive login attempts fail for an administrator account name, the account is locked for an hour.
- In the **Unit Name\IP Address** field enter the DNS name or IP address of the Voicemail Pro server. **Note:** If you are connecting to a Voicemail Pro server installed on Unified Communications Module, see Accessing UC Module Voicemail Pro 16.

Alternatively, click on **Browse** to search the local network for a server and select a server from the results.

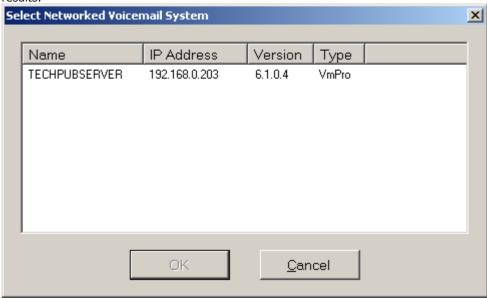

Note: As Voicemail Pro client cannot find Voicemail Pro server running on Unified Communications Module, you cannot use **Browse** to connect to Voicemail Pro server installed on Unified Communications Module

- To log in automatically to the selected Voicemail Pro server when you launch Voicemail Pro client next time, select the **Remember Me** check box.
 - 3. If connected to a remote server, the **Confirm Callflow Download** window will be displayed. If you select Download, any existing call flow that you have loaded in the client will be overwritten. For more details see <u>Callflow Download</u> 88.

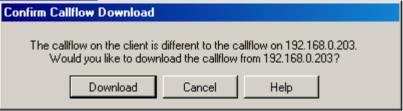


- 4. If this is the first time that the Voicemail Pro server has been logged into, you should first change the default remote access account.
 - If you logged in remotely using the default account, select File | Change Password.
 - If you logged in locally, select Voicemail Pro Administrators in the navigation panel.

3.2 Confirm Call Flow Download Window

When you connect to a server across a LAN or WAN to view or modify the call flow on the server, a check is made to see if the call flow that is stored locally on the client is the same. The call flow on the server might be different to the call flow on the client because:

- The local call flow is older than the version on the server, for example if the call flow on the server has been modified by another Client connection.
- The local call flow is newer than the version on the server, for example if the call flow on the server has been
 worked on while the local Client was being used in offline mode.
- The local call flow is from a different server, for example if you are connecting to a different server to the one from which the call flow was previously downloaded.

If the call flow is the same, no data will need to be copied from the server to the client. If the call flow is different you can chose to download the call flow from the server or to use the local call flow.

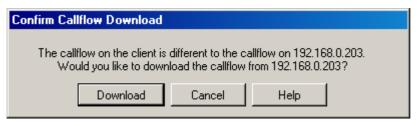

Download

Click to download the call flow from the server.

Cancel

Click this if you do not want to download the call flow from the server.

To upload the local call flow to the server, use the **Save** or **Save and Make Live** options from the **File** menu. See <u>Saving Changes and Making them Live</u> 89.

3.3 Continue Offline Message Window

Only one Voicemail Pro client can be connected to a Voicemail Pro server at any time. To prevent an idle client session from blocking the server, a <u>Client/Server Connection Timeout (mins)</u> setting is used to disconnect the idle client session. By default, the timeout is set to 5 minutes.

If your Voicemail Pro client session has timed out, the Voicemail Pro client will prompt you whether to re-establish the session or close. You are then able to continue working in offline mode or to close the client.

3.4 Saving Changes

Using Voicemail Pro Client, you can make changes to call flow settings and can save the changes. To apply the changes to the Voicemail Pro server operation, you must also make the changes live.

To save the changes in offline mode

1. Click Save to save the changes to the local database.

2. After you log in, click Save & Make Live to make the changes live.

To save the changes in online mode

Click Save & Make Live to save the changes and make the changes live.

To save the changes to a file

Click Save as to save the call flow database as a .vmp file.

You can include a **.vmp** file in the operation of a voicemail system.

3.5 Changing Sound Preferences

You can configure whether to play the sound logo when you open the Voicemail Pro client.

To change your sound preference:

1. From the File menu, select Sound Preferences.



- 2. Set your preference using the Play sound logo at start-up check box.
 - Select the check box if you want the system to play the sound logo.
 - Clear the check box if you do not want the system to play the sound logo.

3. Click **OK**.

Note: By default, the **Play sound logo at start-up** check box is selected when the Voicemail Pro client is installed or is upgraded from the previous versions that do not have the sound logo.

3.6 Logging Out

It can be useful to connect to a system to download the current system configuration and then disconnect and make changes offline. You can then test configuration changes offline before applying them to a live system.

• Logging out is not the same as closing down with the **Exit** option. See Closing Down 90.

To Log Out

- 1. From the File menu, select Log Out.
- 2. You are logged out of the Voicemail Pro server and placed in offline mode. You can either make configuration changes offline and then log back in when you are ready or log on to a different server to work. See Logging in to the Voicemail Pro Server

3.7 Closing Down

When you have finished working, you can close down the Voicemail Pro Client.

To Close the Voicemail Pro Client

- 1. From the File menu, select Exit.
- 2. If you have not made any changes, the Voicemail Pro Client closes and you are returned to the desktop. If you have made any changes, you are prompted whether to save the changes.
- 3. If you do not want to save the changes, click $\bf No$. No changes are saved. If you want to save the changes, click $\bf Yes$. The changes are saved but not made live.
- 4. If you want to make the changes live, click **Save & make Live**.

Chapter 4. IP Office Configuration

4. IP Office Configuration

The default IP Office configuration settings support almost immediate voicemail operation as soon as a Voicemail Pro server is running on the LAN. Those default settings are:

- Voicemail running on a computer accessible by the IP Office using a broadcast address of 255.255.255.255.
- · Voicemail on for each user and hunt group on.
- No Voicemail Code set for any mailboxes. Until a code is entered for a mailbox, it can only be accessed from the user's own extension.
- No Voicemail E-mail or Voicemail Help operation.
- No Voicemail Reception numbers set for user mailboxes.
- Hunt group mailboxes are created and used by default but there is no default message waiting indication or method for collecting messages. A method for accessing each hunt group mailbox should be programmed.

4.1 User and Group Mailboxes

The Voicemail Pro server creates mailboxes based on the user and hunt group names that are entered in the IP Office Manager application. Whenever the Voicemail Pro is restarted or the IP Office configuration is changed, new mailboxes are created for any new names that are found.

This method of operation has the following consequences:

• Mailboxes are based on names

For all users and groups, if their name is changed or deleted, they are no longer associated with their former mailbox and any associated Voicemail Pro start points.

· Voicemail is case sensitive

If a mailbox or start point name is entered incorrectly in IP Office Manager or Voicemail Pro, the intended operation will not occur and the call may be disconnected.

· Voicemail removes spaces at the end of mailbox names

If spaces are left at the end of a mailbox user's name in IP Office Manager, when the mailboxes are created, the space at the end of the name is dropped. When this occurs the mailbox cannot be found as there is a mismatch between the user name and directory.

4.2 System Settings

The IP Office can work with several different types of Voicemail Pro server. Therefore it is important to check that it is configured for operation with Voicemail Pro.

1. In IP Office Manager, select System.

2. Click the Voicemail tab.

System LAN1 LAN2	DNS Voicemail Telephony Directory Services System Events SMTP SMDR Twinning
Voicemail Type	Voicemail Lite/Pro Messages Button Goes To Visual Voice
Voicemail Destination	· ·
Voicemail IP Address	255 - 255 - 255 - 255
Voicemail Channel Reservation ————————————————————————————————————	
Unreserved Channels	259
Auto-Attendant	0 🗘 Voice Recording 0 🗘 Mandatory Voice Recording 0
Announcements	0 🌲 Mailbox Access 0 🕏
DTMF Breakout —	
Reception / Breakout (DTMF 0)	
Breakout (DTMF 2)	
Breakout (DTMF 3)	

Voicemail Type

Specifies the type of voicemail system the IP Office is configured to work with. Unless detailed otherwise, the option **Voicemail Lite/Pro** should be used with Voicemail Pro server. Additional options are displayed depending on the selected voicemail type.

• <u>Centralized Voicemail 128</u>

This setting is used for remote systems in a Small Community Network where the central Voicemail Pro server is being hosted by another IP Office. The **Voicemail Destination** field below is used to enter the **Outgoing Group ID** of the SCN trunk to the IP Office hosting the central Voicemail Pro server.

• <u>Distributed Voicemail [133]</u> (Software level = IP Office Release 6)

This option is used in a Small Community Network for remote IP Offices that you want to be associated with their own Voicemail Pro servers in addition to the central Voicemail Pro server. The IP Office will require licenses for Voicemail Pro operation and for the voicemail features required. The **Voicemail IP**Address below is used to enter the IP address of the IP Office's voicemail server while the **Voicemail**Destination field below is still used to set location of the central Voicemail Pro server as for centralized voicemail.

• Embedded Voicemail

Not used with Voicemail Pro.

Group Voicemail

Not used with Voicemail Pro.

Remote Audix Voicemail

Not used with Voicemail Pro.

Voicemail Lite/Pro

This is the normal setting used for Voicemail Pro.

Voicemail IP Address

By default the IP Office connects to the Voicemail Pro server by using the address 255.255.255.255 to broadcast for any server on the same LAN as itself. When it receives a response it will use that Voicemail Pro server. However you can set this access to a specific address. Change the default address (255.255.255.255) to the IP address of the computer on which the Voicemail Pro server is running.

Note: If you are using Voicemail Pro installed on Unified Communications Module, see <u>Voicemail IP Address</u> on <u>UC Module Voicemail Pro 17</u>.

 For configuration of IP Office systems using centralized Voicemail Pro in an IP Office Small Community Network (SCN), see <u>Centralized Voicemail Pro 128</u>.

Message Button Go To Visual Voice

Many Avaya telephones have a fixed button labeled **MESSAGES** which can be used by the telephone user to access their mailbox. If this option is selected, then on telephones able to support Visual Voice, visual voice is used when the button is pressed rather than the standard voice prompt interface.

• Voicemail Channel Reservation

For calls going to voicemail from the IP Office, the IP Office can restrict how many sessions of various types are active at the same time. See <u>Voicemail Channel Reservation</u> 100h.

• DTMF Breakout (IP Office 5.0)

Previous breakout numbers for a user mailbox were set through the <u>user voicemail settings</u> 6. IP Office 5.0+ supports system defaults to be set. These are then applied to all user mailboxes unless the users own settings differ.

Reception / Breakout (DTMF 0)

The number to which a caller is transferred if they press $\mathbf{0}$ while listening to the mailbox greeting rather than leaving a message (* $\mathbf{0}$ on embedded voicemail).

- For systems set to Intuity emulation mode, the mailbox user can also access this option when collecting their messages by dialing *0.
- If the mailbox has been reached through a call flow containing a **Leave Mail** action, the option provided when 0 is pressed are:
 - For IP Office mode, the call follows the **Leave Mail** action's **Failure** or **Success** results connections depending on whether the caller pressed 0 before or after the record tone.
 - For Intuity mode, pressing 0 always follows the **Reception / Breakout (DTMF 0)** setting.

Breakout (DTMF 2)

The number to which a caller is transferred if they press **2** while listening to the mailbox greeting rather than leaving a message (***2** on embedded voicemail). For pre-5.0 systems this option is not support for Voicemail Pro running in IP Office mailbox mode.

Breakout (DTMF 3)

The number to which a caller is transferred if they press **3** while listening to the mailbox greeting rather than leaving a message (***3** on embedded voicemail). For pre-5.0 systems this option is not support for Voicemail Pro running in IP Office mailbox mode.

SIP Settings

These options are available when the IP Office configuration contains a SIP line or an H323 SCN line. The values are used when the Voicemail Pro server makes calls using a SIP trunk or to a SIP device.

- SIP Name: Default = User name.
 - The value from this field is used when the **From** field of the SIP URI being used for a SIP call is set to **Use Internal Data**.
- SIP Display Name (Alias): Default = User name.

The value from this field is used when the **Display Name** field of the SIP URI being used for a SIP call is set to **Use Internal Data**.

• Contact: Default = User name.

The value from this field is used when the **Contact** field of the SIP URI being used for a SIP call is set to **Use Internal Data**.

• Anonymous: Default = Off.


If the From field in the SIP URI is set to **Use Internal Data**, selecting this option inserts **Anonymous** into that field rather than the SIP Name set above.

- 3. Click **OK** to save any changes.
- 4. Send the configuration back to the IP Office.

4.3 User Voicemail Settings

Voicemail can be configured for each individual user in IP Office Manager.

- 1. Open IP Office Manager.
- 2. In the Navigation pane, click **User** and select the individual user.
- 3. Select the Voicemail tab.

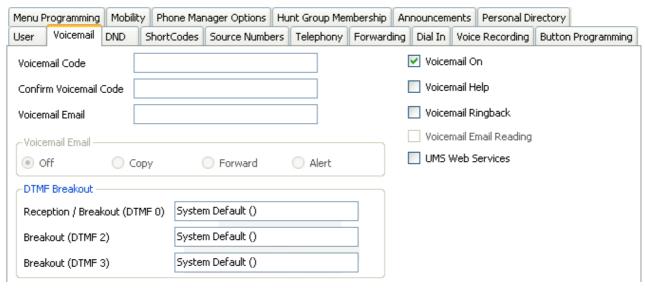

• Voicemail Code / Confirm Voicemail Code

These fields are used to set or change the user's mailbox passcode.

If the Voicemail Pro server is set to Intuity Emulation mode, mailbox users are asked to set a voicemail
code the first time that they access the mailbox.

• Voicemail On Default = On

When on, the mailbox is used by the IP Office to answer the user's unanswered calls or calls when the user's extension returns busy. Note that selecting off does not disable use of the user's mailbox. Messages can still be forward to their mailbox and recordings can be placed in it. The mailbox can also still be accessed to collect messages.

• Voicemail Help Default = Off

For voicemail systems running IP Office mailbox mode, this option controls whether users retrieving messages are automatically given an additional prompt "For help at any time press 8." If switched off, users can still press 8 for help. For voicemail systems running in Intuity emulation mode, this option has no effect. On those systems the default access greeting always includes the prompt "For help at any time, press *4" (*H in the US locale).

• Voicemail Ringback Default = Off

When on, if the user has a new message, the Voicemail Pro server can call the user's extension whenever the extension changes from off-hook to on-hook. The Voicemail Pro server will not ring the extension more than once every 30 seconds.

• **Voicemail E-mail:** Default = Blank (No voicemail e-mail features)

This field is used to set the user or group e-mail address used by the Voicemail Pro server for voicemail e-mail operation. When an address is entered, the additional Voicemail E-mail control below are selectable to configure the type of voicemail e-mail service that should be provided.

- Use of voicemail e-mail requires the voicemail pro server to have been configured to use either a local MAPI e-mail client or an SMTP e-mail server account. See Voicemail E-mail Installation 57.
- Use of voicemail e-mail for sending (automatic or manual) e-mail messages with wav files attached requires discretion, as a one-minute message creates a wav file of 1MB size.

• Voicemail E-mail Default = Off

If an e-mail address is entered for the user or group, the following options become selectable. These control the mode of automatic voicemail e-mail operation provided by the Voicemail Pro server whenever the voicemail mailbox receives a new voicemail message.

Users can change their voicemail e-mail mode using visual voice. If the Voicemail Pro server is set to
IP Office mode, user can also change their voicemail e-mail mode through the telephone prompts.
The ability to change the voicemail e-mail mode can also be provided in a call flow using a Personal
Options Menu action or a Generic action.

 If the Voicemail Pro server is set to IP Office mode, users can manually forward a message to email

Off

If off, none of the options below are used for automatic voicemail e-mail. Users can also select this mode by dialing *03 from their extension.

Copy

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a copy of the message is attached to an e-mail and sent to the e-mail address. There is no mailbox synchronization between the e-mail and voicemail mailboxes. For example reading and deletion of the e-mail message does not affect the message in the voicemail mailbox or the message waiting indication provided for that new message.

Forward

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, that message is attached to an e-mail and sent to the e-mail address. No copy of the voicemail message is retained in the voicemail mailbox and their is no message waiting indication. As with Copy, their is no mailbox synchronization between the e-mail and voicemail mailboxes. Users can also select this mode by dialing *01 from their extension.

UMS Exchange

Voicemail Pro 5.0+ supports voicemail e-mail to an Exchange server e-mail account. For users and groups also enabled for UMS Web Services this significantly changes their mailbox operation. The Exchange server inbox is used as their voicemail message store and features such as message waiting indication are set by new messages in that location rather than the voicemail mailbox on the voicemail server. Telephone access to voicemail messages, including Visual Voice access, is redirected to the Exchange server mailbox. See UMS Exchange Server Installation and UMS Exchange.

Alert

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a simple e-mail message is sent to the e-mail address. This is an e-mail message announcing details of the voicemail message but with no copy of the voicemail message attached. Users can also select this mode by dialing *02 from their extension.

UMS Web Services

If selected, the user is able to use $\underline{\sf UMS}$ and to access their mailbox. Using the UMS options, messages can be accessed via a web browser, an IMAP compatible e-mail application, or an Exchange server e-mail account. The use this function is subject to licenses.

DTMF Breakout

When a caller is directed to voicemail to leave a message, they can be given the option to be transferred to a different extension. The greeting message needs to be recorded telling the caller the options available. The extension numbers that they can be transferred to are entered in the fields below. For IP Office 5.0+, these system default values can be set for these numbers and are used unless a different number is set within these user settings.

• Reception / Breakout (DTMF 0)

The number to which a caller is transferred if they press $\mathbf{0}$ while listening to the mailbox greeting rather than leaving a message (* $\mathbf{0}$ on embedded voicemail).

- For systems set to Intuity emulation mode, the mailbox user can also access this option when collecting their messages by dialing *0.
- If the mailbox has been reached through a call flow containing a **Leave Mail** action, the option provided when 0 is pressed are:
 - For IP Office mode, the call follows the **Leave Mail** action's *Failure* or *Success* results connections depending on whether the caller pressed 0 before or after the record tone.
 - For Intuity mode, pressing 0 always follows the Reception / Breakout (DTMF 0) setting.

• Breakout (DTMF 2)

The number to which a caller is transferred if they press **2** while listening to the mailbox greeting rather than leaving a message (***2** on embedded voicemail). For pre-5.0 systems this option is not support for Voicemail Pro running in IP Office mailbox mode.

• Breakout (DTMF 3)

The number to which a caller is transferred if they press **3** while listening to the mailbox greeting rather than leaving a message (***3** on embedded voicemail). For pre-5.0 systems this option is not support for Voicemail Pro running in IP Office mailbox mode.

- 4. Click **OK** to save the voicemail changes for the user.
- 5. Amend any other user details, then save and merge the configuration changes.


4.4 User Source Numbers

The Source numbers can be changed for individual users in IP Office Manager. The Source Numbers tab gives a list of Dial In Source Numbers. Several of these numbers can relate to voicemail operation. The source number settings that can be used for Voicemail Pro are:

- V<Caller's ICLID> = Voicemail Trusted Source Access.
 - Strings prefixed with a v indicate numbers from which access to the user's mailbox does not require entry of the mailbox's voicemail code.
 - When in Intuity mode users will still have to enter their voicemail code if they use the Messages button on their telephone. However, If they have a button programmed to collect voicemail they can access their mailbox without entering their voicemail code.
- **H**<**Group Name>** = Hunt Group Voicemail Indication.
 - Configures the user to receive message waiting indication for new group messages. Enter **H** followed by the group name, for example **HMain** for the group Main.
- P<Telephone Number> = Voicemail Ringback Number.
 - This entry sets the destination for callback (outbound alert) calls from voicemail. Enter **P** followed by the telephone number including any external dialing prefix, for example **P917325559876**. This facility is only available when using Voicemail Pro through which a default Callback or a user specific Callback start point has been configured. This feature is separate from voicemail ringback which alerts the user's own extension.

To add a source number:

- 1. Open IP Office Manager.
- 2. In the Navigation pane, click **User** and select the individual user.
- 3. View the Source Numbers tab.
- 4. Click Add.

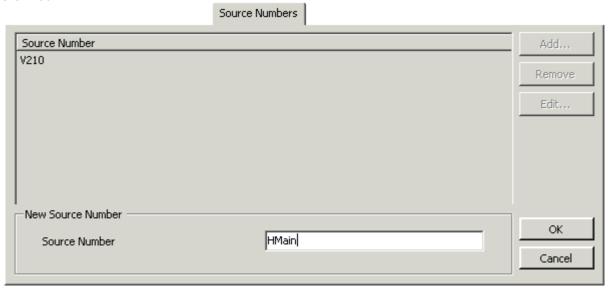


- 5. Enter the number in the **Source Number** field at the bottom of the window.
- 6. Click \mathbf{OK} and save the configuration file.

4.5 Hunt Group Settings

Voicemail can be configured for each hunt group on the IP Office system. This section looks at the basic voicemail settings.

Voicemail Answer Time

For IP Office 4.0+, the condition under which calls targeted to a hunt group go to voicemail has been changed to a timeout. For calls waiting to be answered, once this timeout expires the call is redirected to voicemail regardless of where it is in the hunt group.

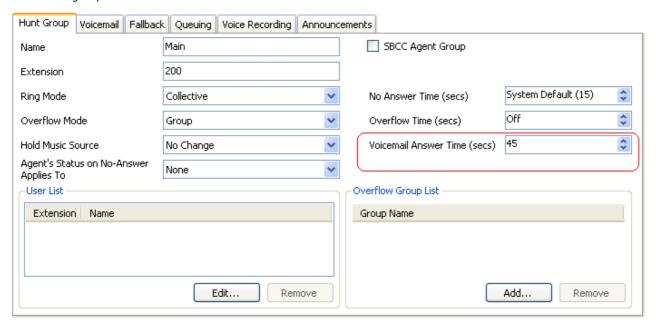

Hunt Group Settings

- 1. Open IP Office Manager.
- 2. In the Navigation pane, click Hunt Group and select the hunt group.
- 3. Select the Voicemail tab.



• Voicemail Code / Confirm Voicemail Code

Enter a voicemail code between 1-15 digits in the **Voicemail Code** field. This is required when users retrieve voicemail messages for the hunt group remotely, for example from an extension that is not a member of the hunt group or from an external telephone.

- **Voicemail E-mail:** Default = Blank (No voicemail e-mail features)

 This field is used to set the user or group e-mail address used by the Voicemail Pro server for voicemail e-mail operation. When an address is entered, the additional Voicemail E-mail control below are selectable to configure the type of voicemail e-mail service that should be provided.
 - Use of voicemail e-mail requires the voicemail pro server to have been configured to use either a local MAPI e-mail client or an SMTP e-mail server account. See <u>Voicemail E-mail Installation</u> [57].
 - Use of voicemail e-mail for sending (automatic or manual) e-mail messages with wav files attached requires discretion, as a one-minute message creates a wav file of 1MB size.

• Voicemail E-mail Default = Off

If an e-mail address is entered for the user or group, the following options become selectable. These control the mode of automatic voicemail e-mail operation provided by the Voicemail Pro server whenever the voicemail mailbox receives a new voicemail message.

- Users can change their voicemail e-mail mode using visual voice. If the Voicemail Pro server is set to
 IP Office mode, user can also change their voicemail e-mail mode through the telephone prompts.
 The ability to change the voicemail e-mail mode can also be provided in a call flow using a Personal
 Options Menu action or a Generic action.
- If the Voicemail Pro server is set to IP Office mode, users can manually forward a message to email.

Off

If off, none of the options below are used for automatic voicemail e-mail. Users can also select this mode by dialing *03 from their extension.

Copy

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a copy of the message is attached to an e-mail and sent to the e-mail address. There is no mailbox synchronization between the e-mail and voicemail mailboxes. For example reading and deletion of the e-mail message does not affect the message in the voicemail mailbox or the message waiting indication provided for that new message.

Forward

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, that message is attached to an e-mail and sent to the e-mail address. No copy of the voicemail message is retained in the voicemail mailbox and their is no message waiting indication. As with Copy, their is no mailbox synchronization between the e-mail and voicemail mailboxes. Users can also select this mode by dialing *01 from their extension.

UMS Exchange

Voicemail Pro 5.0+ supports voicemail e-mail to an Exchange server e-mail account. For users and groups also enabled for UMS Web Services this significantly changes their mailbox operation. The Exchange server inbox is used as their voicemail message store and features such as message waiting indication are set by new messages in that location rather than the voicemail mailbox on the voicemail server. Telephone access to voicemail messages, including Visual Voice access, is redirected to the Exchange server mailbox. See UMS Exchange. Installation was and UMS Exchange.

Alert

If this mode is selected, each time a new voicemail message is received in the voicemail mailbox, a simple e-mail message is sent to the e-mail address. This is an e-mail message announcing details of the voicemail message but with no copy of the voicemail message attached. Users can also select this mode by dialing *02 from their extension.

Voicemail On Default = On

When on, the mailbox is used by the IP Office to answer the user's unanswered calls or calls when the user's extension returns busy. Note that selecting off does not disable use of the user's mailbox. Messages can still be forward to their mailbox and recordings can be placed in it. The mailbox can also still be accessed to collect messages.

• Voicemail Help Default = Off

For voicemail systems running IP Office mailbox mode, this option controls whether users retrieving messages are automatically given an additional prompt "For help at any time press 8." If switched off, users can still press 8 for help. For voicemail systems running in Intuity emulation mode, this option has no effect. On those systems the default access greeting always includes the prompt "For help at any time, press *4" (*H in the US locale).

Broadcast

Select the option **Broadcast** if you want any voicemail messages left for the hunt group to be forwarded to the mailboxes of the individual group members. The original message in the hunt group mailbox is deleted after being broadcast.

• UMS Web Service (IP Office 5.0+)

If selected, the hunt group mailbox can be accessing using UMS 314 via a web browser or an IMAP compatible e-mail application.

4. Click **OK** and save the configuration.

4.6 Voicemail Channel Reservations

By default inbound calls routed from IP Office to voicemail are able to use any available voicemail channels, up to the limit of the <u>number of licensed channels</u> (13), regardless of how many calls of the same type are already in progress. However, if required, channels can be reserved for different types of inbound calls to the Voicemail Pro server.

Voicemail channel reservations can be made for:


- Auto Attendant
- Announcements
- Voice recording
- Mailbox access
- · Mandatory voice recording

It is worth checking the voicemail channel reservations if there are problems. If insufficient voicemail channels are available:

- Internal calls to an auto attendant are queued. The call will queue until a resource becomes available.
- Announcements are not heard by the caller, but the call is routed correctly.
- Manual voice recording is activated but no recording is made. The call will continue.
- Users are placed in a queue when trying to access their mailbox access.
- A user with mandatory recording on outgoing calls (internal and external) gets a busy tone.
- A call on a line with mandatory recording set will be barred.

To change voicemail channel reservations:

- 1. Open IP Office Manager and the load the configuration.
- 2. In the Navigation pane click **System** and select the system.
- 3. Click the Voicemail tab

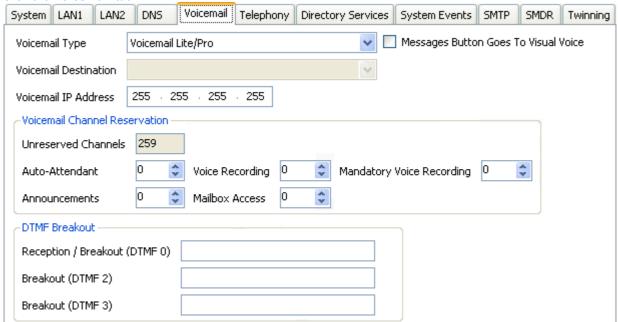

4. Amend the channel reservations as required. By default the values are 0.

To view the utilization of voicemail channels:

- 1. Open the System Status Application.
- 2. Click **Resources**. The System Resources summary is displayed. The following details are displayed:
 - The number of voicemail channels available.
 - The number of channels in use.
 - Congestion information

Channel Restrictions

- The Voicemail Pro server has restrictions on the number of channels it can use for different types of outgoing calls that it can make. These limits are separate for each of the call types. When a limit is reached, further calls of that type are delayed until one of the existing calls is completed. These limitations are not controlled by Voicemail Channel Reservation 10th settings.
 - Outcalling can use up to 5 channels at any time.
 - Conference center invitation calls can use up to 5 channels at any time.
 - Callback calls can use up to 2 channels at any time.
 - Alarm calls can use up to 2 channels at any time.

Chapter 5. System Preferences

5. System Preferences

A range of Voicemail Pro server settings can be set through the Voicemail Pro client.

To change the Voicemail Pro Preferences

- 1. Click the **Preferences** icon and then choose **General** or **VPNM**. Alternatively, from the **Administration** menu, select **Preferences** and then choose **General** or **VPNM**.
- 2. Select the System Preferences tab required.
 - General 105

General Voicemail Pro server settings.

• Directories 10th

Set the folder paths for different file locations.

• **Email** 108

Select the e-mail mode (MAPI or SMTP) used by the Voicemail Pro server for its e-mail functions and configure various settings for the selected mode.

• Housekeeping 115

Set the times for automatic deletion of different types of messages. Also, set the default playback order.

• SNMP Alarm 116

Set the criteria which will cause the Voicemail Pro server to send alarms via the IP Office.

Outcalling 117

Set the default times for outcalling operation and the frequency of outcalling retires.

• Voicemail Recording 117

Set the configurations for the SFTP connection to the VRL directory.

• Backup & Restore 119

Set the configurations for an immediate backup or the configurations and schedules for the daily, weekly, and monthly backups.

VPNM 120


If VPNM is installed and licensed, this tab is available to set the locations of the remote VPNM servers and the mailbox users on those servers.

5.1 General

Although the default IP Office configuration settings enable voicemail to start operating almost immediately, as soon as a Voicemail Pro server is running on the LAN, there are some general system preferences that you can set or change.

To set general system preferences

- 1. Open the Voicemail Pro Client application and connect to Voicemail Pro server.
- 2. From the **Administration** menu, select **Preferences** > **General**.

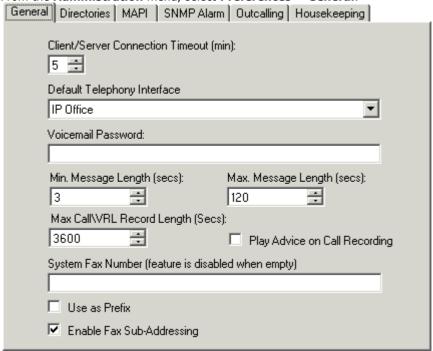

- **Debug Level:** Default = Information
 Use this field to set the level of information that the server should output for logging, if required.
- Default Telephony Interface: Default = Intuity
 Use this field to select the mailbox operation mode for all mailboxes. The available options are IP Office mode and Intuity emulation mode.
- Voicemail Password: Default = Blank
 A voicemail password is optional for the Voicemail Pro server. If you set a password here, it must match the
 Voicemail Password configured in the IP Office security settings. See Identifying the Voicemail Pro server
 Computer 94.
- Client/Server Connection Timeout (mins): Default = 5 minutes.

 As the Voicemail Pro server supports only one Voicemail Pro client to be connected at a time, use this field to set a timeout period for an inactive client to be logged out from the Voicemail Pro server automatically.
- Min. Message Length (secs): Default = 0 seconds (in IP Office mode) and 3 seconds (in Intuity mode).

 Use this field to set a restriction on the minimum length for a message. The minimum value that you can set is 0 seconds, and the maximum value is 10 seconds. Messages that are of shorter length than the set minimum length are deleted immediately. In IP Office mode, this field is unavailable.
- Max. Message Length (secs): Default = 120 seconds.

 Use this field to set a restriction on the maximum length for a message. The maximum value that you can set is 3600 seconds (60 minutes). A message with the message length of 1 minute occupies approximately 1MB of disk space.
- Min. Password Length: Default = 0 (in IP Office mode) and 2 (in Intuity mode).
 Use this field to set a restriction on the minimum length of a mailbox password. The minimum value that you can set is 0 in IP Office mailbox mode and 2 in Intuity emulation mode. The maximum value is 15.
 Note: The Min. Password Length field is unavailable if the Voicemail Pro client version 9.0 is connected to a Voicemail Pro server version 8.0 or earlier. Also note that in a centralized voicemail setup with distributed Voicemail Pro servers, the field is unavailable on all the distributed Voicemail Pro servers, as the password length for mailboxes is controlled by central Voicemail Pro server.
- Failback Option: Default = Manual Failback
 Use this field to configure the mode of failback operation in a voicemail system with a backup Voicemail Pro server. Note that this field is unavailable if you are not using a voicemail system with a backup Voicemail Pro server and not logged on to the active Voicemail Pro server using an Administrator account. For details, see Avaya IP Office Administering Voicemail Pro (15-601063).

• Max. Call\VRL Record Length (secs): Default = 3600 seconds.

Use this field to set a restriction on the maximum recording length for calls. The default and maximum length is 3600 seconds (60 minutes).

• Play Advice on Call Recording: Default = On

Use this check box to set whether to play an advice warning to the callers when their calls start getting recorded. It is a legal requirement in some countries to inform the callers before recording their calls, and so confirm before you clear this check box.

• System Fax Number: Default = Blank

Use this field to set the number of the fax machine to which all incoming faxes are to be directed. If you are using a fax board, the number that you enter must match the extension number that is connected to the fax board of the fax server computer.

- Intuity mailbox owners have the additional option to define their own personal fax number instead of the system fax number. As the system administrator, you still need to set a system fax number to enable mailbox owners to override it with their preferred personal fax number. Incoming calls are directed to Voicemail Pro and then Voicemail Pro redirects fax calls to the mailbox owner's personal fax number, if one has been set. For details, mailbox owners can refer Avaya IP Office Using Voicemail Pro in Intuity Mode (15-601130).
- If your fax system requires prefix addressing, for example the C3000 fax server, do not type a fax number in the **System Fax Number** box. Instead, type the number to use as a prefix so that a fax message can be identified and forwarded to the extension number of the intended recipient. For example, if the prefix is 55, a fax message for extension 201 would have the prefix of 55 automatically added so that the complete number becomes 55201.

System Fax Number

By default, fax detection is not enabled when Voicemail Pro is first installed. When fax detection is enabled, any fax calls that are left in a voicemail mailbox, are redirected to this system fax number.

· Use as a Prefix

If your fax system does not use prefix addressing, leave this box unchecked. For this feature to work, you also need to set up a short code.

• Enable Fax Sub-Addressing

Most fax servers perform fax forwarding based on DTMF signaling received with the fax call. Check the **Enable Fax Sub-Addressing** box so that the DTMF signal is passed to the fax server after the call has been answered so that the fax can be forwarded to the e-mail address of the intended recipient.


3. Click OK.

5.2 Directories

When Voicemail Pro is installed some default folder locations are used. You can change these if required.

To set the location of Voicemail system folders

- 1. Open the Voicemail Pro Client application and connect to the Voicemail Pro server.
- 2. From the **Administration** menu, select **Preferences** > **General**.
- 3. Click the **Directories** tab.

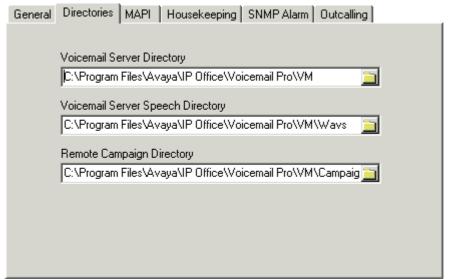

• Voicemail Server Directory

The path to the folder where the Voicemail Pro server program is to be stored. This is the folder where the file **Root.vmp** is saved when the **Save & Make Live** option is used.

• Voicemail Server Speech Directory

The path to the folder where the libraries of speech prompts are to be stored.

• Remote Campaign Directory

The path to the folder where the campaign files are to be stored.

4. Click OK.

5.3 Email


The **Email** tab is used to configure which e-mail mode (MAPI or SMTP) the Voicemail Pro server should use and the settings for that mode.

5.3.1 MAPI

This form is used to configure MAPI settings for use by the Voicemail Pro server.

MAPI Service

Use this tab to configure the IP address and port of the MAPI proxy service.

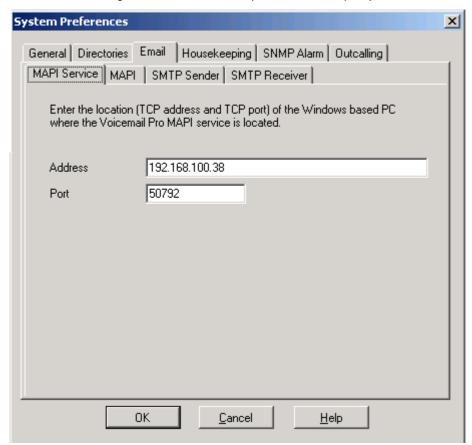


Address

This text box is used to enter the TCP address of the Windows-based computer where MAPI Service is installed.

Port

This text box is used to enter the default **50792** TCP Port of the Windows-based computer where MAPI Service is installed.

MAPI

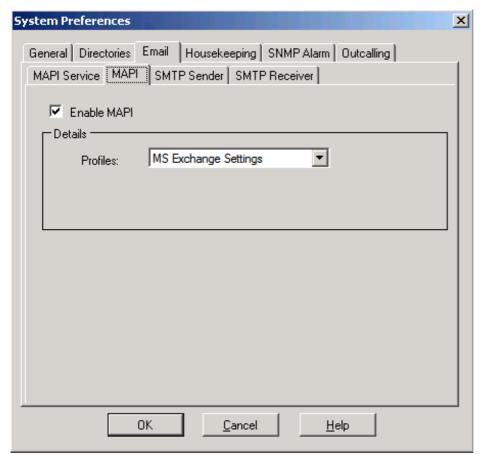

• Enable MAPI

Selecting this option will switch the Voicemail Pro server to using MAPI for its e-mail options rather than SMTP.

Profile

This is used to select the MAPI e-mail account the Voicemail Pro server should use to provide visibility to the e-mail account mailboxes for which it requires access. The profile must exist within the MAPI e-mail client on the server computer and must be useable by the Windows account under which the Voicemail Pro service is running.

5.3.2 SMTP Sender


These settings are used to configure the SMTP server and server account that the Voicemail Pro server uses for sending e-mails using SMTP.

Multiple servers can be configured. The first entry specifies the default SMTP server used for sending e-mails if there is no other entry matching the domain specified in the e-mail destination address. Additional servers can be added when different settings are required for sending e-mails to specific domains. For example, the default can be configured for the customer's internal network exchange server with additional entries added for e-mails to external e-mail domain addresses such as yahoo.com.


Messaging Between Voicemail Pro Servers

VPNM, distributed Voicemail Pro servers and primary/backup Voicemail Pro servers all use SMTP to exchange information and messages between the Voicemail Pro servers. When that is the case the first entry in the **SMTP Sender** list must be the one used and needs to be configured for that service with the domain and server setting both matching the IP address or fully qualified domain of the Voicemail Pro server.


In the example below, the first entry is being used for messages to other Voicemail Pro servers. Its own address is used as both the domain and server settings as an SMTP service on the same server as the voicemail service is used (for example, IIS SMTP on the Windows server). The next entry is used for other e-mails that use the customer's general e-mail domain address with the server set to the customers e-mail server. A third entry has been added to send some e-mails generated by E-mail Actions in call flows direct to an external e-mail service.

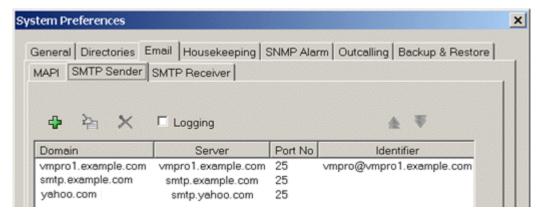

• The first two entries in the example above can be combined. Voicemail Pro server to server synchronization uses the **Domain** setting only whereas other e-mail services use the **Server** address and other setting.

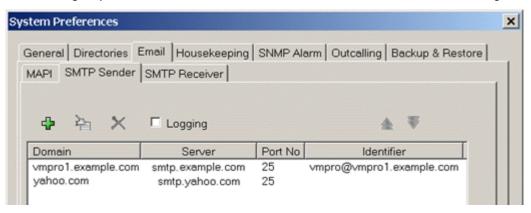

SMTP Sender Settings

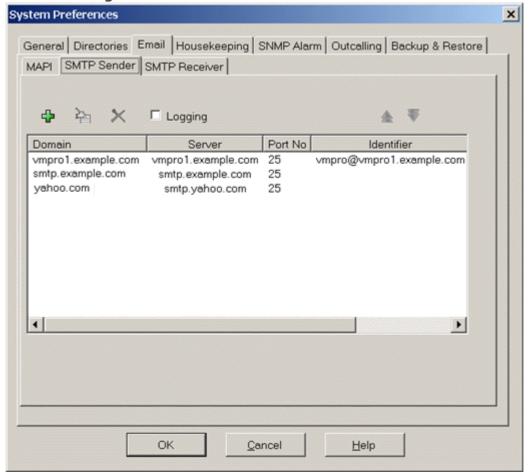


Logging

If selected, <u>SMTP logging 148</u> by the server is enabled.

Servers

This section is used to enter details of the SMTP server or servers to which the Voicemail Pro server sends its messages.

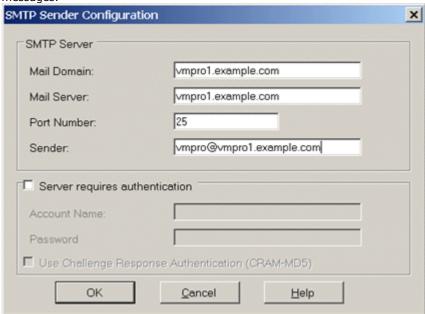

To add a server, click on the Φ . icon. To edit the server, click on the Φ icon. To delete a server entry, click on X.

• Mail Domain

This field is used differently depending on whether it is the first entry in the list or not:

• For the first server entry in the list:

This is the default outgoing e-mail settings. It also sets the mail destination domain on which the Voicemail Pro server filters incoming messages (see below) and so is repeated on the **SMTP Receiver** 1139 tab.

• Messaging Between Voicemail Pro servers

For messaging between Voicemail Pro servers, the first entry in the SMTP Sender list must be the one configured and used. Each server uses the SMTP server service on the same server computer as the voicemail service. For example a Windows based servers uses the SMTP e-mail provided by the IIS on the same server. The voicemail service also uses the domain set to filter incoming SMTP mails received by the SMTP server. For this to work, the domain entered should be the fully qualified name of the server on which the Voicemail Pro serveris running, for example *vmpro1.example.com*. Any incoming messages where the recipient mail domain is not exactly the same as the specified domain are ignored. The recipient can either by *vmsyncmaster*, *vmsyncslave* or the name or extension of a mailbox on the Voicemail Pro server, for example *Extn201@vmprocentral.example.com* or *201@vmprocentral.example.com*.

· For subsequent entries:

The domain specifies that these settings should be used for e-mails sent to the matching domain. The entry must be a fully qualified name resolvable by DNS or an IP address.

Server

This specifies the IP address or fully qualified domain name of the SMTP server to which messages are sent. Voicemail Pro supports SMTP communication over both - SSL/TLS and plain text.

. For the first server entry in the list:

Where messaging between Voicemail Pro servers is being used (central, backup and or distributed servers), the first entry is used and will match the domain set above.

• For subsequent entries:

It will be the address of the e-mail server that will handle e-mails for recipients other than another Voicemail Pro server on the network.

Port Number

This is the port number on the SMTP server to which the messages are sent. Port number for an external SMTP server can be different depending on whether you want to send the messages in secure mode or non-secure mode.

• Sender (Identifier)

Note that some servers will only accept e-mails from a specific sender or sender domain. If left blank, the Voicemail Pro server will insert a sender using either the e-mail address set for the voicemail mailbox user if set or otherwise using the best matching name it can resolve from the IP Office.

• Server Requires Authentication

This check box indicates whether the connection to send SMTP messages to the mail server requires authentication with that server. The authentication will typically be to the name and password of a mailbox account configured on that server.

Account Name

Sets the name to use for authentication.

Password

Set the password to use for authentication.

• User Challenge Response Authentication (Cram MD5)

If this check box is selected, the name and password are sent using Cram MD5.

Note:

If you are using Voicemail Pro in a distributed environment, a distributed server delivers a recorded message to the central Voicemail Pro server on completion of the recording. However, the presentation to the Voicemail Pro server for message waiting indication (MWI) and access via telephone might be delayed because of the internal processing of the message and the network latency. The delay might be up to 2 minutes in high traffic situations.

5.3.3 SMTP Receiver

This tab is used to set where the Voicemail Pro server checks for incoming SMTP messages. The **SMTP Receiver** setting can be set to either *Internal* or *External*.


- Internal | 115 | Use this option for Voicemail Pro servers running on the IP Office Application Server server.
- External [113]
 Use this option when the Voicemail Pro server is on a server where is co-exists with a third-party SMTP application, for example an IIS server with SMTP enabled.

Internal

The Internal setting can be used when the Voicemail Pro server should check the appropriate account on an SMTP server for waiting messages. The server settings will be pre-populated using the entries from the **SMTP Sender** [116] form.

• Distributed/Primary/Backup Voicemail

This is the option that should be used when the Voicemail Pro server is a IP Office Application Server (Linux) based server in a network distributed Voicemail Pro servers are being used or is a server in a primary/backup Voicemail Pro server pairing.

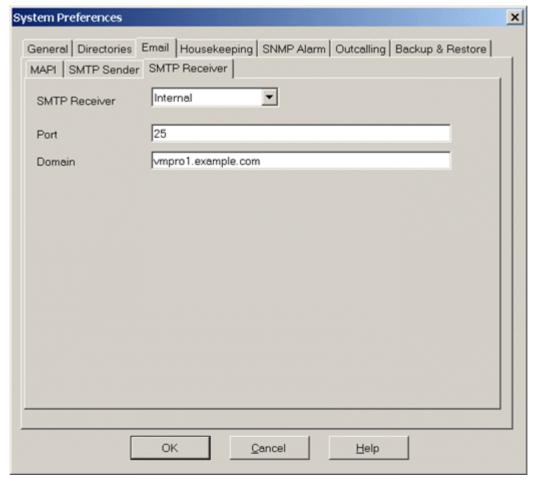

Port

This is the port on which the Voicemail Pro server listens for incoming messages. The default is 25.

Domain

This is the domain destination address for which the server will accept incoming e-mails. Note that it matches the domain set by the first server entry in the <u>SMTP Sender [116]</u> tab.

• Messaging Between Voicemail Pro servers


For messaging between Voicemail Pro servers, the first entry in the SMTP Sender list must be the one configured and used. Each server uses the SMTP server service on the same server computer as the voicemail service. For example a Windows based servers uses the SMTP e-mail provided by the IIS on the same server. The voicemail service also uses the domain set to filter incoming SMTP mails received by the SMTP server. For this to work, the domain entered should be the fully qualified name of the server on which the Voicemail Pro serveris running, for example **vmpro1.example.com**. Any incoming messages where the recipient mail domain is not exactly the same as the specified domain are ignored. The recipient can either by **vmsyncmaster**, **vmsyncslave** or the name or extension of a mailbox on the Voicemail Pro server, for example **Extn201@vmprocentral.example.com** or **201@vmprocentral.example.com**.

External

The **External** setting should be used when the Voicemail Pro server should check the mail drop folder on a local SMTP server for SMTP e-mail messages. For example, when there is an IIS server with SMTP enabled on the same server computer as the Voicemail Pro server.

Distributed or Primary/Backup Voicemail

This is the option that should be used if the Voicemail Pro server is a Windows-based server in a network where distributed Voicemail Pro servers are being used or if the Voicemail Pro server is a server in a primary/backup Voicemail Pro server pairing.

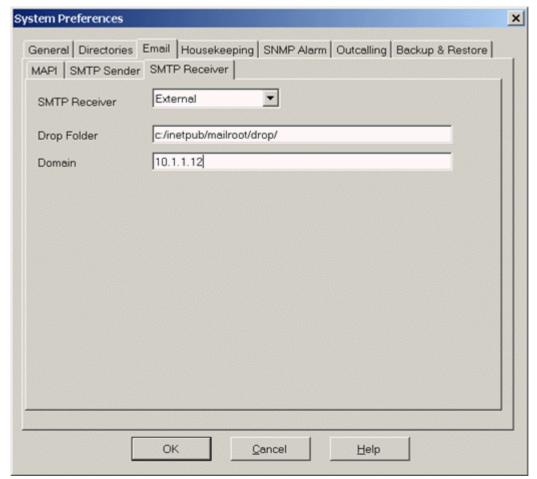

Port

This is the port on which the server receives incoming SMTP e-mails.

Domain

This is the domain destination address for which the server will accept incoming e-mails. Note that it matches the domain set by the first server entry in the <u>SMTP Sender [116]</u> tab.

• Messaging Between Voicemail Pro servers

For messaging between Voicemail Pro servers, the first entry in the SMTP Sender list must be the one configured and used. Each server uses the SMTP server service on the same server computer as the voicemail service. For example a Windows based servers uses the SMTP e-mail provided by the IIS on the same server. The voicemail service also uses the domain set to filter incoming SMTP mails received by the SMTP server. For this to work, the domain entered should be the fully qualified name of the server on which the Voicemail Pro serveris running, for example *vmpro1.example.com*. Any incoming messages where the recipient mail domain is not exactly the same as the specified domain are ignored. The recipient can either by *vmsyncmaster*, *vmsyncslave* or the name or extension of a mailbox on the Voicemail Pro server, for example *Extn201@vmprocentral.example.com* or *201@vmprocentral.example.com*.

Note:

If you are using Voicemail Pro in a distributed environment, a distributed server delivers a recorded message to the central Voicemail Pro server on completion of the recording. However, the presentation to the Voicemail Pro server for message waiting indication (MWI) and access via telephone might be delayed because of the internal processing of the message and the network latency. The delay might be up to 2 minutes in high traffic situations.

5.4 Housekeeping

Use the **Housekeeping** tab to:

- Set the duration after which the Voicemail Pro server deletes messages and recordings automatically.
- · Set the default playback order of messages.

The following are the different categories of messages that the housekeeping settings apply to:

· New messages

This status is applied to messages where neither the header nor the message content has been played.

Old messages

This status is applied to messages where the user has played the message content but has not marked the message as saved.

· Saved messages

This status is applied to messages that have been marked as saved by the user.

Unopened messages

This status is used for messages where, in Intuity emulation mode, the user has played the message header but has not played the message content.

• New recordings

This status is used for recordings that have not been played.

· Old recordings

This status is used for recordings that have been played.


Deleted messages

This status is used for messages that have been marked as deleted through mailbox access.

Note: The housekeeping deletion settings do not apply to the messages stored on an Exchange server.

To set the housekeeping settings

- 1. Open the Voicemail Pro Client application and connect to the voicemail server.
- 2. From the **Administration** menu, select **Preferences** > **General**.
- 3. Click the **Housekeeping** tab.

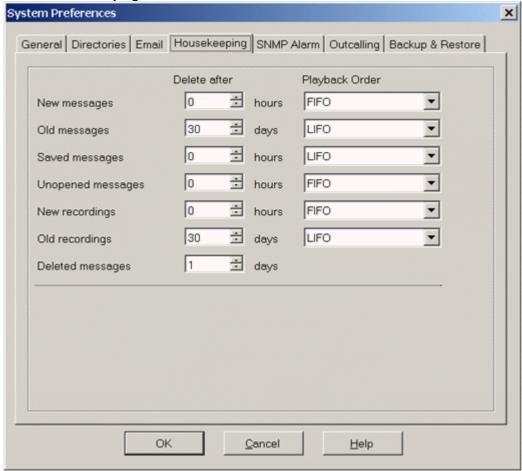


- 4. Under **Delete after**, set the time, in hours, after which you want the respective messages to be deleted automatically. A value of **0** disables automatic deletion. The actual deletion is performed during the next idle period, that is, when there are no calls to or from the Voicemail Pro server.
- 5. Under **Playback Order**, set the order of playback for the respective message types. The available options are First in-First out (**FIFO**) and Last in-First out (**LIFO**). **FIFO** is the default option.
- 6. Click OK.

5.5 SNMP Alarm

The IP Office system can be configured to generate alarms. These alarms can be sent from the IP Office using SNMP, SMTP e-mail, or Syslog alarm formats. This tab is used to set the levels at which the Voicemail Pro server will indicate to the IP Office to send an alarm.

To set SNMP alarms

- 1. Open the Voicemail Pro Client application and connect to Voicemail Pro server.
- 2. From the **Administration** menu, select **Preferences** > **General**.
- 3. Click the SNMP Alarm tab.

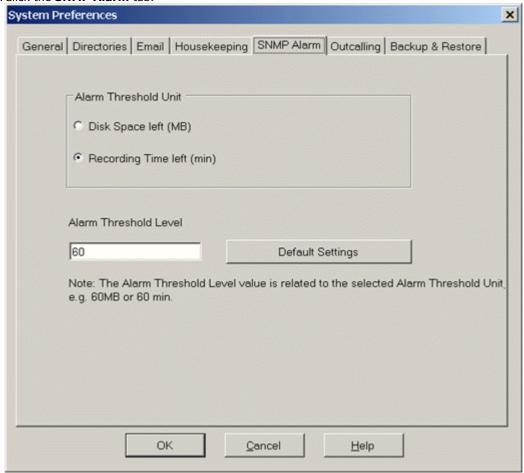

- 4. Under Alarm Threshold Unit, select either Disk Space Left (MB) or Recording Time left (minutes).
- 5. In the **Alarm Threshold Level** field, enter the number of units (minutes or MB) at which SNMP alarms are to be triggered. The minimum value that you can enter is 11.

 In addition to the alarm that triggers at the threshold value, the following SNMP alarms are set automatically:
 - Space OK Alarm

This alarm is triggered when the amount of available space returns to above a level set at *Alarm Threshold Level plus 30*.

Critical Alarm

This alarm is set at 30. If the Alarm Threshold Level is set at less than 40, the critical alarm is set at *Alarm Threshold Level minus 10*. Note that the critical alarm value decreases if you decrease the Alarm Threshold value, but the critical alarm value does not increase if you increase the Alarm Threshold value. So, the critical alarm value keeps on decreasing and remains set at the least value that it takes. To reset the critical alarm back to 30, click **Default Settings**.

- 6. To return to the default alarm settings, click **Default Settings**. The Alarm Threshold Level is reset to 60. The Space OK level is reset to 90. The Critical Alarm level is reset to 30.
- 7. Click OK.

5.6 Outcalling


The outcalling preferences in Voicemail Pro are defaults for global operation. Mailbox owners can configure their own outcalling options from their telephone, for example, create their own time profile.

For details on configuring outcalling, see Avaya IP Office Using Voicemail Pro in Intuity Mode (15-601130).

A timeout value can also be set by a user. This is the duration for which outcalling will attempt to connect to a number before giving up.

To set the global outcalling preferences

- 1. Open the Voicemail Pro Client application and connect to the Voicemail Pro server.
- 2. From the **Administration** menu, select **Preferences** > **General**.
- 3. Click the **Outcalling** tab.

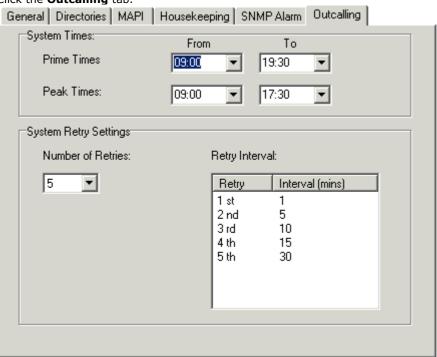

- 4. Select the times that outcalling is active in the **System Times** section.
 - Prime Times

The time period that outcalling is to be active as default for the system.

Peak Times

The busiest working hours.

- 5. Set the retry settings in the **System Retry Settings** section.
 - The **Number of Retries** can be between 0 and 10. If the message is not collected after the last retry, no notification is sent until another new message is delivered in the user's mailbox.
 - The **Retry Interval** for each successive retry. The interval is the length of time between each attempt to connect to the target number again. The 6th to 10th retries use the default retry interval.
 - Double-click a selected retry time to edit the interval between retries. The New interval number window opens where the length of time between each attempt to ring the target number can be changed. Click **OK** to save the change and return to the System Preferences window.

6. Click OK.

5.7 Voicemail Recording


The **Voicemail Recording** tab is displayed only if you connect to a Linux-based Voicemail Pro server.

On a Linux-based Voicemail Pro server, use the **Voicemail Recording** tab to configure SFTP connection on Voicemail Pro server to transfer recordings to the Voice Recording Library (VRL) application IP Office ContactStore.

To configure SFTP connection to the VRL directory

- 1. Open the Voicemail Pro Client application and connect to Voicemail Pro server.
- 2. On the Administration menu, click Preferences > General.

3. Click the Voicemail Recording tab.

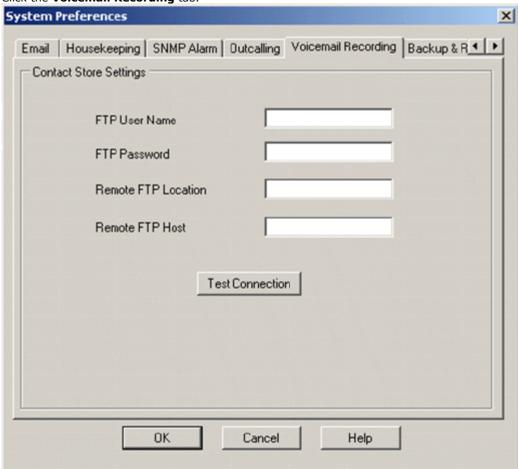

- 4. Enter the required details in the respective fields.
 - **Note:** Enter the absolute FTP path of the VRL directory in **Remote FTP Location**.
- 5. Click **Test Connection** to verify the connectivity of the Voicemail Pro server to the remote SFTP server. If the connection fails, see <u>SFTP Host Key Verification</u> 148).
- 6. Click OK.


5.8 Backup & Restore

Using the **Backup & Restore** tab, you can:

- 1. View the details of previous backups.
- 1. Take an immediate backup of the voicemail data and settings.
- 2. Schedule backups for the voicemail data and settings.
- 3. Restore the voicemail data and settings from a backup, on a Windows-based Voicemail Pro server.

To view, restore, or schedule backups

- 1. Open the Voicemail Pro Client application and connect to Voicemail Pro server.
- 2.On the **Administration** menu, click **Preferences > General**.
- 3. Click the Backup & Restore tab.

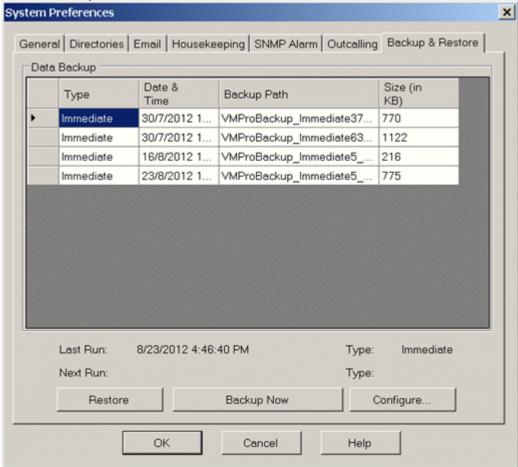

- The **Data Backup** section displays the following details of the previous backups:
 - Type: Immediate, Daily, Weekly, or Monthly.
 - Date & Time
 - Backup Path
 - Size

Note: The list includes only those backups that are saved on the local computer. To refresh the list, close the **System Preferences** dialog box and open the dialog box again.

Last Run & Type

The time and type of the previous backup.

Next Run & Type

The time and type of the backup that is scheduled to run next.

Note: If a backup is already in progress, the Next Run field displays Active.

Restore

Click **Restore** to restore the voicemail data and settings from a backup. For details, see *Avaya IP Office Administering Voicemail Pro* (15-601063).

Backup Now

Click **Backup Now** to take an immediate backup of the voicemail data and settings. For details, see *Avaya IP Office Administering Voicemail Pro* (15-601063).


Note: If a backup is already in progress, the **Backup & Restore** dialog box displays **Abort** instead of **Backup Now**. Click **Abort** to abandon the backup in progress.

Configure

Click **Configure** to schedule backups for the voicemail data and settings. For details, see *Avaya IP Office Administering Voicemail Pro* (15-601063).

4. Click **OK** to close the **System Preferences** dialog box.

Note: If you connect to a Linux-based Voicemail Pro server or to a Windows-based Voicemail Pro server that is not running on the same computer as the Voicemail Pro Client, the **Restore** button is not available.

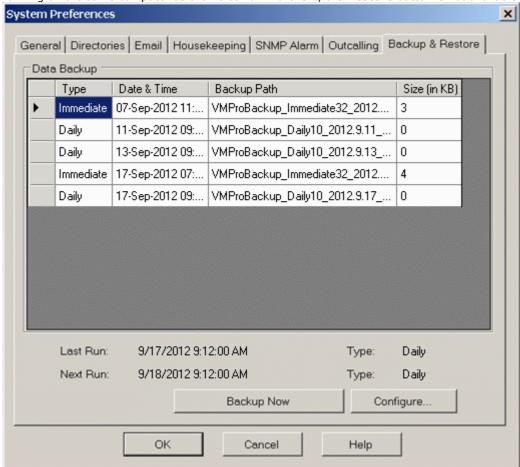


5.9 VPNM

This set of preferences is used to add a list of the remote VPNM servers and mailbox users on those servers.

• I These features are not supported on a Linux-based Voicemail Pro server.

To open the VPNM window:

- 1. Start the Voicemail Pro Client.
- 2. From the Administration menu, select Preferences > VPNM. The VPNM window opens.

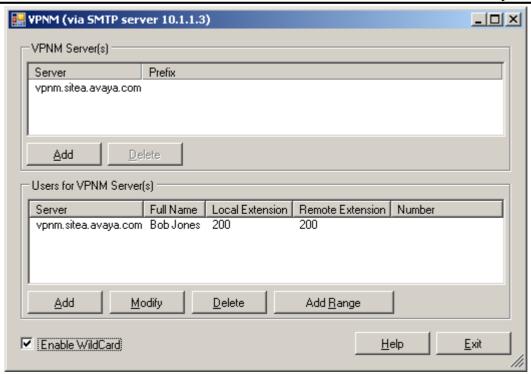

To add a VPNM server:


- 1. In the VPNM Server(s) section, click Add.
- 2. Enter the fully qualified domain name of the remote VPNM destination (the remote Voicemail Pro server computer or Avaya Interchange).
- 3. Enter the two digit access prefix, if these are being used.
- 4. Click OK.

To delete a VPNM server:

- 1. In the **VPNM Server(s)** section, select the server that is to be deleted.
- 2. Click **Delete**. When a server is deleted, all of the users associated with that server are also deleted.

To add a user to VPNM server:

1. In the **Users for VPNM Server(s)** section, click **Add**. The Adding a new user window opens.

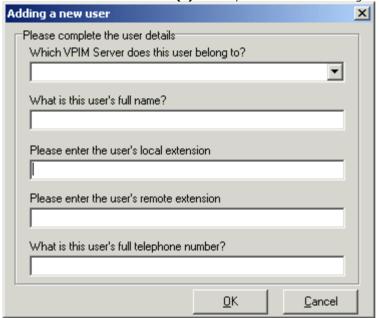

- 2. Enter details for the user. All of these details MUST be completed before the user can be added.
 - Select the VPNM server from the listing.
 - Enter the user's full name. The user's full name is used by the local Voicemail Pro's dial by name feature.
 - Enter the user's extension. The local extension number is used as the local mailbox number and so should not conflict with any existing local number.
 - Enter the user's remote extension. The remote extension number should be the user's real extension number.
 Typically this and the 'local extension number' are kept the same using a unique extension number dial plan for the linked systems.
 - Enter the user's full telephone number. The full telephone number should be a dialable number that is routed to the user's extension or mailbox.
- 3. Click \mathbf{OK} to save the details and return to the VPNM configuration window.

To add a group of users:

- (Optional) Check the option Enable WildCard. When this option is selected you can use the question mark symbol (?) to represent any number.
- 2. In the Users for VPNM Server(s) section, click Add Range. The Adding a range of users window opens.



- 3. Enter details for the users. All of these details MUST be completed before the users can be added.
 - Select the VPNM server for which you want to add the users.
 - Enter the start number of the extension range.
 - Enter the local prefix.
 - Enter remote prefix.
- 4. Click **OK** to save the details and return to the VPNM configuration window.

To change details of a VPNM user:

- 1. In the **Users for VPNM Server(s)** section, select the name of the user whose details need to be changed.
- 2. Click Modify. You can change the user's full name, the local extension number and the full telephone number.

Chapter 6. Centralized Voicemail Pro

6. Centralized Voicemail Pro

A Small Community Network (SCN) consists of several IP Office telephone systems. These are connected using **H323 Lines** where the **Supplementary Services** settings of the lines has been set to **IP Office SCN**. For details, see *Avaya IP Office Manager* (15-601011).

Within a Small Community Network, the following options for providing voicemail are supported:

• Centralized Voicemail 128

Centralized Voicemail Pro uses a single Voicemail Pro server to provide voicemail services for all IP Offices in the Small Community Network. Except for use of ContactStore, only the central IP Office hosting the Voicemail Pro server requires licensing for Voicemail Pro operation and features.


- Licenses: The central IP Office is licensed as normal for Voicemail Pro operation and the voicemail features required. The other IP Offices only require licenses for UMS and/or for IP Office ContactStore, if required.
- Centralized Voicemail with Fallback IP Office 129
 Control of the Voicemail Pro server can be taken over by another IP Office if the central IP Office becomes unavailable.
 - IP Office Release 5.0+ with Voicemail Pro 5.0+.
 - Licenses: The fallback IP Office that takes over control of the Voicemail Pro server requires licenses for Voicemail Pro operation and the features required during fallback.
- Centralized Voicemail with a Backup Voicemail Server


The central IP Office hosting the Voicemail Pro server can be configured with the IP address of a backup Voicemail Pro server. During normal operation, call flows and other settings on the backup server are kept synchronized with those of the primary Voicemail Pro server. If the primary Voicemail Pro server becomes unavailable to the network, voicemail services are provided by the backup Voicemail Pro server.

- IP Office Release 6.0+ with Voicemail Pro 6.0+.
- SMTP SSL/TLS communication is used to exchange information between the servers. If the servers fail to connect using SSL/TLS over SMTP, then plain text communication is used.
- Licenses: The existing licenses are used.
- Centralized Voicemail with Distributed Voicemail Pro Servers 13\$

Other IP Offices in the Small Community Network can host their own Voicemail Pro server. That server is then used for the IP Office's voicemail functions except message storage.

- IP Office Release 6.0+ with Voicemail Pro 6.0+.
- SMTP SSL/TLS communication is used to exchange information between the servers. If the servers fail to connect using SSL/TLS over SMTP, then plain text communication is used.
- The distributed Voicemail Pro server provides all voicemail services except voicemail collection for its associated IP Office.
- Licenses: Each IP Office using a distributed Voicemail Pro server must have licenses for Voicemail Pro operation and the voicemail features required.

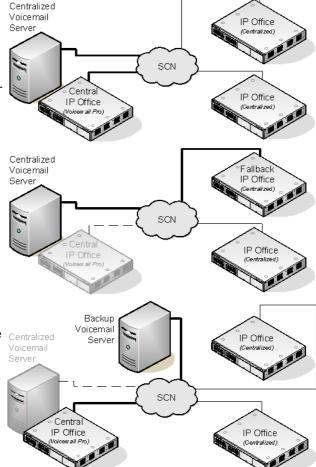

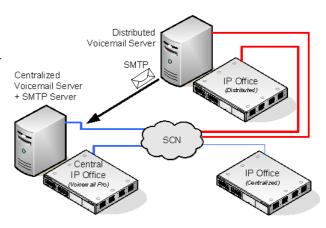


In all the cases above, the central Voicemail Pro server remains the store for messages and recordings (except for Exchange UMS users). The central Voicemail Pro server does message waiting indication and is the Voicemail Pro server used for message collection. Only when the central server is temporarily unavailable will the backup or any distributed server do message storage and collection. In those scenarios, when the central server is restored, messages collected by the backup or distributed servers are forwarded to the central server.

Combinations 136 of the solutions above can be deployed. For example using a backup server and fallback IP Office control.

6.1 Centralized Voicemail

Within a Small Community Network, a single Voicemail Pro server can be used to provide voicemail features for all the IP Offices in the SCN.

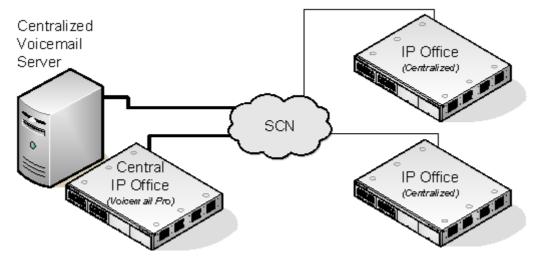

One IP Office is configured for operation with the Voicemail Pro server as normal, including the license for voicemail operation and the features required. This IP Office is then regarded as the central IP Office for voicemail.

Within the other IP Office systems, the voicemail settings are configured to indicate that they get their voicemail services from the central IP Office. These IP Offices do not need licenses for voicemail (except for ContactStore and or UMS if required).

With the International Time Zone functionality available on the central Voicemail Pro server, the users of the IP offices located in different time zones across the globe receive messages in their voicemail system with their respective time stamp. In the sample scenario, the three IP Offices located in different time zones connect to each other. Two of the IP Offices are located in different geographical locations and are connected to the central IP Office. The Voicemail Pro server connects to the central IP Office. In this setup, the system stores the voicemail messages on the centralized Voicemail Pro. Each IP Office is set up to use Simple Network Time Protocol (SNTP) .

In the centralized Voicemail Pro setup, the time source of the IP Office network must be SNTP (Simple Network Time Protocol).

Simple Network Time Protocol (SNTP) is an Internet standard protocol (built on top of TCP/IP) that provides accurate synchronization to the millisecond of computer clock times in a network of computers. It synchronizes all the IP Offices in an SCN configuration.

Summary of IP Office Settings


Once the IP Office SCN has been setup, the following settings are used in the IP Office systems to provide voicemail operation for all the IP Offices.

IP Office Settings	Central IP Office	Other IP Offices
Voicemail Type	Voicemail Pro	Centralized Voicemail
Voicemail IP Address	Set to the Voicemail Pro server computer's IP address.	Not used.
Voicemail Destination	Not used.	Set to the Outgoing Group ID of the H323 Line to the central IP Office.
Licenses	This system needs <u>licenses</u> 12 for all the Voicemail Pro features required.	The other IP Offices only require licenses for UMS and or for ContactStore if required.

When accessing a Voicemail Pro server that is acting as centralized Voicemail Pro server, the Voicemail Pro will display **Centralized Voicemail** in the title bar.


6.2 Fallback IP Office Control

IP Office Release 5.0+ supports a number of fallback features for Small Community Networks. In conjunction with Voicemail Pro 5.0+, fallback can include one of the IP Offices assuming control of the Voicemail Pro server should the central IP Office become unavailable on the network.

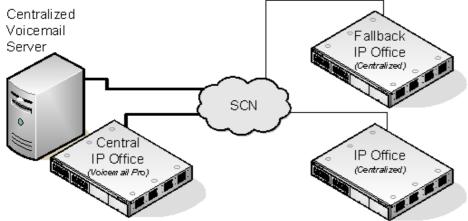

Normal Operation

During normal operation, voicemail services for the Small Community Network are provided by the central IP Office communicating with the Voicemail Pro server.

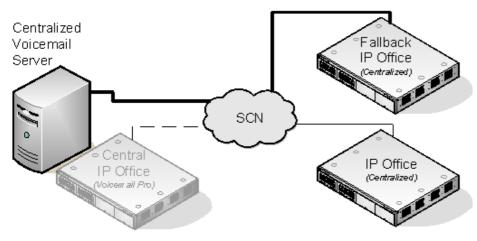

Fallback Control Operation

If the central IP Office becomes unavailable to the network, control of voicemail services for the Small Community Network is taken over by the fallback IP Office.

WARNING


During the transition of voicemail control, access to voicemail may be unavailable for several minutes. Existing voicemail calls are disconnected and new calls are routed as if voicemail is unavailable. The same applies when the central IP Office is restored.

Setup and Requirements for Voicemail Fallback


- Within the configuration of the central IP Office hosting the Voicemail Pro server, on the H323 Line to the fallback IP Office;
 - The **Supplementary Services** setting should be changed from **IP Office SCN** to **IP Office -SCN Fallback**
 - The option **Backs up my Voicemail** should then be selected from the **SCN Backup Options**.
- The fallback IP Office is configured for centralized voicemail as normal. However its configuration must also include licenses for the Voicemail Pro support and the voicemail features required during fallback.

6.3 Backup Voicemail Server Operation

For IP Office Release 6.0 or later, the central IP Office hosting the Voicemail Pro server can be configured with the IP address of a backup Voicemail Pro server. If the central Voicemail Pro server becomes unavailable to the network, the backup Voicemail Pro server will be used to provide voicemail services. This option requires the voicemail servers to be running Voicemail Pro Release 6.0 or later.

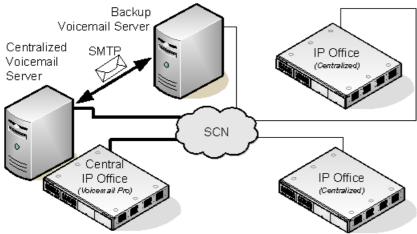

Centralized voicemail with a backup server during normal operation.

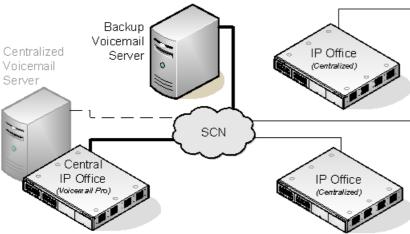

Centralized voicemail with a backup server during backup operation.

During Normal Operation:

- Voicemail services and message storage for the IP Offices is provided by the central Voicemail Pro server.
- Call flows, greetings, recorded names, and configuration settings on the backup Voicemail Pro server are synchronized with those on the central Voicemail Pro server. The configuration settings that are synchronized include the registry settings, user variables, SMTP mappings, and alarms. However, the directory locations, settings specific to Voicemail Pro client, Voicemail Pro IIS port settings, Campaign settings, Service SID of the Voicemail Pro service, and backup configuration settings are not synchronized.
- Messages are synchronized, but the central Voicemail Pro server remains the message store.
- The central and backup servers are synchronized regularly at defined intervals using SMTP SSL/TLS communication between the servers. If the servers fail to connect using SSL/ TLS over SMTP, then plain text communication is used.

During Backup Operation:

If the central server become unavailable to the network:

- The backup server provides voicemail services to the IP Offices.
- New messages are stored on the backup server.

After Backup Operation

When the central server is restored to the network:

- Call flows, greetings, recorded names, and configuration settings on the central server are synchronized with those on the backup server.
- The central server sends a signal to the backup server to indicate that it is ready to resume control as the active Voicemail Pro server.
- Depending on the mode of failback operation configured, the system administrator or the backup server initiates failback operation to reinstate the central server as the active Voicemail Pro server.
 - Manual Failback 133
 - Graceful Failback 133
 - Automatic Failback 133

Note: For details on configuring failback operation, see the "Configuring Failback Operation on Backup Server" section in *Avaya IP Office Administering Voicemail Pro* (15-601063).

- Any new calls that arrive when failback operation is in progress are lost.
- If the backup server becomes unavailable to the network before failback operation, the central server resumes control as the active Voicemail Pro server.
- Call flows defined on the central server are synchronized with the backup server.
- Call flows defined on the central server cannot be modified on the backup server.
- Call flows cannot be defined on the backup server.
- Call flows defined on a distributed server are not synchronized to the central or backup servers.

Configuring Backup Server Operation

- 1. The Voicemail Pro server software is installed as normal on the backup server computer. The Voicemail Pro server is not specifically configured as being a backup server.
- 2. The central IP Office hosting the primary Voicemail Pro server is configured with the IP addresses of both the primary Voicemail Pro server and the backup Voicemail Pro server.



3. The other IP Offices are configured for centralized or distributed voicemail as normal.

6.3.1 Manual Failback

The following is the sequence of events for the manual failback operation of the backup server:

- 1. The backup server functions as the active Voicemail Pro server until the system administrator shuts down the backup server
- 2. The system administrator chooses one of the following options to shutdown the backup server:
 - If no voicemail calls are active on the backup server, shutdown the backup server immediately.
 - If some voicemail calls are active on the backup server, suspend the backup server operation to prevent any new
 voicemail calls. Then, shutdown the backup server immediately after all the active voicemail calls on the backup
 server come to an end.
 - If some voicemail calls are active on the backup server, suspend the backup server operation to prevent any new voicemail calls. Then, shutdown the backup server immediately after the number of active voicemail calls on the backup server reduces significantly.
- 3. When the backup server shuts down, the central server resumes control as the active Voicemail Pro server.

6.3.2 Graceful Failback

The following is the sequence of events for the graceful failback operation of the backup server:

- 1. The backup server functions as the active Voicemail Pro server while voicemail calls are active on the backup server.
- 2. The backup server hands over the control to the central server immediately after all the active voicemail calls on the backup server come to an end.

6.3.3 Automatic Failback

The following is the sequence of events for the automatic failback operation of the backup server:


- 1. The backup server enters the suspend mode to prevent any new voicemail calls and starts a countdown timer for the failback operation timeout.
- 2. The backup server functions as the active Voicemail Pro server until any one of the following events:
 - All active voicemail calls on the backup server come to an end.
 - Timeout period for failback operation is elapsed.
- 3. The backup server hands over the control to the central Voicemail Pro server immediately after any one of the aforementioned events.

Note: If the failback operation timeout is set to 0, the hand over of the control is immediate.

6.4 Distributed Voicemail Servers

For IP Office Release 6.0 and higher, remote IP Offices in the Small Community Network can be associated with another Voicemail Pro server in addition to the centralized Voicemail Pro server. The additional distributed server then provides all voicemail services (except message storage and collection) for that IP Office. This requires the remote IP Office to have licenses for voicemail operation and the features it requires.

While the distributed server does message recording, it forwards all messages to the central Voicemail Pro server. The messages are transferred between systems using an IIS SMTP e-mail services. For mailbox users, message waiting indication and message collection is still done using the central Voicemail Pro server. With the support of International Time Zone (ITZ) functionality, the users of the IP Offices located across the globe receive messages in their voicemail system with their respective local time stamp.

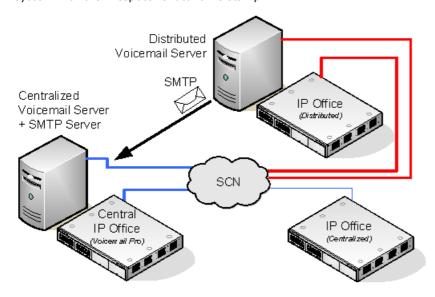

Centralized Voicemail with Additional Distributed Voicemail Servers

In this scenario, the three IP Offices located in different time zones connect to each other. Two of the IP Offices are located in different geographical locations and are connected to the Central IP Office. The Central IP Office connects to a central Voicemail Pro server and the other IP Offices connect to the Distributed Voicemail Pro server, an additional Voicemail Pro server added to the Small Community Network. Each IP Office is set up to use Simple Network Time Protocol (SNTP), the time source of the IP Office Network.


Simple Network Time Protocol (SNTP) is an Internet standard protocol (built on top of TCP/IP) that provides accurate synchronization to the millisecond of computer clock times in a network of computers. It synchronizes all the IP Offices in an SCN configuration.

- Other IP Offices continue to use centralized voicemail as normal.
- An IP Office that is using a distributed Voicemail Pro server cannot also be used as the <u>fallback IP Office</u> 12sh for the central Voicemail Pro server.
- SMTP SSL/TLS communication is used to exchange information between the servers. If the servers fail to connect using SSL/TLS over SMTP, then plain text communication is used.

Note: In the distributed Voicemail Pro set up, ITZ functions similar to the centralized Voicemail pro set up.


Multiple Distributed Servers

Additional distributed Voicemail Pro servers can be added as required by the individual IP Office sites in the Small Community Network.

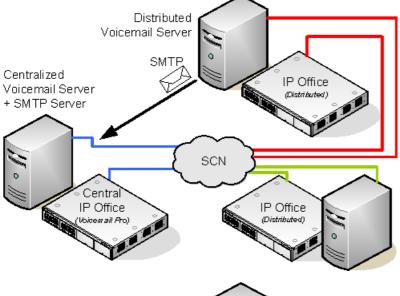

Sharing Distributed Voicemail Servers

The same distributed Voicemail Pro server can be shared by several IP Offices. The services it provided to each will depend on the licenses that each has.

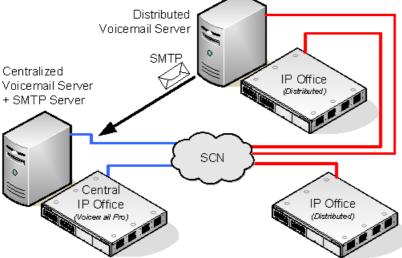


Summary of IP Office Configuration Settings for Distributed Voicemail Servers

IP Office Settings	Central IP Office		IP Office with Distributed Server
Voicemail Type	Voicemail Pro	Centralized Voicemail	Distributed Voicemail

Voicemail IP Address	Set to the central Voicemail Pro server computer's IP address.		Set to the distributed Voicemail Pro server computer's IP address.
Voicemail Destination		of the H323 Line to the central	Set to the Outgoing Group ID of the H323 Line to the central IP Office.
	for Voicemail Pro and all		This system needs licenses 12 for Voicemail Pro and all voicemail features required.

Configuring Distributed Voicemail Server Operation

- 1. The centralized Voicemail Pro server for the SCN and its central IP Office are configured as normal.
- 2. The Voicemail Pro server software is installed as normal any distributed Voicemail Pro server computer. The distributed Voicemail Pro server is not specifically configured as being a distributed server.
- 3. Each IP Office hosting a distributed Voicemail Pro server is configured with the **Voicemail Type** set to **Distributed Voicemail**.

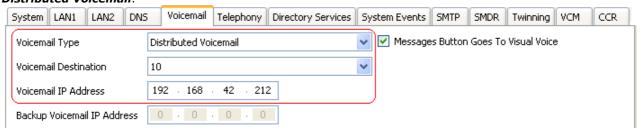


- The **Voicemail Destination** is set to the **Outgoing Group ID** of the H323 trunk to the central IP Office hosting the centralized Voicemail Pro server.
- The Voicemail IP Address is set to the IP address of the computer running the distributed Voicemail Proserver for the IP Office.

Note:

If you are using Voicemail Pro in a distributed environment, a distributed server delivers a recorded message to the central Voicemail Pro server on completion of the recording. However, the presentation to the Voicemail Pro server for message waiting indication (MWI) and access via telephone might be delayed because of the internal processing of the message and the network latency. The delay might be up to 2 minutes in high traffic situations.

6.5 Combined Options


The various centralized voicemail options (standard, fallback, backup and distributed) can be used within the same Small Community Network.

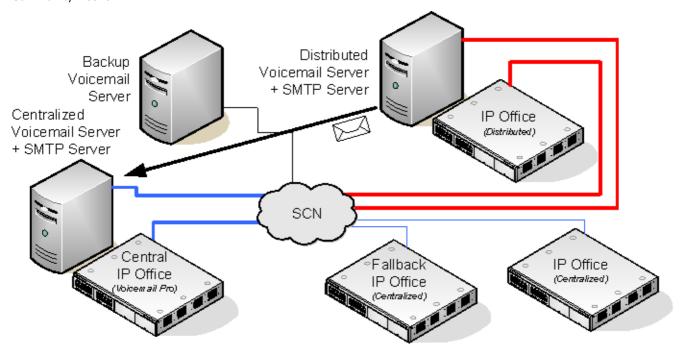

- An IP Office using a distributed voicemail cannot be used as the fallback IP Office for the central IP Office.
- A distributed Voicemail Pro server cannot also be used as the backup Voicemail Pro server.


Example: Combined Fallback Control and Backup Server Operation

In the example below the fallback IP Office control 12th and backup voicemail server 13th operation can be combined.

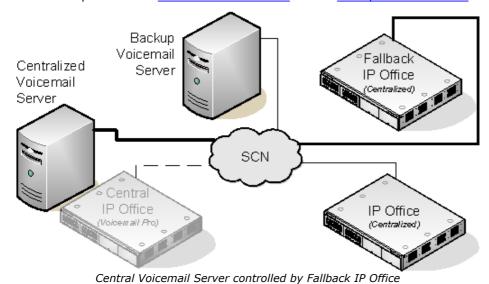

Central IP Office Unavailable


If the central IP Office becomes unavailable on the network, the fallback IP Office takes over control of voicemail services using the centralized Voicemail Proserver.

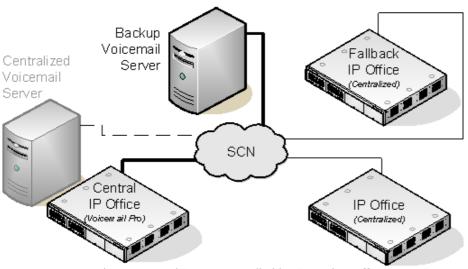

Backup Voicemail Server controlled by Central IP Office

Central Voicemail Unavailable

If the central Voicemail Pro server becomes unavailable on the network, the central IP Office will switch to using the backup Voicemail Pro server.

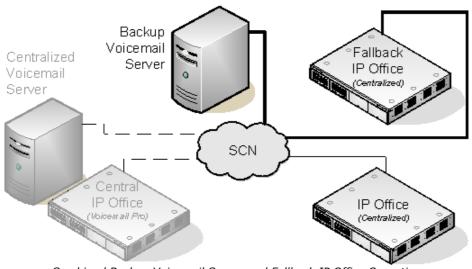

Combined Backup Voicemail Server and Fallback IP Office Operation

Central IP Office and Central Voicemail Pro Server Unavailable

If both the central IP Office and the central Voicemail Pro server become unavailable to the network, voicemail services will switch to the backup Voicemail Pro server under control of the fallback IP Office.

6.6 Installation Notes

SMTP Configuration

Both the distributed voicemail and backup voicemail scenarios use the same mechanism for the information exchange between the servers. That mechanism uses the SMTP SSL/TLS communication between the Voicemail Pro servers. If the servers fail to connect using SSL/TLS over SMTP, then plain text communication is used. Note that this means that a server with Microsoft Exchange installed (such as an SBS server) cannot be used because Exchange replaces the SMTP service

The following notes apply to both scenarios unless specifically stated as otherwise.

1. Install and Enable IIS


All the Voicemail Pro servers (central, distributed and backup) require IIS to be installed and enabled on the server before installation of the Voicemail Pro server software.

- 1. Start the Internet Information Services manager.
- 2. Right-click on the **Default SMTP Virtual Server** and select **Properties**.
- Select the Messages tab. Deselect the Limit Message Size and Limit number of messages per connection options.


2. Configure Each Voicemail Pro Server for SMTP E-mail via IIS

Following installation of the Voicemail Pro server software, its should be configured for SMTP e-mail operation as follows:


- a. By default the Voicemail Pro server installs defaulted to SMTP e-mail operation. However this should be checked.
 - 1. Start the Voicemail Pro Client, Click Preferences and select General.
 - 2. Click the E-mail tab.
 - 3. Verify that the MAPI 108 settings are not enabled. .
 - 4. Select the <u>SMTP Sender [116</u>] sub tab. The first entry in the list must be configured for SMTP between the Voicemail Pro servers. Set the **Domain** and **Server** to the fully qualified domain name of the Voicemail Pro server.

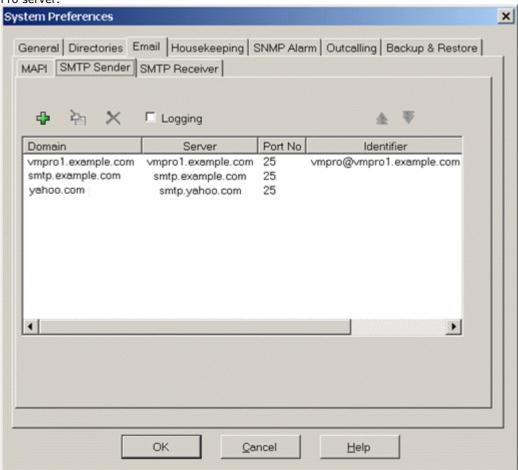

For a Windows-based Voicemail Pro server, these e-mails will be received on port 25 by IIS and will
be placed in its mail drop folder. To obtain the name, right-click on My Computer and select
Properties. The Computer Name tab shows the information that should be used as Full computer
name. The name must be used, IP addresses are not used.

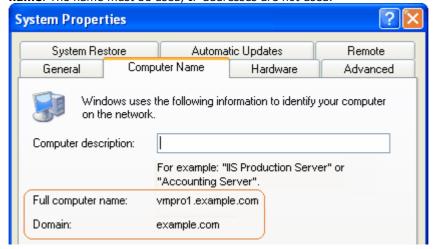

5. Select the **SMTP Receiver** 113 sub tab.

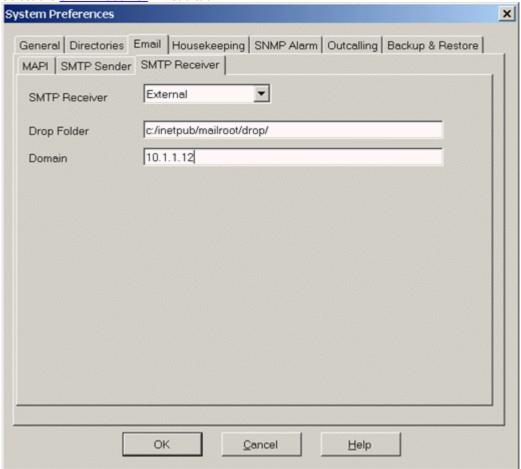

- For a Windows based server, set the **SMTP Receiver** as **External** and set the **Drop Folder** address to be the IIS mail drop folder (usually **C:\Inetpub\mailroot\Drop**).
- Click OK.



3. Verify that Port 25 is Not Blocked

Many firewalls block access to port 25 by default. Check that the firewall software on the server is configured to include **VMProV5Svc.exe** as an exception.

4. DNS Host Routing (Optional)

SMTP operation uses fully qualified domain names that need to be resolved to IP addresses by the network's DNS server. For name resolution, the hosts files on each server can be used. Note however that if this method is used, any changes to IP addresses of servers will need to be reflected in the file update. Locate the file *C:* *Windows\System32\drivers\etc\hosts* and open it in a text editor such as WordPad. Add IP address and fully qualified domain name entries for each of the other Voicemail Pro servers.


Voicemail Pro Configuration

In all scenarios, each Voicemail Pro server should use the same basic configuration settings, ie. the same voicemail mode (Intuity or IP Office) and the same housekeeping settings.

IP Office Configuration

Configuring Centralized Voicemail Server Operation


- 1. The centralized Voicemail Pro server for the SCN and its central IP Office are configured as normal.
- Each IP Office not hosting a distributed Voicemail Pro server is configured with the Voicemail Type set to Centralized Voicemail.

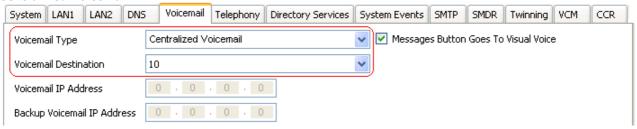

• The **Voicemail Destination** is set the **Outgoing Group ID** of the H323 trunk to the central IP Office hosting the centralized Voicemail Pro server.

Configuring Distributed Voicemail Server Operation

- 1. The centralized Voicemail Pro server for the SCN and its central IP Office are configured as normal.
- 2. The Voicemail Pro server software is installed as normal any distributed Voicemail Pro server computer. The distributed Voicemail Pro server is not specifically configured as being a distributed server.
- Each IP Office hosting a distributed Voicemail Pro server is configured with the Voicemail Type set to
 Distributed Voicemail.

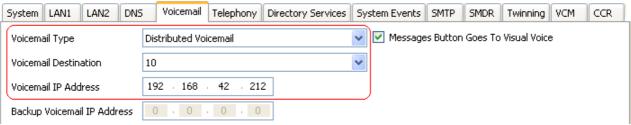

- The **Voicemail Destination** is set to the **Outgoing Group ID** of the H323 trunk to the central IP Office hosting the centralized Voicemail Pro server.
- The **Voicemail IP Address** is set to the IP address of the computer running the distributed Voicemail Pro server for the IP Office.

Configuring Backup Server Operation

- 1. The Voicemail Pro server software is installed as normal on the backup server computer. The Voicemail Pro server is not specifically configured as being a backup server.
- 2. The central IP Office hosting the primary Voicemail Pro server is configured with the IP addresses of both the primary Voicemail Pro server and the backup Voicemail Pro server.



3. The other IP Offices are configured for centralized or distributed voicemail as normal.

Check the Server Connections

1. Check Connection to the Central Server

In the following tests, remember to use the fully qualified domain name of each server.

a. Ping Test

Make a ping from the server to the central server, for example **ping vmpro1.example.com**. You should see a series of 4 successful replies from the server.

b. Telnet Test

Make a telnet test from the server to the central server, for example **telnet vmpro1.example.com 25**. You should receive a response from the e-mail server within IIS. Enter **quit** to close the telnet connection.

2. Check Connection from the Central Server

Repeat the ping and telnet tests, this time from the central server to the backup or distributed server.

Checking Status with the Voicemail Pro Client

When connected to a Voicemail Pro server using the Voicemail Pro client, the client title bar will display the role of that Voicemail Pro server; **Centralized Voicemail**, **Backup Voicemail** or **Distributed Voicemail**.



When connected to the backup Voicemail Pro server, if it is the active server, the title will have changed from **Backup Voicemail** to **Backup Voicemail** (Live).

When connected to the centralized Voicemail Pro server, the **Distributed Voicemails** folder can be selected to display details of the distributed servers and the state of the connection with each. The **Result** will be either:

In Progress

The servers are synchronizing information via SMTP.

Up-To-Date

The servers are synchronized.

Chapter 7. Appendix

7. Appendix

7.1 SMTP Logging

SMTP error logging is enabled to generate a log of SMTP activity.

For a Windows-based Voicemail Pro installation, the activity is logged in a file in **C:\Program Files\Avaya\IP Office\Voicemail Pro\VM\logs**. The file name includes a date stamp for the day on which it is generated. For a Linux based server the log files can be archived and downloaded using the web control menus.

7.2 SFTP Host Key Verification

If you are trying to connect to a SFTP server for the first time, the connection may fail with an error message about the authenticity of the host. The behavior is a feature of the SSH protocol and is designed to protect you from a spoofing attack. To proceed, verify the host key of the SFTP server.

To verify the host key of the SFTP server

- 1. Log in to the computer that runs the Voicemail Pro service using the same Windows account that is used to start the service.
- 2. Open the WinSCP application.
- 3. Click New.
- 4. Enter the required details in the **Host name** and **User name** fields.
- 5. Click Login.

A message is displayed that includes the host key of the SFTP server.

- 6. If you trust the displayed host key, click **Yes** to save the host key in the cache. Otherwise, get the host key from your system administrator, and match it with the displayed host key before you click **Yes**.
- 7. Enter the password to verify the connectivity to the remote SFTP server.

7.3 Installing VoiceMail Pro as an ACM Gateway

Complete the steps in this section to install Voicemail Pro as an ACM Gateway. There is only one type of installation for the Voicemail Pro ACM Gateway. Therefore you are not offered the choice of custom, compact or typical during the installation process.

To install the ACM Gateway:

- 1. Insert the **IP Office Applications** DVD. Click **Voicemail Pro**, and then double-click **setup.exe**. The **Choose Setup Language** window opens.
- 2. Select the installation language. This language is used for the installation and for the default language prompts.
- 3. Click **OK**. Installation preparation begins.
- 4. Voicemail Pro requires Microsoft .NET 2.0 Framework. If this version is not detected, you are prompted to install it. Click **Yes** to install Microsoft .NET 2.0 Framework and follow the instructions on the screen.
- 5. If the Modify, repair or remove the program window is displayed, follow the upgrade process 31h.
- 6. In the **Welcome** window, click **Next**. The **Customer Information** window opens.
- 7. In the **Customer Information** window, type a user name and the company name or use the default names that are proposed. These settings do not affect Voicemail Pro when it is installed.
- 8. In the same window choose the option that determines who should be able to use Voicemail Pro when it has been installed. If you prefer, choose the **Anyone who uses this computer (all users**) option.
- 9. In the Customer Information window, click Next. The Choose Destination Location window opens.
- 10. In the Choose Destination Location window, click Browse and locate the folder where the Voicemail Pro files are to be installed. Otherwise, click Next to use the proposed folder. The Messaging Components window opens.
- 11. In the **Messaging Components** window, select **ACM Gateway**.
- 12. Click **Next**. The **Service Account Name** window opens. Details of the default administrator account may already be filled in.
- 13. In the **Service Account Name** window, type the **User Name** and **Password** for the user account under which the Voicemail Pro service should run. This should be the **Voicemail** account created previously on the domain and Exchange server. Alternatively, click **Browse** and select from the list of available computer or network accounts or click **Next** to use the proposed account details. The **Select Program Folder** window opens.
- 14. By default, the program folders are created in a folder called **IP Office**. You can specify a different folder or select one from the list of existing folders. To specify a different folder, type the folder name in the **Program Folders** box. Alternatively, to use an existing folder, highlight a name in the list of existing folders.
- 15. Click Next. The account details that you entered are verified. If you entered a user name that does not exist, the system prompts you whether to create a new computer user account with the specified name and password. Click Yes. The Select Program Folder window opens.


- 16. Select the program folder where you would like the icons for the Voicemail Pro components to be added. By default, the program icons are added to IP Office.
- 17. Click **Next**. The **Start Copying Files** window opens. Before any copying starts, you are presented with a summary of the settings that you have chosen so far.
- 18. Review the settings to make sure that they are what you expect.
- 19. If for any reason the details are not what you expect, click **Back** and make the required changes. When you are satisfied that the details are correct, click **Next** to start copying the files. The **Setup Status** window opens to keep you informed while the installation takes place.
- 20. When the installation is complete, you are prompted to restart the computer. Choose Yes I want to restart my computer now.
- 21. Click **Finish** to restart the computer.
- 22. When the computer restarts, log back in. The IP Office Voicemail Pro ACM Gateway Settings window opens.
- 23. In the Mail Server box, type the name of the mail server to use.
- 24. Choose **Message Networking/Interchange** to use Interchange or **Modular Messaging** to use Modular Messaging.1.
- 25. Click Next. The IP Office Voicemail Pro SMTP E-mail Settings window opens.
 - In the **Mail Server** box, type the name of the SMTP mail server. This should be the fully qualified domain name.
 - In the Port Number box, type the number of the receiving port on the SMTP mail server. The default is 25.
 - In the **Mail Drop** box, type the name of the destination folder for outgoing e-mails on the SMTP Server. Alternatively, click the **Browse** button and select the folder to use.
 - To enforce server authentication, check the **Server Requires Authentication** box. This is optional. If you check this option you also need to enter the account name and password. You can also choose whether or not to set the **Use Challenge Response Authentication** option.
- 26. Click **Finish**. The e-mail settings are validated. If everything has been installed correctly and the license requirements are met, you are prompted to start the Voicemail service. If the system fails to connect to the SMTP server, an error message is displayed. You might need to start the Voicemail service manually. See <u>Starting the Voicemail Pro Service</u> 30.
- 27. Click OK to acknowledge the message. You have now finished installing the Voicemail Pro ACM Gateway software.

7.4 Installing Networked Messaging (VPNM)


Voicemail Pro Networked Messaging (VPNM) supports users to forward voicemail to mailboxes on remote voicemail systems. This is done by adding a VPNM component to the Voicemail Pro installation.

The messages are transferred between systems using an SMTP/MIME mail format to encode both the voice part of the message and additional message details.

Here is a diagram to illustrate VPNM between two IP Office systems.

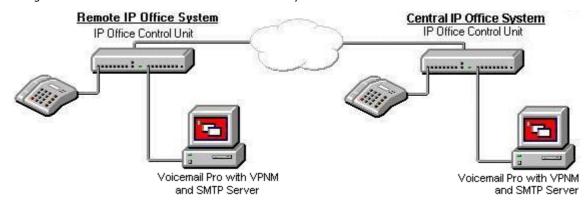

Here is a diagram of a sample VPNM configuration between an IP Office and Avaya Interchange. Depending on how your IP Network is set up, the configuration will differ slightly.

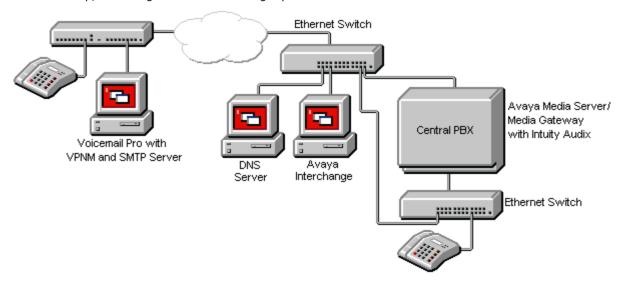

Up to 2000 mailboxes are supported per VPNM server and there is no constraint on the number of VPNM servers. However, to distinguish between dial plans you might need to allocate a dial pre-fix to each server. A maximum of 99 pre-fixes are available.

This section summarizes the steps required for installing VPNM between two IP Office systems and between an IP Office system and an Intuity Audix system through Avaya Interchange.

The instructions provided here should be read in conjunction with the other Avaya guides, for example *Avaya Interchange Adding a VPIM System to Your Network*. This is because the setup for Interchange VPIM is the same as for VPNM.

7.4.1 Requirements for VPNM

Check for the following before installing VPNM:

- A Voicemail Pro server with VPNM installed connected to each IP Office system. Each system will need a license for both Voicemail Pro and VPNM.
- All systems in the VPNM network need to be tested for their connectivity to the IP network. It is suggested that you test the following:
 - Ping the IP Addresses.
 - Ping the computer names. If in a domain, ping the fully qualified domain name.
- The Voicemail Pro Servers must have an SMTP server installed. This can be done using the SMTP component of Internet Information Service (IIS).
 - To test type "Telnet <the name of the SMTP server> 25".
- Server names, where entered, must be fully qualified domain names.
- Voicemail Pro should not be installed on the same server as Exchange and/or the domain controller.

I.2 Installing VoiceMail Pro with VPNM Support	
Voicemail Pro 6.1, the VPNM components are embedded parts of the Voicemail Pro service and s	o automatically
alled.	


7.4.3 Configuring VPNM Preferences

This set of preferences is used to add a list of the remote VPNM servers and mailbox users on those servers.

• I These features are not supported on a Linux-based Voicemail Pro server.

To open the VPNM window:

- 1. Start the Voicemail Pro Client.
- 2. From the Administration menu, select Preferences > VPNM. The VPNM window opens.

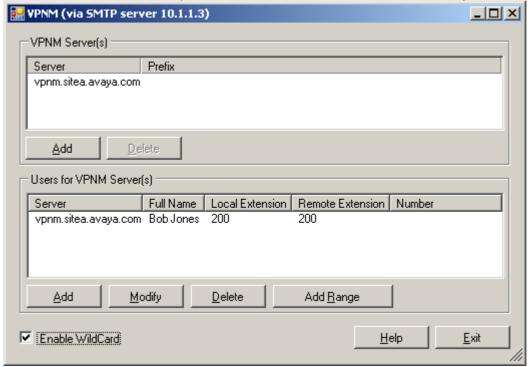

To add a VPNM server:


- 1. In the **VPNM Server(s)** section, click **Add**.
- 2. Enter the fully qualified domain name of the remote VPNM destination (the remote Voicemail Pro server computer or Avaya Interchange).
- 3. Enter the two digit access prefix, if these are being used.
- 4. Click OK.

To delete a VPNM server:

- 1. In the **VPNM Server(s)** section, select the server that is to be deleted.
- 2. Click **Delete**. When a server is deleted, all of the users associated with that server are also deleted.

To add a user to VPNM server:


1. In the **Users for VPNM Server(s)** section, click **Add**. The Adding a new user window opens.

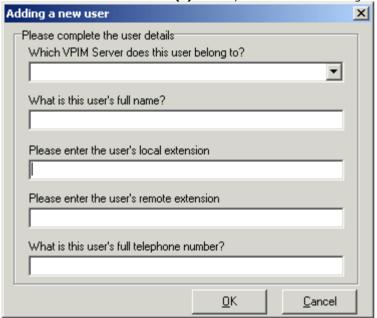

- 2. Enter details for the user. All of these details MUST be completed before the user can be added.
 - Select the VPNM server from the listing.
 - Enter the user's full name. The user's full name is used by the local Voicemail Pro's dial by name feature.
 - Enter the user's extension. The local extension number is used as the local mailbox number and so should not conflict with any existing local number.
 - Enter the user's remote extension. The remote extension number should be the user's real extension number.
 Typically this and the 'local extension number' are kept the same using a unique extension number dial plan for the linked systems.
 - Enter the user's full telephone number. The full telephone number should be a dialable number that is routed to the user's extension or mailbox.
- 3. Click \mathbf{OK} to save the details and return to the VPNM configuration window.

To add a group of users:

- (Optional) Check the option Enable WildCard. When this option is selected you can use the question mark symbol (?) to represent any number.
- 2. In the Users for VPNM Server(s) section, click Add Range. The Adding a range of users window opens.

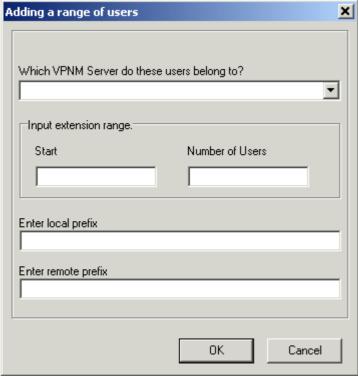

- 3. Enter details for the users. All of these details MUST be completed before the users can be added.
 - Select the VPNM server for which you want to add the users.
 - Enter the start number of the extension range.
 - Enter the local prefix.
 - Enter remote prefix.
- 4. Click \mathbf{OK} to save the details and return to the VPNM configuration window.

To change details of a VPNM user:

- 1. In the **Users for VPNM Server(s)** section, select the name of the user whose details need to be changed.
- 2. Click Modify. You can change the user's full name, the local extension number and the full telephone number.

7.4.4 Testing a VPNM Setup

It is advisable to test the VPNM setup.

To test the VPNM setup:

- 1. Dial into voicemail from one of the systems and record a message.
- 2. When selecting the target extension, enter an extension from the other system as specified in the VPNM Preferences screen.
- 3. The message should be delivered to the other systems Voicemail Pro server into *C:\\Inetpub\mailroot\Drop*.
- 4. The **VPNMreceiver Service** checks the Drop directory approximately every 30 seconds. When it finds a message in the Drop directory, it will send the message to the relevant extension's voicemail box on the remote system.

7.5 Glossary

7.5.1 Centralized Voicemail Pro Server

Centralized Voicemail Pro uses a single Voicemail Pro server to provide voicemail services for all IP Offices in the Small Community Network. Except for use of ContactStore, only the central IP Office hosting the Voicemail Pro server requires licensing for Voicemail Pro operation and features.

7.5.2 Distributed Voicemail Pro Server

For IP Office Release 6.0 and higher, remote IP Offices in the Small Community Network can be associated with another Voicemail Pro server in addition to the centralized Voicemail Pro server. The additional distributed server then provides all voicemail services (except message storage and collection) for that IP Office. This requires the remote IP Office to have licenses for voicemail operation and the features it requires.

7.5.3 MAPI

Message Application Programming Interface (MAPI) is a Microsoft Windows system architecture that supports adding messaging functionality into applications. MAPI-enabled e-mail applications can share e-mails and also work together to distribute the mail.

7.5.4 SNTP

Simple Network Time Protocol (SNTP) is an Internet standard protocol (built on top of TCP/IP) that provides accurate synchronization to the millisecond of computer clock times in a network of computers. It synchronizes all the IP Offices in an SCN configuration.

7.5.5 VPNM

Voicemail Private Networked Messaging (VPNM) is a set of preferences available only if you have selected VPNM during installation and is licensed within the IP Office configuration. It is used to add a list of the remote VPNM servers and mailbox users on those servers.

7.5.6 VRL

Using the Voice Recording Library (VRL) operation, Voicemail Pro can transfer specific users' automatic and/or manually recorded calls to a third-party application. Users can select VRL as the destination for calls recorded via a Leave Mail action in a call flow.

Currently, this mode of operation is only supported with the Contact Store for IP Office application from Witness Systems. This application provides tools to sort, search and playback recordings. It also supports the archiving of recordings to DVD.

Chapter 8. Document changes since last issue

8. Document changes since last issue

- Updated the configuration details for Windows Server 2003 (64 bit) for web campaigns.
- Updated the IIS Configuration requirements details to support Voicemail Pro on Windows Server 2003 (64 bit).

Index	Critical Alarm 116
_	Cti 83
A	CtiNotifyTracing 83
access works	D
mailbox 105 actions including 78	DbgView 83
AddRef 83	DbgView window 83
Administrative Tools 82	Debug 83
Alarm Threshold 116	Debug Filters 83
Alarm Threshold Level 116	Debug Filters window 83
Alarm Threshold Unit	Debug View 83
Choose 116	Default Callback 98 Default Settings 116
allow tracing	Default Telephony Interface 105
MAPI 83	destructed 83
Auth 58, 110	DestructorTracing 83
Auto Attendant 101	Diagnostics 83, 84
Automatic 115	Dial In Source Numbers 98
Automatic Message Deletion 115	Directory View 82
Avaya Text Installing 79	Disk Space 23
Speech 79	Disk Space Left 116
Avaya TTS 78, 79	Domain 113
Avaya TTS CD 79	SMTP 58, 110
Avaya-Scansoft TTS	drop folder 113
compare 78	DTMF signalling received 105
В	E
Barred 101	email Accounts 96, 99
Breakout 96	eMail action 77
Broadcast 99, 126	email inbox 79 Email Messages
C	Content 76
call 78, 88, 89, 93, 96, 98, 99, 101, 105, 115, 117, 126	Email Protocol 65, 71
call archiving system 105	Select 108
Call Recording 105	Email Reading 78, 79
Call/VRL 105	Email Settings 74
Callback 98	Email TTS 79, 108
Centralized Voicemail Pro 126	e-mails 79
channel object	Enable Fax Sub-Addressing
speech 83 Channel Reservations 94, 101	Check 105
ChannelEvtSinkTracing 83	EnableConnectionTracing 83 EnableFunctionTracing 83
channels 83, 94, 101	EnableObjectTracing 83
client connects	EnableProxyTracing 83
server 83	EnableRefTracing 83
Client trying 82	EnableTagTracing 83
Client/Server Connection Timeout 105	EnableTracing 83
Collect Voicemail 98	Error Logging 146
COM 83	F
COM objects 83	fax board 105
compare	Fax Calls 105
Avaya-Scansoft TTS 78	Fax Sub-Addressing 105
Computer Management 82 Computer Management window 82	finished working 90
Configure connection to VRL directory 117	FireEventTracing 83
Configure Debug Filters window	First In-First 115
Close 83	G
configure outcalling 117	General Configuration/system 117
Confirm Call Flow Download Window 88	General Configuration/System Preferences 117
Confirm Voicemail Code 96, 99	General System Preferences
construct 83	Changing 105
ConstructorTracing 83	Generic Text
ContactStore 23	Installing 78 Speech 78
Continue Offline Message Window 88	generic Text To Speech 78
continue working 88	Generic TTS 78
Create Voicemail User Account 68	Group Mailbox Names 93

H	Mailbox Mode 99
H <group 98<="" name="" td=""><td>MailboxEvtSinkTracing 83</td></group>	MailboxEvtSinkTracing 83
HMain 98	Main Voicemail Pro Window 105, 107, 108, 115, 116, 117
Housekeeping 115	Making them Live 89
Housekeeping tab 115	MAPI
HTML 79	Password 108
	Profile 108
Hunt Group Voicement Indication 99	MAPI - Email Protocol 65, 71
Hunt Group Voicemail Indication 98	MAPI email 79, 84, 108
HuntGroup 99	MAPI Email Preferences
huntgroupconfiguration.htm 99	Setting 108
	MAPI Password
Identifier 58, 110, 113	leave 108
Identifying	MAPI Profile 108
Voicemail Server PC 94	MAPI-based Voicemail Email
Idle 115	Voicemail Pro 79
IIS 138	MAPIEventTracing 83
IMS Administration 83	Max 105
IMS Client Keys 83	
IMS email 115	Member Of 99
IMS Server 83	Message Deletion Times
IMS Tracing 83	Setting 115
Inactive 105	message housekeeping 115
Inactivity Timeout 105	Message Housekeeping Preferences 115
increase/decrease	Message Length 105
want 83	MessageEvtSinkTracing 83
increase/decrease reporting 83	MessageProcessingTracing 83
Inetpub/mailroot/Drop 154	Messages button
Installatio	use 98
ACM Gateway 146	messages/recordings 105
Installation	Microsoft .NET Framework 17
Compact 24	Microsoft 3rd 78
Installation Process 79	Microsoft IIS Web Server 23
Interact 84	Microsoft Sam 78
Intuity Mailbox User Guide	Microsoft SAPI 78
read 105	Microsoft Speech SDK 78
	Microsoft Speech SDK 5.1
IP Office feature key server 17 IP Office Manager application 93	use 78
IP Office Manager User 94, 126	Microsoft TTS 78
IP Office Manager User Guide 94	Microsoft Windows
	part 78
see 126 IP Office Mode 99	Mike 78
IP Office Settings 75	mins 105
IP Office Small Community Network 126	Mobile 96
	Multiple Language TTS Support 78
L	N
Languages	Names 89
Prompts 11	no Remote 86
Supported 11	Notify 88
Last In-First Out 115	0
Licenses	on outgoing calls 101
Feature Specific 12	on/off 96, 99
Port 12	outcalling options 117
Required 12	Outcalling Preferences
licenses exist 78	Setting 117
LIFO 115	Outcalling tab 117
Live 89, 90	Outcalling window
Local System Account 84	return 117
Log Preferences 83	Outlook Express 69
Logg	•
Errors 146	P
Logging 58, 110	Password
Out 89	MAPI 108
login 86	SMTP 58, 110
long outcalling 117	Peak Times 117
M	Ping 138
mail drop folder 113	Play Advice

Play Advice	Software 31, 78, 83, 86
check 105	SOFTWARE/Avaya/Integrated Messaging/Admin" 83
Port	SOFTWARE/Avaya/Integrated Messaging/Client" 83
SMTP 58, 110	Source 98
Prefix 98, 105	Source Numbers
Prime Times 117	View 98
Problems 84, 101, 105, 126	Speak Text Action 78, 79
produce	Specification
WAV file 78	PC 18
Profile 108	Specifying
program provides 84	MAPI 108
Prompts 11	start operating 105
Provide 83	steps appropriate 108
Provide tracing	Support Email Text
indicate 83	Speech 78
Provide tracing about 83	System Fax Number 105
Provides voicemail 126	System Preferences window 105
R	System Resources 101
Read Email 79	System Retry Settings 117
Reception 96	System Settings 115
Reception/Breakout 96	System Status Application
recognize	Open 101
PC 94	see 101
Recording Time 105, 116	System Times 117
REG_DWORD 83	System Tool 82
Registry 83	systems running 99
Release 83	Т
Remote Campaign Directory 107	tab gives
Remove 79	list 98
Resources 101	TCP/IP networking 22
Restrictions 126	telephone number including 98
Retries	Telnet 138
Number 117	Testing
Retry Interval 117	VPNM 154
Root.vmp 89, 107	VPNM Setup 154
Run DbgView.exe 83	Text To Speech 78, 79, 108
Russian 78	TimeAndTrace 83
\$	TOC 117
SAPI 78	tracing
SAPI5 TTS 78	MAPI 83
ScanSoft 78, 79	Trusted Source 98
ScanSoft TTS 78	TTS 78
SCN 126	choose 78 includes 78
Selecting Mailboxes 78	license 79
Send messages via email 77	start 79
Sender 108	TTS Usages 78
Server	TTY 11
SMTP 58, 110	U
Server Name 86	_
Server PC 78, 83, 105	UMSEventTracing 83
Set voicemail email 96	unchecking
set Voicemail Email Mode 96	Voicemail On 96
Simple Mail Transfer Protocol 116	un-checking
Simple Network Management Protocol 116	Voicemail On 99
Simplified Chinese 78	Under Log 84
Simultaneous 78 Small Community Network 126	Unit Name/IP Address 86 Up Text To Speech
SMTP 58, 110	Setting 79
SMTP - Email Protocol 65, 71	Updates In 99
SMTP Receiver 113	Upgrade 79
SMTP Server	Voicemail Pro 31
Settings 74	US 78
SNMP 116	User
SNMP Alarms	SMTP 58, 110
Setting 116	User Source Numbers
-	

User Source Numbers	Locate 84
Configuring 98	set 84
userconfiguration.htm 96	Voicemail Pro Software 78
UserID 82	Voicemail Pro TTS 78
Using IP Office Manager 78, 79	Voicemail Pro User Log 82
Using Voicemail 98	Voicemail Pro window 105, 107, 108, 115, 116, 117
utilisation	Voicemail Professional Server 84
view 101	voicemail ringback 98
V	Check 96
Version 3.2 31	Voicemail Ringback Number 98
	Voicemail Server Directory 107
VM Pro 78, 79 VM Pro Generic TTS 78	Voicemail Server PC
VM Pro ScanSoft TTS 78	Identifying 94
VM Pro TTS 79	Voicemail Server Speech Directory 107
	voicemail service 30, 81
VM Server Specific 83 Vmdata.mdb 89	Voicemail System 107
vmp file 89	Voicemail System Files 107
VMPro TTS 78	Voicemail Trusted Source Access 98
	Voicemail Type 94
VMPro User Log 82 VMS API 83	Line 126
	Set 126
VmsNotifyTracing 83 Voice Recording Library 23	Voicemail User Account 79
Voice Recording Library 23 Voicemail	Create 68
Email settings 75	VoIP 126
Voicemail Channel Reservations 94, 101	VPNM 148
Voicemail Code 96, 98, 99	add 120, 151
Voicemail Console 84	delete 120, 151
Voicemail Destination	Select 120, 151
Leave 94	test 154
Voicemail Domain Account	VPNM Preferences 154
Creating 61	VPNM Requirements 149
Voicemail Email 78, 79, 96, 99	VPNM Setup
MAPI 108	Testing 154
Voicemail Email Mode	VPNM Support 150
Select 96, 99	VPNMreceiver Service 154
Voicemail Email Reading 79, 96	VRL 105
Voicemail Help 96, 99	VRL Record Length 105
Voicemail IP Address 94	W
Voicemail Lite 96, 98, 99	Waiting Indication 98
Voicemail Pro 31	WAN 86, 88
Voicemail Lite Installation Manual 99	Windows 2000 84
Voicemail Lite Manual 96	Wordpad 83
Voicemail Lite/Pro 94	Work 89, 117
Voicemail Mailbox 79, 105	Work Group Member
Voicemail Message 96, 99	Email 68
Voicemail On	Workstation 86
unchecking 96	www.microsoft.com/speech/download/sdk51 78
un-checking 99	X
Voicemail Password	XP 84
match 105	Υ 04
VoiceMail Pro	-
System Overview 9	Yes - Select 88
VoiceMail Pro Call Flow	
Start 30, 81	
Voicemail Pro Client	
Close 90	
run 86	
use 105	
Voicemail Pro Client window 86	
Voicemail Pro housekeeping 115	
Voicemail Pro Installation 78	
Voicemail Pro installation includes 78	
Voicemail Pro Login window 86	
Voicemail Pro Server 78, 89, 116, 126, 154	

connect 86 Voicemail Pro Service 108

Template: 29th August 2013

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

© 2014 Avaya Inc. All rights reserved.