

IP Office 1616i Phone Info

Starting 1.3.3 release the default password now is “**CRAFT**”, in the previous releases it was **empty**.

To access the “Local Procedures” the user should enter the password and then “Local Procedures”.

For example if there is a phone with a default password and we would like to configure the phone by the “ADDR” procedure then the full command will be:

MUTE, CRAFT ADDR #

Press and release the MUTE Button and then dial **6883 27238 2338 #**

MUTE, CRAFT VIEW #

Press and release the MUTE Button and then dial **6883 27238 8439 #**

MUTE, CRAFT RESET #

Press and release the MUTE Button and then dial **6883 27238 73738 #**

MUTE, CRAFT CLEAR #

Press and release the MUTE Button and then dial **6883 27238 25327 #**

MUTE, CRAFT <every old command that ever worked> #

Avayas Official statement:

Starting 1.3.3 release the default password now is “CRAFT”, in the previous releases it was empty. Now to access to the “Local Procedures” you should enter the password, then “Local Procedures”.

For example there is a phone with default password and we would like to configure the phone by “ADDR” procedure

then the full command will be: “Mute”, “C”, “R”, “A”, “F”, “T”, “A”, “D”, “D”, “R”, “#”.