

Avaya 1616 IP Phone

How to turn off Automatic Gain Control

Telquest Tech Support

Leave the handset in the cradle

Press the **Menu** button

Press the Down Arrow on the navigation disk until you see “**Advanced**” in the LCD

Now press the softkey below “**Select**”

Press the Down Arrow on the navigation disk until you see “**Automatic Gain Control**” in the LCD

Now press the softkey below “**Select**”

You will see “**Handset**” in the LCD

If it shows “<**On**>” in the LCD, press the “**On/Off**” softkey so that it changes to “<**Off**>”

Press the Down Arrow on the navigation disk and do the same for the “**Headset**” and “**Speaker**”

When complete, press “**Done**” until you see “**Exit**”

Then press “**Exit**”

Automatic Gain Control is turned off.