

Panasonic KXTA-824 How to Turn off Flashing on the FWD/DND Button Telquest Tech Support

The flashing FWD/DND button indicates that the phone has Call Forward Busy/No Answer activated.

It is usually set to go to the Voice Mail on Extension 107 or Extension 115 depending on where the VM is installed.

To stop the LED from flashing:

Go to the phone that has the FWD/DND LED flashing.

Leave the handset in the cradle.

Press the Intercom button.

Dial 716# (716 POUND)

You will hear a confirmation tone and the LED will stop flashing.