

Panasonic KX- TDA, TDE & NCP Systems Hot Line Dialler Telquest Tech Support

This feature will dial a programmed telephone number when the handset is raised.


It can also be used to simply connect you to an Outside Line when the handset is raised.

 



The example below will connect you to Outside Line 3 when the handset is raised.


Do the KSU programming on Pages 2 and 3 first. Then Enter the Code and Activate the feature.

PT/SLT/PS


Enter the Code to access Outside Line 3



Off-hook.

 

 


 Enter *740.


Enter 2.

Dial 803



Enter #.

 
 



C.Tone


On-hook.

PT/SLT/PS


Activate the feature



Off-hook.





 Enter *740.

1


 Set




 

C.Tone


On-hook.

PT/SLT/PS


De-Activate the feature



Off-hook.





 Enter *740.

0

 Cancel



C.Tone


On-hook.

Set the amount of time that passes until the Hot Line Dialler starts dialing.

The setting below is set to 2 seconds. (You may need to change this to 1 second. See Page 3 Note:)


You will hear 2 seconds of Intercom Dial Tone before the outside line is connected.

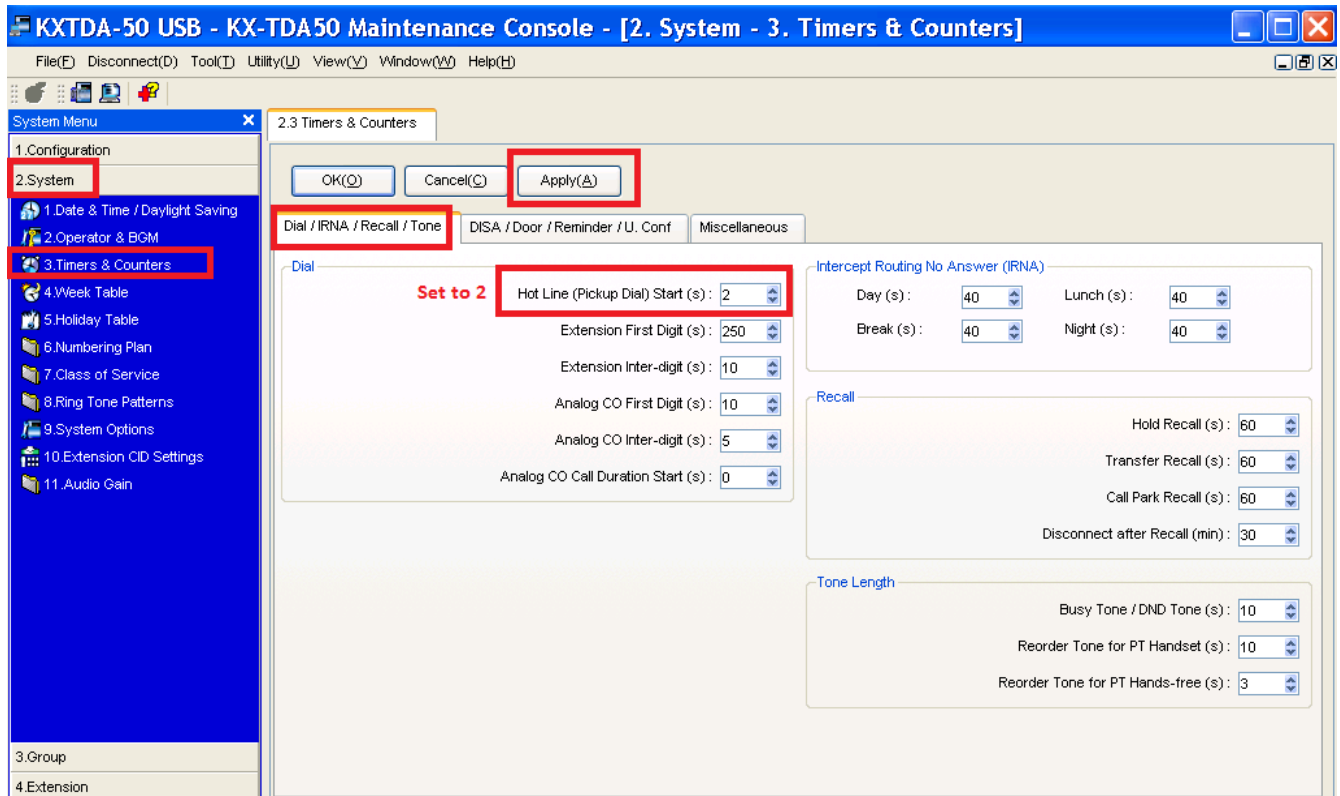

Put Outside Line 3 in Trunk Group 3.

Trunk Group 3 is accessed by pressing the Intercom button and dialing 803.

We are using the Hot Line feature to automatically dial 803 when the handset on the phone or Fax is raised.

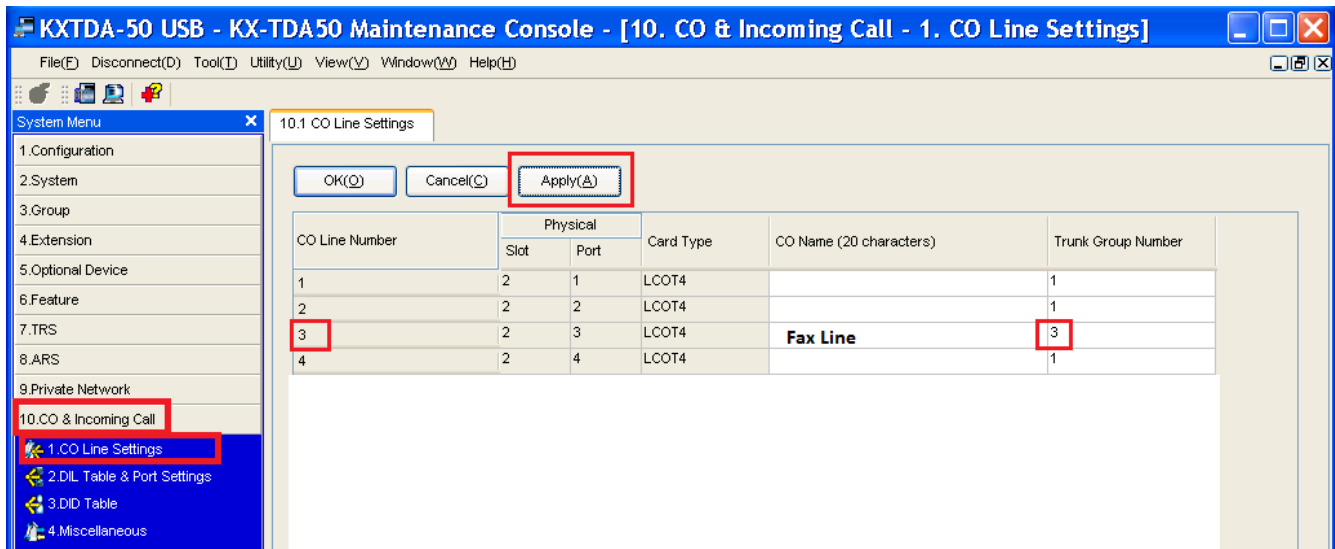

Operation:

Raise the handset on the phone and you will hear Intercom Dial Tone for 2 seconds.

Then the Dial Tone will switch to outside line 3.

You can then dial your number.

If your Fax Machine does not have a handset, press the PAUSE button on the Fax Machine first and then dial the telephone number that you want to call.

Then press the SEND/Dial/Call button on the Fax Machine.

If you cannot perform the steps on Page 1 with your Fax Machine, you may need to plug a standard Single Line Telephone into the Fax Jack on the wall and use it to set the Feature.

Note:

If the call does not go through, change the 2 to a 1 on Page 2 and test again.