

## **Panasonic KX=TDA-50 Key Service Unit Activate External Music Input Telquest Tech Support**

By default, the KX-TDA-50 telephone System uses the Internal Music player.

You can change it to use an External player.

### **Programming procedure:**

Go to Extension 101

Leave the handset in the cradle

Press the **PROG** button below the LCD

LCD says **Program No?->**

Dial \* # 1234 (Star Pound 1 2 3 4)

LCD says **Sys-Pgm No?->**

Dial 711

Press the **ENTER** button

The LCD will say

**711**

**Music On Hold**

Press the **ENTER** button

Press the **SEL+** button until you see **BGM1** in the LCD


Press the **Auto Dial/Store** button

Pick up and hang up the handset

**Be sure to use the correct type of Plug.**


**It should be the same on both ends of your cord.**

**If you use the Incorrect Plug, you may only get 1 channel of the players audio.**

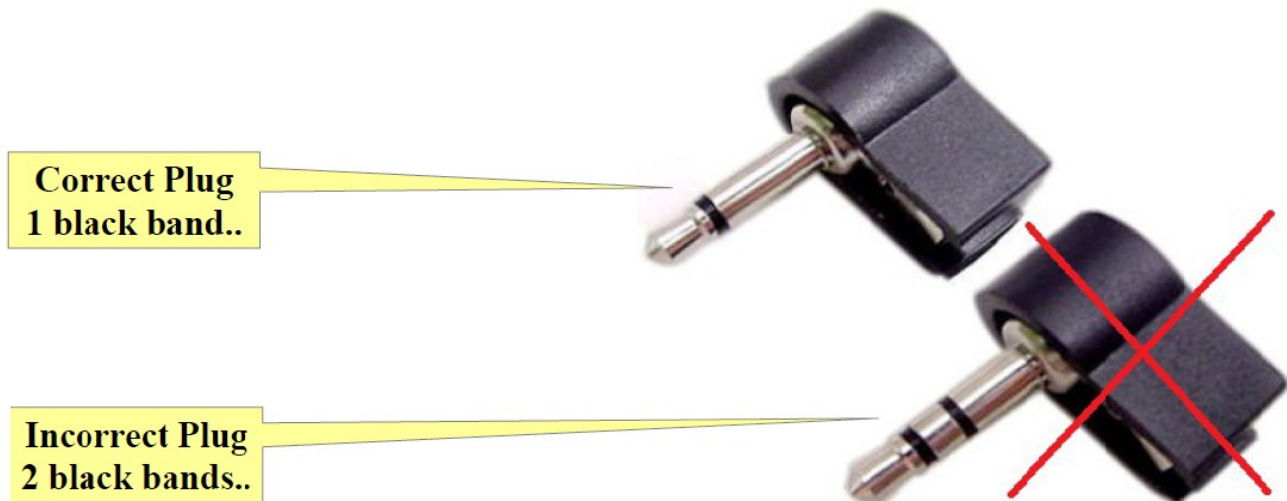

---

**Here is where you plug it into the KX-TDA-50 Telephone System**

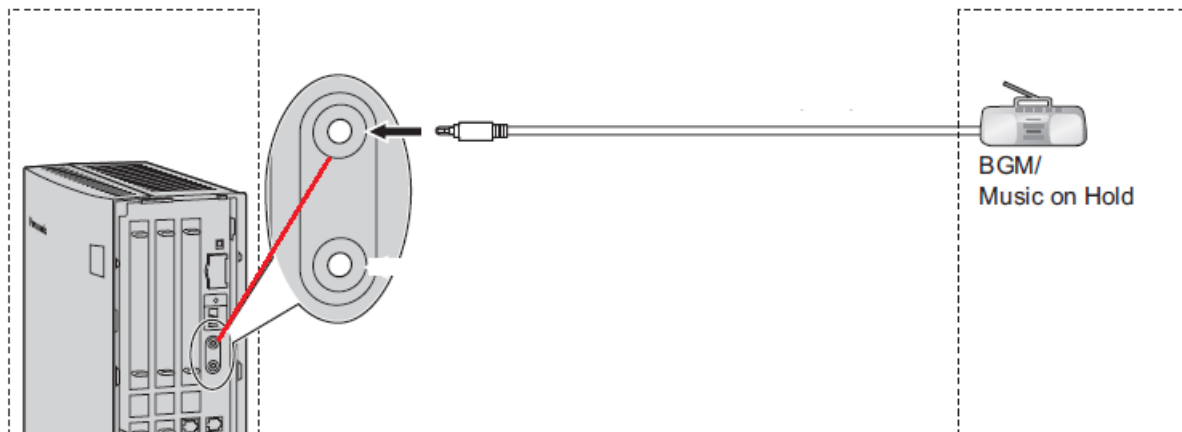

**Now your external Played should be played to callers that are On Hold.**