


Panasonic KX-NS700

Setting ARS to Select CO Lines Based on Number Dialed

Telquest Tech Support

Assign Lines to Trunk Groups.
Put any Unused Lines in Trunk Group 64.

1. Click here...

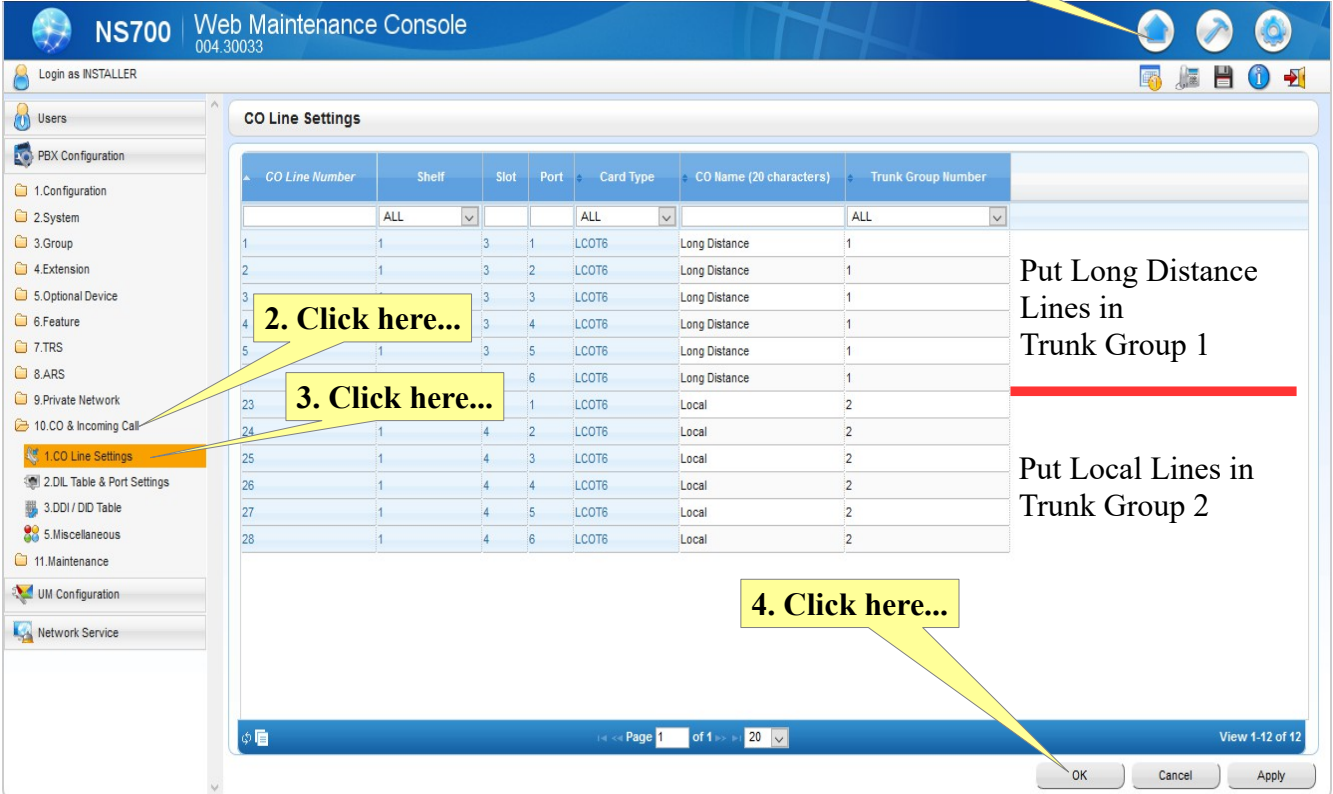

2. Click here...

3. Click here...

4. Click here...

Put Long Distance Lines in Trunk Group 1

Put Local Lines in Trunk Group 2

CO Line Number	Shelf	Slot	Port	Card Type	CO Name (20 characters)	Trunk Group Number
1	1	3	1	LCOT6	Long Distance	1
2	1	3	2	LCOT6	Long Distance	1
3	1	3	3	LCOT6	Long Distance	1
4	1	3	4	LCOT6	Long Distance	1
5	1	3	5	LCOT6	Long Distance	1
23	1	6	1	LCOT6	Local	2
24	1	4	2	LCOT6	Local	2
25	1	4	3	LCOT6	Local	2
26	1	4	4	LCOT6	Local	2
27	1	4	5	LCOT6	Local	2
28	1	4	6	LCOT6	Local	2

Page 1 of 1

View 1-12 of 12

OK Cancel Apply

Page 2

Set the ARS Mode

NS700 Web Maintenance Console
004.30033

Login as INSTALLER

System Setting

ARS System Setting

ARS Mode: On for Any CO Access Oper

Mode When Any Carrier is not programmed for the Dial: Disconnect

1. Click here... (points to '1. System Setting' in the sidebar)

2. Click here... (points to 'ARS System Setting' in the sidebar)

3. Set like this... (points to the 'ARS Mode' dropdown)

OK Cancel Apply

You are still on the same Page....

Set the Leading Digit to go to a Routing Number

NS700 Web Maintenance Console
004.30033

Login as INSTALLER

Leading Number

No.	Leading Number (16 digits)	Additional Number of Digits	Routing Plan Number
1	1	0	1
2	2	0	2
3	3	0	2
4	4	0	2
5	5	0	2
6	6	0	2
7	7	0	2
8	8	0	2
9	9	0	2

Set Like This (points to row 1)

Set Like This (points to row 2)

1. Click here... (points to '2. Leading Number' in the sidebar)

Page 1 of 50 20 View 1-20 of 1000

OK Cancel Apply

You are still on the same Page...
Assign Carriers

Carrier

ON
OFF

Carrier TRG Priority TRG 01 - 16 TRG 17 - 32 TRG 33 - 48 TRG 49 - 64 Authorization Code for Tenant

Carrier	Carrier Name (20 characters)	Removed Number of Digits	Modify Command	CLIP Table No.	Carrier Access Code (32 digits)
1	Vonage VOIP	0	CH	1	
2	Local Calls	0	CH	1	
3	Carrier 03	0	CH	1	
4	Carrier 04	0	CH	1	
5	Carrier 05	0		1	
6	Carrier 06	0			
7	Carrier 07	0			
8	Carrier 08	0	CH	1	
9	Carrier 09	0	CH	1	
10	Carrier 10	0	CH	1	
11	Carrier 11	0	CH	1	
12	Carrier 12	0	CH	1	
13	Carrier 13	0	CH	1	

Page 1 of 3 View 1-20 of 48

OK Cancel Apply

You are still on the same Page...

Carrier

ON
OFF

Carrier TRG Priority TRG 01 - 16 TRG 17 - 32 TRG 33 - 48 TRG 49 - 64 Authorization Code for Tenant

Carrier	TRG 01 for Carrier	TRG 02 for Carrier	TRG 03 for Carrier	TRG 04 for Carrier	TRG 05 for Carrier	TRG 06 for Carrier	TRG 07 for Carrier	TRG 08 for Carrier	TRG 09 for Carrier	TRG 10 for Carrier	TRG 11 for Carrier
1											
2											
3											
4											
5											
6											
7											
8											
9											
10											
11											
12											

Page 1 of 3 View 1-20 of 48

OK Cancel Apply

Plan:

Note: The Dial 9 is not examined by the ARS.

Note:

Your Local CO Lines must not allow 10 digit dialing.

Example: 212 555-1212

Long Distance CO Lines are in Trunk Group 1

When a user dials 9 and then the first number is a 1 (Long Distance), they will be sent out over a Long Distance Analog CO Line.

Local CO Lines are in Trunk Group 2

When a user dials 9 and then the first number is between 2 and 9 (Local Call), they will be sent out over the Local CO Lines.

Long Distance and Local Lines can be either regular Analog CO Lines or SIP Trunks.

If you press a button associated with a CO Line on a Panasonic multi-line telephone you do not need to dial 9.

Your call will be directed to the correct CO Line when you begin to dial.