



Panasonic KX-NS700 Set KSU For External Music on Hold Telquest Tech Support

If you connecting an External Music on Hold Player, do the following:

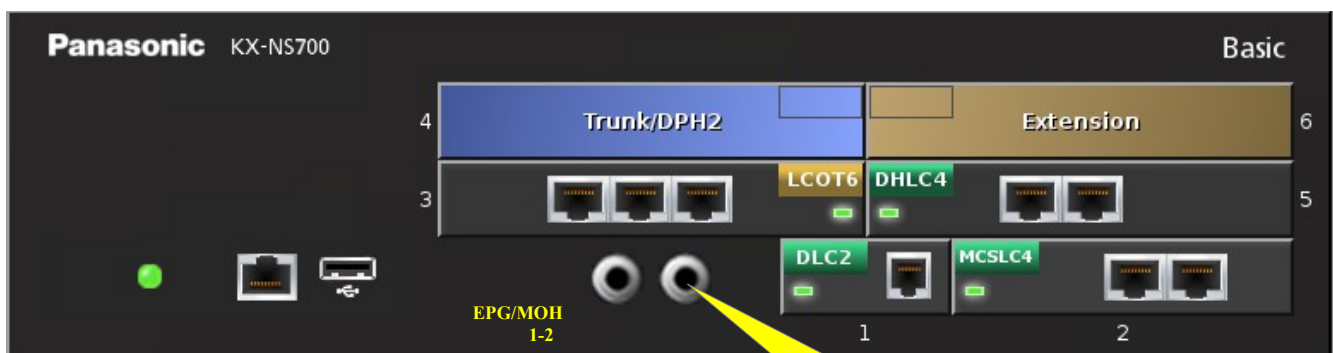

You should use a
Mono Type Plug.

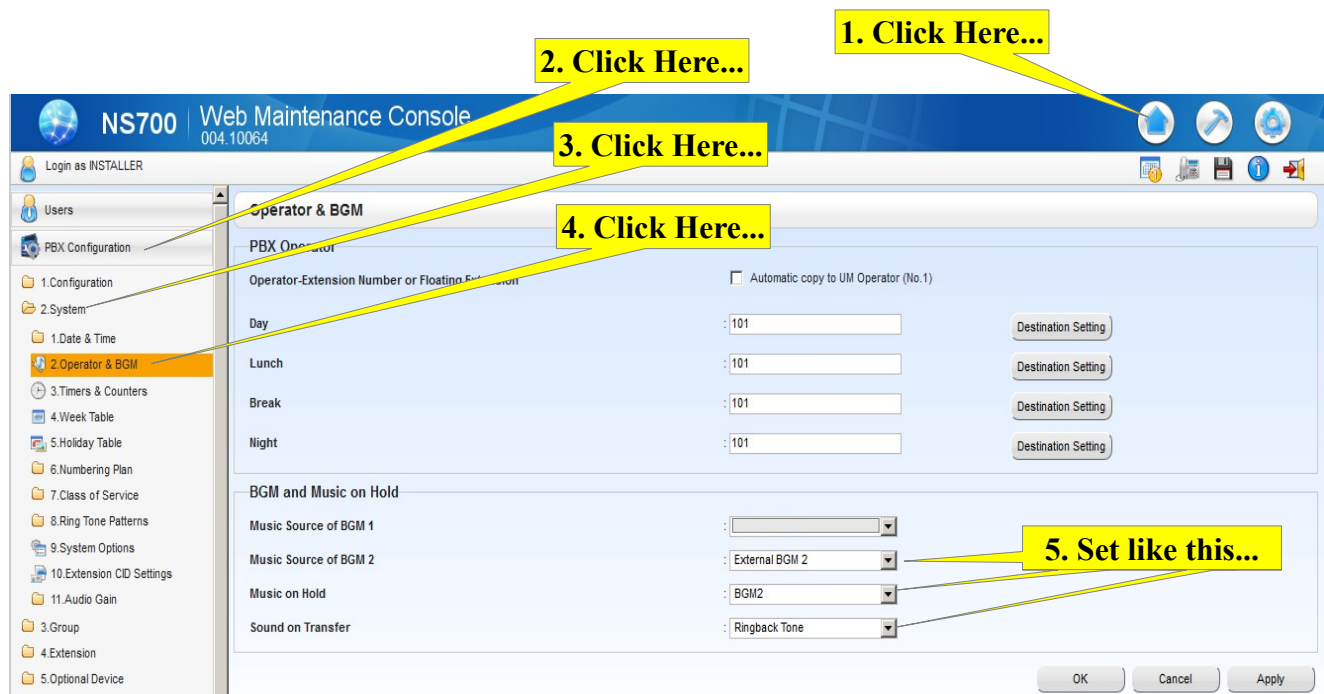

Plug Music Player in here...

A Stereo Type Plug
MAY work.



With a Stereo Plug you may only get one channel of the Music