

## **Panasonic NS-700 Factory Default NT Type Phones Telquest Tech Support**

You can Reset/Default a NT type phone back to its original Factory (Out of box) Settings.

This will erase all settings in the phone and you will need to re-program the phone to work with the KSU.

If you make any mistakes, just power the phone down for about 30 seconds and start over.

The phone must first be powered down completely for about 30 seconds.

Be sure the phone is connected to the Data Network.

Now, power it up.

When you see the word **SETUP** in the LCD of the phone, press the button directly below it.

Now you will see the word **NETWORK** in the LCD.

Press the **Down Arrow** on the navigation ring until you see **MAINTENANCE** in the LCD.

Press the button below the word **ENTER**

Now, you will see the word **NEXT** in the LCD of the phone, press the button directly below it until you see the words **Setting initialize** in the LCD.

Press the button below the word **ENTER**

You will see **Enter Password**.

Enter **7262** and then press the **ENTER** button.

You will see **Setting initialize?** In the LCD.

Press the **ENTER** button.

The phone will beep and take about 1 minute to come back on.

Now you can press the **SETUP** button and re-program the phone.