

Page Access Via CO Lines

This document is intended to provide a means of accessing the system page feature from locations off premise of the PBX. (e.g. Remote PBX's or from a CO Line calling party when answered by Auto-Attendant). If you have any questions or challenges contact Jenne Technical Support at (800) 422-6191.

Requirements:

Hardware:

- 1 Analog COL Port
- 1 Analog SLT Port

Install:

Connect SLT Port to COL Port

Program:

- A. 10. CO & Incoming Call – 1. CO Line Settings
- B. 4. Extension – 1. Extension Settings – Option 2
- C. 1. Configuration – 2. PS Station
- D. 4. Extension – 2. Portable Station – 1. Extension Settings
- E. 2 System – 7. Class of Service – 1. COS Settings – CO & SMDR
- F. 4. Extension – 2. Portable Station – 2. FWD/DND

Procedure:

- A. Program the Analog COL Port in a TRK GRP as the only member.
(e.g. CO Line Number 33 in TRK GRP 33)

10.1 CO Line Settings						
<div> <input type="button" value="OK(O)"/> <input type="button" value="Cancel(C)"/> <input type="button" value="Apply(A)"/> </div>						
	CO Line Number	Shelf	Slot	Port	CO Name (20 characters)	Trunk Group Number
-	33	Physical	1	1		33

- B. Program the SLT Port for Pick Dial Set to On and Pick Dial No. to a Paging Group feature code *33.
(e.g. XDP4 330 Pickup Dial Set On with Pickup Dial No. *33)

4.1.1 Extension Settings

OK(O) Cancel(C) Apply(A) Extension Group Table(U) CL

Main	Intercept Destination	Intercept No Answer Time	ISDN CLIP	Option 1	Option 2	Option 3	Option 4	Option	
-	No.	Slot	Port	Extension Number	Extension Name (20 characters)	Manual C. Waiting for Extension Call	Automatic C. Waiting	Pickup Dial Set	Pickup Dial No.
	1	1	1	101		BSS	On	Off	
	2	1	2	102		BSS	On	Off	
	3	1	3	103		BSS	On	Off	
	4	1	4	104		BSS	On	Off	
	5	1	XDP1	105		BSS	On	Off	
	6	1	XDP2	106		BSS	On	Off	
	7	1	XDP3	107		BSS	On	Off	
	8	1	XDP4	330		BSS	On	On	*33

- C. Program a Portable Station number and apply. (Do Not Register)
(e.g. 333 is assign as a Virtual Portable Station)

1.2 Portable Station

OK(O) Cancel(C) Apply(A)

Registration(R) De-registration(D) Forced De-registration(F)

Personal Identification Number 1234

1-28

Index	Extension No.	Extension Name	Status
1	333		None

- D. Program the Portable Station to COS 33.
(e.g. Extension 333 is assigned to COS 33)

4.2.1 Extension Settings

OK(O) Cancel(C) Apply(A) Extension Group T

Main Intercept Destination Intercept No Answer Time ISDN CLIP Option 1 Option 2 Option 3

No.	Extension Number	Extension Name (20 characters)	Property	Extension Group	COS
1	333		Portable Station	1	33

- E. Program the COS of the PS with Call Forward to CO set to Enable.
(e.g. Assign the COS No. 33 to Enable Call Forward to CO)

2.7.1 COS Settings

OK(O) Cancel(C) Apply(A)

TRS CO & SMDR Extension Feature Programming & Manager Optional Device & Other Extension

COS No.	COS Name	Extension-CO Line Call Duration Limit	Transfer to CO	Call Forward to CO
33		Disable	Enable	Enable

- F. Program the Portable Station as FWD All to TRK GRP 33 and Pause then dial 01 for Page Group 1.
(e.g. Extension Number 333 Forward All to 833P01)

4.2.2 FWD/DND

OK(O) Cancel(C) Apply(A) Copy to(T)

Extension Number / Name 333 /

Forward / DND

For external calls Always (All) 833P01

For internal calls Always (All) 833P01

☒ For both external calls and internal calls

Summary:

When the PS number is called it will forward to the Trunk Group. The SLT Port connected to the COL Port will go off hook and dial the group number 01.

You can create more Portable Stations to access different page groups by changing the two digit Page Group number in 4.2.2.

Disclaimer: This is not an officially supported feature of the Panasonic systems. This procedure was developed by field technicians to facilitate access to the system page feature. This procedure was tested on Version 5.0 and may or may not work on different versions of Panasonic systems.

Your success with this procedure depends on you, Think like a Computer Scientist, find a solution to the challenge.