

## Panasonic KX-NS700 Page External Set Up Telquest Tech Support

There are up to 2 External Page Ports available.

By default Jack 1 is External Pager 1 and Jack 2 is External Music On Hold

Jack 2 can be programmed to be External Pager 2, but you loose the External Music On Hold.

**2. Click here...**

**1. Click here...**

**Note: I added the red box...**

**3. Mouse Over This area...**

**4. Click here...**

**Panasonic KX-NS700 Web Maintenance Console**

004.30033

Login as INSTALLER

Users

PBX Configuration

1. Configuration

1 Slot

2. Portable Station

3. Option

4. Clock Priority

5. DSP Resources

2. System

3. Group

4. Extension

5. Optional Device

6. Feature

7. TRS

8. ARS

9. Private Network

10. CO & Incoming Call

11. Maintenance

UM Configuration

Network Service

Slot

System Property

Activation Key

IP Phone Registration

VoIP Property

UM Property

Trunk Slot Card

LCOT6
PR23
DPH2

Extension Slot Card

MCSLC16
MCSLC8
DLC16
DLC8
DHLC4

Panasonic KX-NS700 Basic

4

3

6

5

1

2

LCOT6

LCOT6

DHLC4

DLC2

MCSLC4



Extension

Virtual Slot

Port Property


The screen below will appear next.

Now you can select what option each Mini Jack should be.

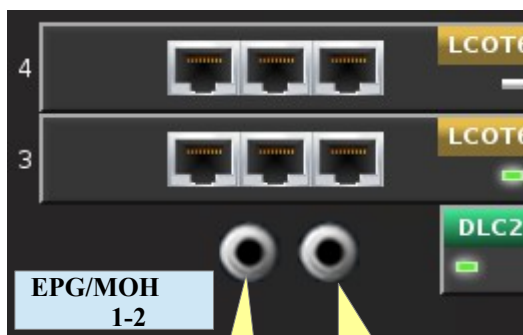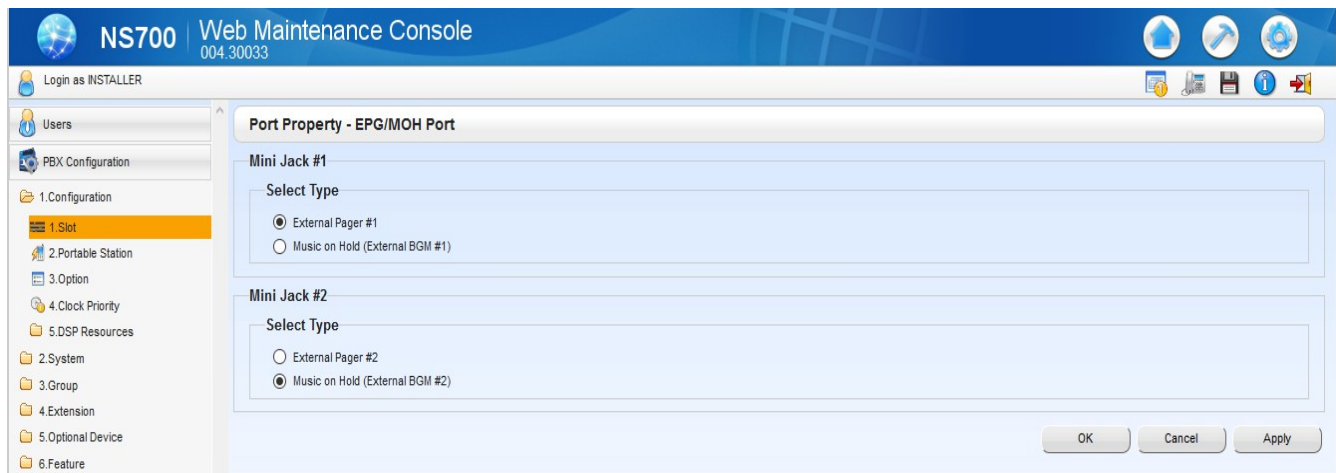

**Note:**  
**You MUST use a Mono, 3.5mm Plug**  
**as shown below.**

**A Stereo Plug will not work...**

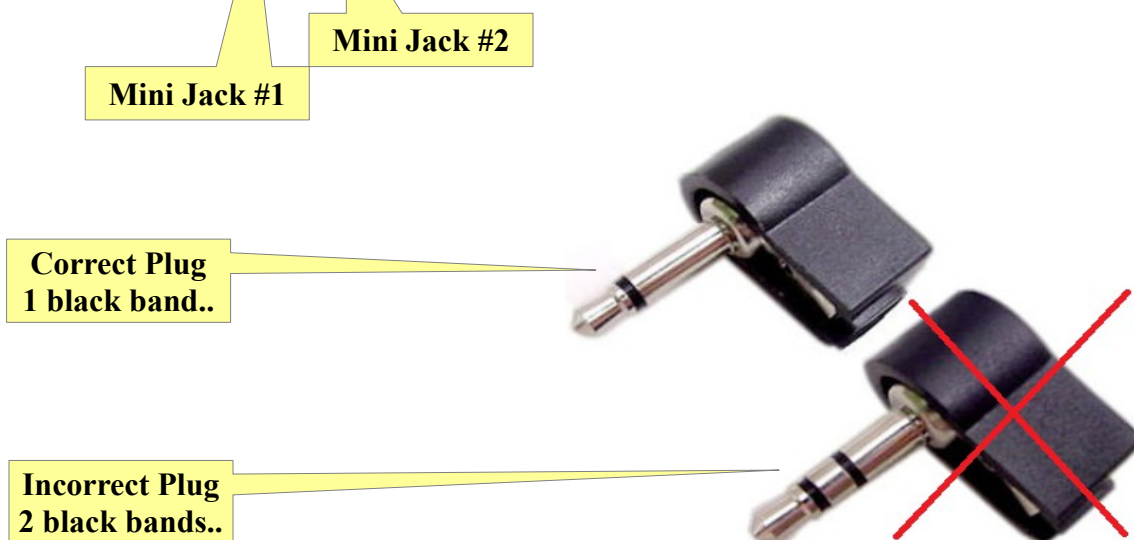

## **Page 3**

### **Operation**

**You can press the Intercom button and dial \*3322 to Page out over External Pager 1 & Pager 2 together**

**You can press the Intercom button and dial \*3301 to Page out over External Pager 1 & Pager 2 together and have all the idle phones in the system also receive the Page.**