

## **Panasonic NS-700 Program an NT Type phone**

**Check that DHCP is On:**

**Power phone on**

**When you see SETUP in the LCD, Press the button below SETUP**

**Use the navigation disk and select Network**

**Press the button below ENTER**

**Look at the top of the LCD and be sure DHCP is Enable.  
If it isn't, use the Navigation Disk to select Enable.**

**Press the button below EXIT**

**Press the button below EXIT**

**If you see "Data's changed!" STORE?  
Select YES**

-----  
**Program the phone to reach the PBX**

**Power the phone down (by unplugging it from the wall, for 15 seconds.**

**Then, Power the phone back on**

**When you see SETUP in the LCD, press the button below SETUP**

**Use the Navigation Disk and select PBX**

**Press the button below ENTER**

**Select PBX IP Address**

**Press the button below ENTER**

**Select Primary PBX**

**Press the button below ENTER**

**Enter this IP Address 192.168.2.159**

**Page 2**

**Press the button below ENTER**

**Press the button below EXIT**

**Press the button below EXIT**

**Press the button below EXIT**

**The phone will now try to log into your PBX.**