

**Panasonic Telephone Systems
Removing a Card From The KSU
Telquest Tech Support**

**Using the Panasonic Programming Tool.
Put the card to be removed OUS.
Then, Delete the card.**

Save the Configuration to the SD Card.

Power down the KSU.

Remove the card physically.

Add the new card

Power the KSU back up.

**The KSU will now see that the old card is no longer there
physically.**

The new card will appear in the programming screen.