
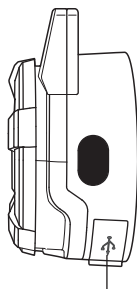







20S EVO Quick Start Guide

ENGLISH

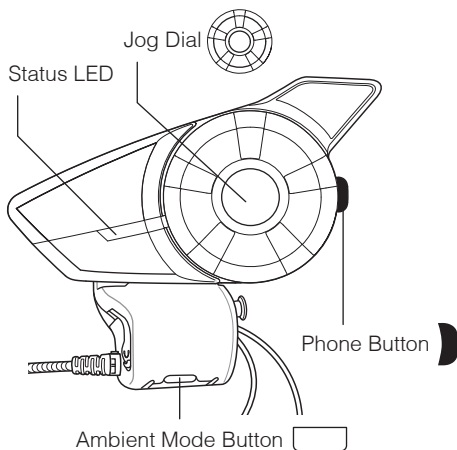

DC Power Charging &
Firmware Upgrade Port

Installation

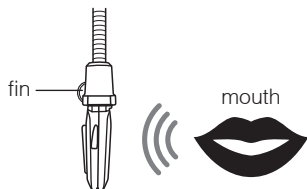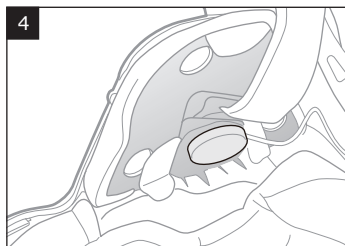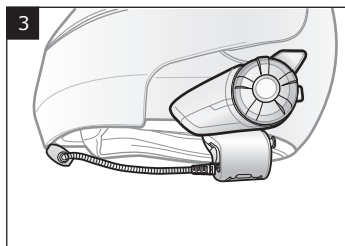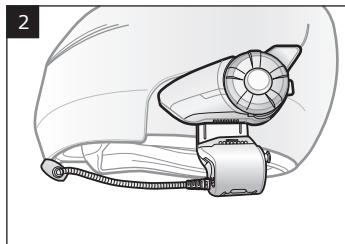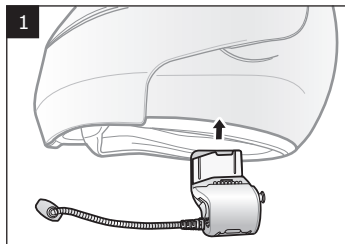

Microphone Direction

 
Sena Utility App

- Download
 - Android: Google Play Store > **Sena Utility**
 - iOS: App Store > **Sena Utility**


Sena Device Manager

The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from **sena.com**.


Button Operation



Power On/Off

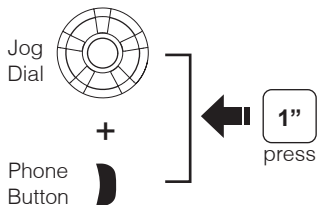

Volume Adjustment

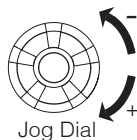

Ambient Mode




Bluetooth Pairing Phone, MP3 and GPS



Status LED ■ ■ ■ ■

Select **Sena 20S**

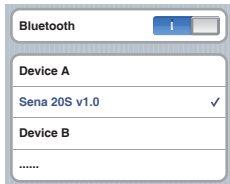

Enter 0 0 0 0 PIN

Mobile Phone



Answer



Phone Button



Tap



End



Phone Button



Tap



Voice Dial



Phone Button



Tap



Speed Dial



Phone Button



Tap

Double Tap



Reject



Jog Dial



2"

press



Call Transfer




Phone Button




2"

press

Music

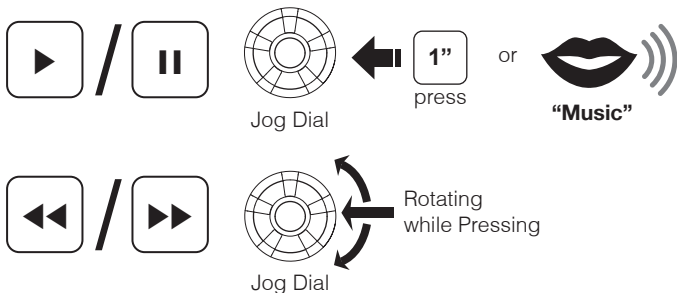

Battery Check

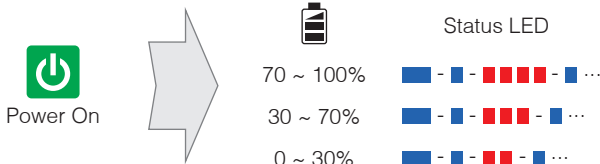


Configuration Menu




There is **Universal Intercom Pairing** in the Configuration Menu.

Normal Pairing Intercom

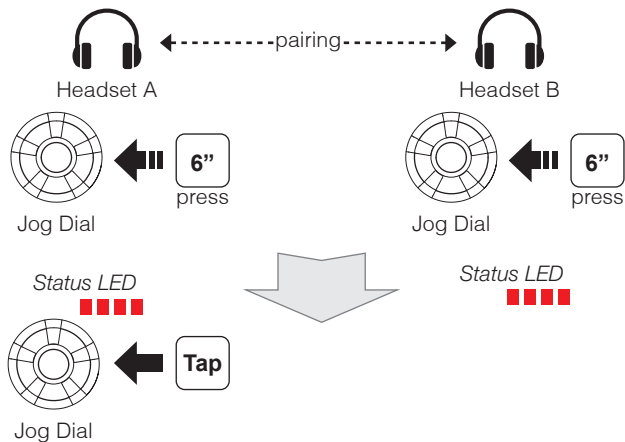

Start / End Intercom

 

1st Friend




2nd Friend



3rd Friend and above



3rd ~ 9th
Friend, Cancel

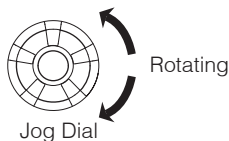

Jog Dial



Jog Dial



Start / End Group Intercom



Ambient Mode
Button



press

Voice Command



Voice Command	Function
“Music”	Music play/pause
“Intercom [one, two, ... , nine]”	Start/End each intercom
“Speed dial [one, two, three]”	Speed dialing

**A full version of the manual is downloadable at
www.sena.com.**

SENA



SENA Technologies, Inc.

Customer Support: sena.com