




Panasonic NS-700 Email Trace Telquest Tech Support

You can use the options below to Trace an outbound Email.

This is helpful when trying to determine why a user does not receive an Email from the UCM (Voice Mail)

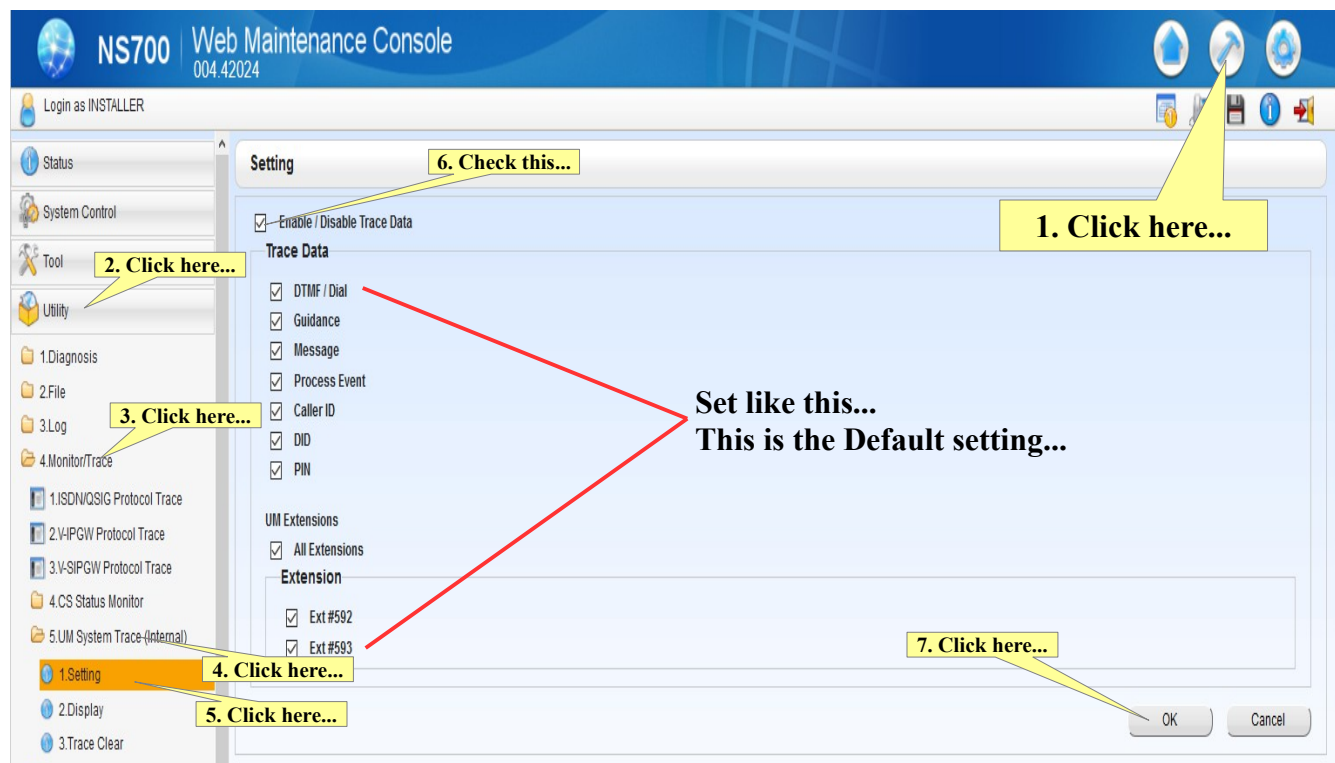

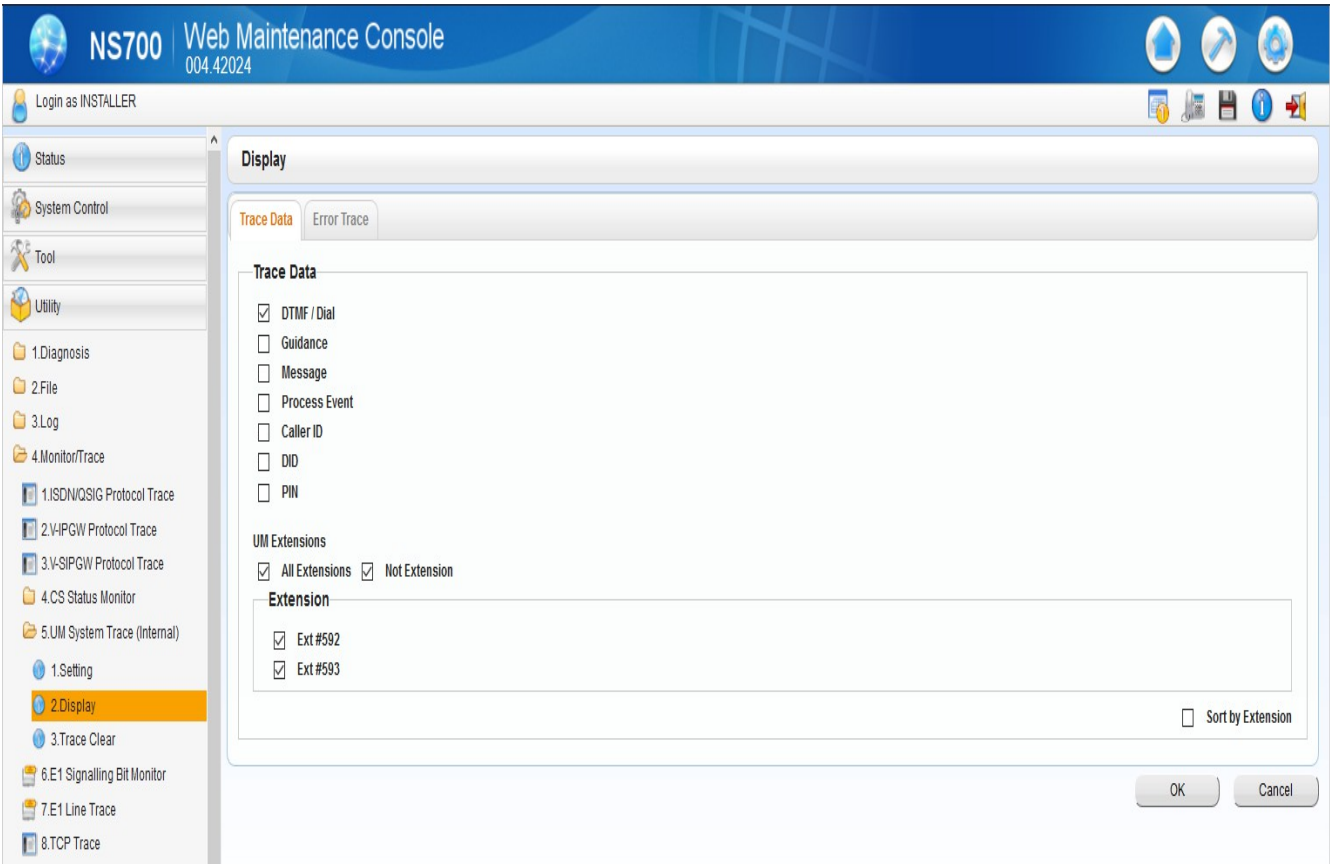

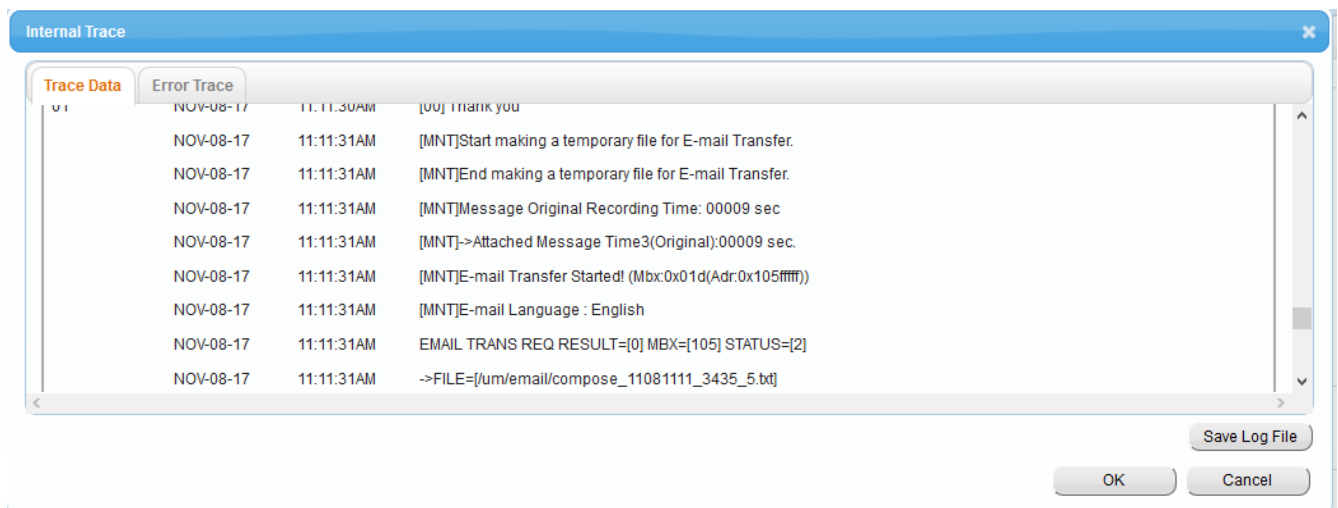

NOV-08-17 11:11:31AM [MNT]Start making a temporary file for E-mail Transfer.

NOV-08-17 11:11:31AM [MNT]End making a temporary file for E-mail Transfer.

NOV-08-17 11:11:31AM [MNT]Message Original Recording Time: 00009 sec

NOV-08-17 11:11:31AM [MNT]->Attached Message Time3(Original):00009 sec.

NOV-08-17 11:11:31AM [MNT]E-mail Transfer Started! (Mbx:0x01d(Adr:0x105ffff))

NOV-08-17 11:11:31AM [MNT]E-mail Language : English

NOV-08-17 11:11:31AM EMAIL TRANS REQ RESULT=[0] MBX=[105] STATUS=[2]

NOV-08-17 11:11:31AM ->FILE=[/um/email/compose_11081111_3435_5.txt]

NOV-08-17 11:11:31AM [MNT]E-mail Transfer Completed!(Mbx:0x01d(Adr:0x105ffff))